

## SB-5608

8x2 HDMI Routing Switcher w/ RS-232 w/ Remote V1.3



### IMPORTANT WARRANTY INFORMATION.

*If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.*



## SAFETY INFORMATION



1. To ensure the best results from this product, please read this manual and all other documentation before operating your equipment. Retain all documentation for future reference.
2. Follow all instructions printed on unit chassis for proper operation.
3. To reduce the risk of fire, do not spill water or other liquids into or on the unit, or operate the unit while standing in liquid.
4. Make sure power outlets conform to the power requirements listed on the back of the unit. Keep unit protected from rain, water and excessive moisture.
5. Do not attempt to clean the unit with chemical solvents or aerosol cleaners, as this may damage the unit. Dust with a clean dry cloth.
6. Do not use the unit if the electrical power cord is frayed or broken. The power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
7. Do not force switched or external connections in any way. They should all connect easily, without needing to be forced.
8. Always operate the unit with the AC ground wire connected to the electrical system ground. Precautions should be taken so that the means of grounding of a piece of equipment is not defeated.
9. AC voltage must be correct and the same as that printed on the rear of the unit. Damage caused by connection to improper AC voltage is not covered by any warranty.
10. Turn power off and disconnect unit from AC current before making connections.
11. Never hold a power switch in the "ON" position.
12. This unit should be installed in a cool dry place, away from sources of excessive heat, vibration, dust, moisture and cold. Do not use the unit near stoves, heat registers, radiators, or other heat producing devices.
13. Do not block fan intake or exhaust ports. Do not operate equipment on a surface or in an environment which may impede the normal flow of air around the unit, such as a bed, rug, carpet, or completely enclosed rack. If the unit is used in an extremely dusty or smoky environment, the unit should be periodically "blown free" of foreign dust and matter.
14. To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside. Refer all servicing to qualified service personnel. There are no user serviceable parts inside.
15. When moving the unit, disconnect input ports first, then remove the power cable; finally, disconnect the interconnecting cables to other devices.
16. Do not drive the inputs with a signal level greater than that required to drive equipment to full output.
17. The equipment power cord should be unplugged from the outlet when left unused for a long period of time.
18. Save the carton and packing material even if the equipment has arrived in good condition. Should you ever need to ship the unit, use only the original factory packing.
19. Service Information Equipment should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged.
  - B. Objects have fallen, or liquid has been spilled into the equipment.
  - C. The equipment has been exposed to rain.
  - D. The equipment does not appear to operate normally, or exhibits a marked change in performance.
  - E. The equipment has been dropped, or the enclosure damaged.

# TABLE OF CONTENTS

## HDMI Routing Switcher Series

Thank you for purchasing the SB-5608 HDMI Switcher. You will find this unit easy to install and highly reliable but it is essential that you read this manual thoroughly before attempting to use the 8x2 HDMI switcher.

## CONTENTS

|                                 |   |
|---------------------------------|---|
| INTRODUCTION & CONTENTS .....   | 1 |
| FEATURES & SPECIFICATIONS ..... | 2 |
| FRONT PANEL .....               | 3 |
| BACK PANEL .....                | 4 |
| REMOTE CONTROL .....            | 5 |
| IR EXTENDER .....               | 6 |
| RS-232 PROTOCOL .....           | 7 |
| TYPICAL APPLICATION .....       | 8 |

## INTRODUCTION

The SB-5608 is high-performance 8x2 HDMI routing switcher for HDMI signals. This switcher supports a wide frequency range of 25MHz ~ 340MHz enabling 1080p HDMI formats and UXGA/WUXGA/DVI resolutions to any HD display. High definition digital signals can be selected and distributed to any of the (2) outputs simultaneously. This switcher is certified as being fully HDMI and HDCP compliant with RoHS, CE, FCC certifications. Supporting high resolution HDMI sources routed to HDMI displays, monitors, projectors or audio receivers. Control is provided via front panel push buttons, IR remote or via RS-232. A RS-232 Windows GUI interface is provided for this routing switch.

## PACKAGE CONTENTS

Check that you have the following components;

- SB-5608 Switcher
- 19 inch ear mount bracket (Part # 1U-440L)
- RS-232 V16 Protocol Instructions
- Master wireless IR remote control (SW-5608)
- SB-100 IR Extender Receiver Set
- CD Contents: Manual, Windows GUI, ISP V16 Windows driver
- RS-232 Cable 6 feet (2M)
- HDMI Locking Post Replacement Screws
- Users Guide
- Power Supply Input: DC12V, 3A, (Worldwide Universal 100~240VAC, AC 50/60Hz)
- *Optional: SB-100C IR Extender Receiver Cable (6.5ft (2M))*



## LOOK A PUPPY!!

## NOW READ THIS!!

### IMPORTANT WARRANTY INFORMATION.

**If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.**



## SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply. Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

## DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. We assume no responsibility for any infringements of patents or other rights of third parties which may result from its use.

We assume no responsibility for any inaccuracies that may be contained in this document. We make no commitment to update or to keep current the information contained in this document.

We reserve the right to make improvements to this document and/or product at any time and without notice.

## COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means — electronic, mechanical, magnetic, optical, chemical, manual, or otherwise — without express written permission and consent.

© Copyright 2015. All Rights Reserved.

Version 2.3 JUNE 2016

5608-20150709-001



## TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.



# FEATURES & SPECIFICATIONS

## FEATURES

---

- (8) HDMI digital source devices matrix switched to (2) HDMI devices
- HDMI digital video w/ embedded audio, DVI format and CEC/HDCP 1.2 compliant
- Wide frequency range 25MHz ~ 340 MHz. Supports HDMI 1.3b 3D formats
- Wide range of HD resolutions from PC XGA to WUXGA 1920x1200 and HDTV/DTV resolutions 480i/480p, 576i/576p, 720p, 1080i & 1080p
- Compatible with all HDMI source devices, PC monitors, Plasma HD displays, HDTV and audio receivers/amplifiers
- Digital video TMDS formats for resolutions up to 1080p-60 with Deep color 36-bit
- Digital Audio Support: Dolby TrueHD, Dolby Digital, Dolby Digital Plug/ex, DTS, DTS-HD, DTS-HD Master, DTS-EX, PCM, PCM2, LPCM2
- Various User Interface Control:
  - Windows based GUI control via RS-232 interface 2000/XP/WIN7-32/WIN7-64/WIN8
  - Front panel push button
  - IR wireless remote control
  - Third party RS-232 controller (via simple ASCII)
- Automatic scanning output status via LED show on front panel
- Simultaneously supports output #2 via output #1
- Supports IR remote and IR extenders for a distance of up to ~ 1000 ft (300M) Maximum

The switcher will remember that last state during a power cycle. When power is removed and resorted, the last configuration will be invoked.

## SPECIFICATIONS


---

- **Type of Switcher:** (8) HDMI Inputs to (2) HDMI Outputs Routing Switcher
- **HDMI Support:** HD 1080p@60Hz, H36-bit Deep color, 3D (1.3b) formats
- **HDCP/CEC Support:** HDCP 1.2 Compliant, CEC Compliant
- **Video Bandwidth:** Wide Frequency range 25MHz ~ 340MHz
- **Digital Video Support:** Full HD Resolution: 480i / 480p / 720p / 1080i / 1080p
- **Digital Audio Support:** Multi audio formats 5.1 / 7.1, MAT(MLP), Dolby Digital, Dolby TrueHD, Dolby Digital Plus, DTS, DTS-ES 6.1, DTS-HD, DTS-HD-HRA, DTS-HD Master, (PCM-2CH)
- **Controls:**
  - IR remote control
  - IR external port (OD 3.5mm ear phone jack)
  - Select & Function buttons on front panel
  - RS-232 series interface
- **Double Output:** Supports Output #2 port simultaneously via Output-#1
- **Source Status:** (8) auto LEDs illuminate white to indicate selection
- **Infrared Frequency:** 38Khz
- **IR External Distance:** ~1000 feet / 300M maximum
- **HDMI I/O Connector:** HDMI type A - SMD 19pin female type
- **Temperature:** 32°F - 100°F Operation (0°C - 38°C)
- **Dimensions (LxWxH):** 17.5 x 9.85 x 1.75 in
- **Rack Mount:** Rack Mount 1RU high 19 in rack mount (with rack mount)
- **Power Supply:** DC12V / 3A, Universal world wide type 50/60Hz, 100~240 VAC
- **Power Consumption:** 1750 mA Maximum
- **Safety Approvals:** CE, FCC, RoHS, REACH
- **Weight:** 6.8 lb (Unit only) / 9.3 lb (Net)

As product improvements are continuous, specifications are subject to change and without notice.  
Because of limitations on source and display devices, not all EDID data is compatible and subsequently not all equipment will function correctly with this switcher.

# FRONT PANEL

## FRONT PANEL

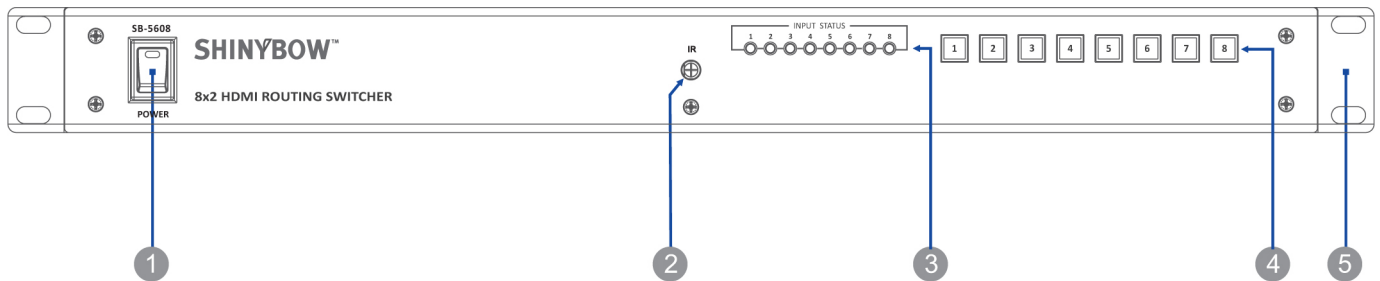

**1. POWER ON SWITCH:** The power switch turns the unit on and off. The LCM will illuminate blue to indicate that the switcher is ON and is receiving power. The Switcher will remember that last state during a power cycle. When power is removed and resorted, the last configuration will be evoked.

**2. IR SENSOR:** The IR sensor receives IR commands from the supplied remote controller or third party IR emitter.


**3. INPUT STATUS DISPLAY:** Input sources 1 to 8 LED illuminates blue to indicate that a video source is present on that input.

**4. SOURCE SELECT BUTTONS:** Separate inputs 1 thru 8 select buttons are provided for each source selection.


**5. 19 INCH EAR MOUNT PAIR:** Converts desktop to 19 inch rack mount. Bracket (part # 1U-440L) INCLUDED. Image shows rack mount bracket attached.

# BACK PANEL

## BACK PANEL

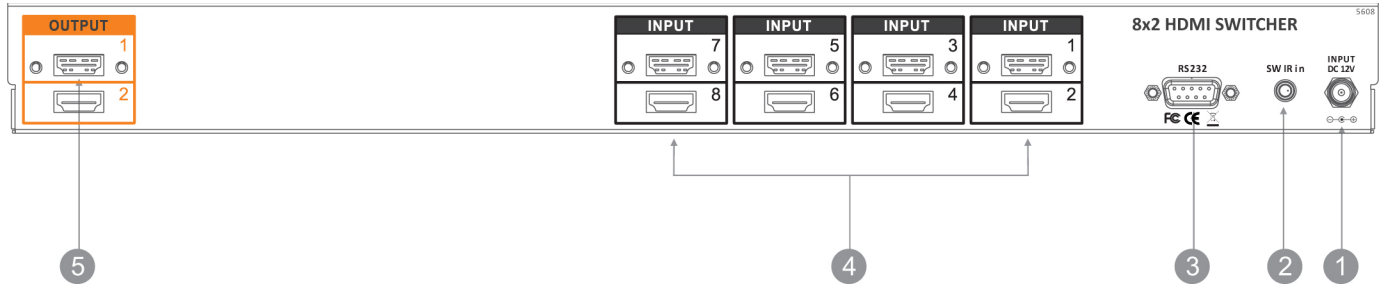

 **1. DC POWER INLET:** The switcher is fitted with a DC power plug input connector. Ensure that the plug used is of an approved type and is of sufficient current carrying connector capacity with the correct voltage and connector polarity. 12Volt DC power supply 3A Max (Center pin positive).



### POWER JACK:

 
DC Jack - Inner OD Ø 2.1 mm (+)  
Outside OD Ø 5.5mm (GND)  
Power Input: 12VDC, 3A

**2. IR EXTENDER CONTROL:** Supports one IR extender. Extends a maximum distance of up to ~1000 feet/300M. When you plug the external IR extender into the switcher, the front panel IR receiver remains active.




**IR EXTENDER JACK:** Female Jack - inner OD Ø 3.5mm

**3. RS-232 CONNECTION:** RS-232 control port allows for interfacing to a PC, such as a computer or touch panel control, to the switcher via the DB-9pin female connector for serial RS-232 control.



This port also supports firmware updates.  
**REMOTE PORT:** DB-9pin female connector

 **4. INPUTS- 1,2,3,4,5,6,7,8 HDMI:** Connects a HDMI digital video/audio signal link direct to the female HDMI connector. This connector supports HDMI digital video/audio and DVI digital video sources. If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.




### HDMI DIGITAL VIDEO/AUDIO CONNECTOR:

HDMI female connector.

**Note:** With proper adapters, the switcher can be used with DVI digital video signals.

HDMI Digital Video/Audio. Connector with fix screws Input 1 ~ 8.

 **5. OUTPUTS- 1, 2 HDMI:** Connects a HDMI digital video/audio signal link direct to the female HDMI connector. This connector supports HDMI digital video/audio and DVI digital video sources. If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.



### HDMI DIGITAL VIDEO/AUDIO CONNECTOR:

HDMI female connector.

**Note:** With proper adapters, the switcher can be used with DVI digital video signals.

HDMI Digital Video/Audio. Connector with fix screws Output 1 & 2.

# REMOTE CONTROL & REMOTE PROTOCOL COMMANDS

## Before making any connections observe the following:

- Ensure the main voltage supply matches the label on the supplied plug-pack (+/-10%).
- Ensure that the power switch is OFF.
- Ensure that all system grounds (earth) are connected to a common point.
- Avoid powering equipment within a system from multiple power sources that may be separated by large distances.
- Connect all audio video sources and destination equipment.
- Power up all source and destination audio-visual sources.
- For each destination output select the appropriate input source by using the front panel input select buttons. The supplied IR remote control. Or through the RS-232 serial communications port.
- Upon power up the switcher will return to its last used setting before being powered down.

## REMOTE CONTROL

### IR REMOTE CONTROL KEY :


#### IR REMOTE : SW-5608

#### 1. & 2. SWITCH POWER ON or OFF:

Controller with a power ON and OFF

#### 3. SOURCE : 1 thru 8 INPUT SOURCE SELECTION:

Press input 1~8 sources with selection buttons

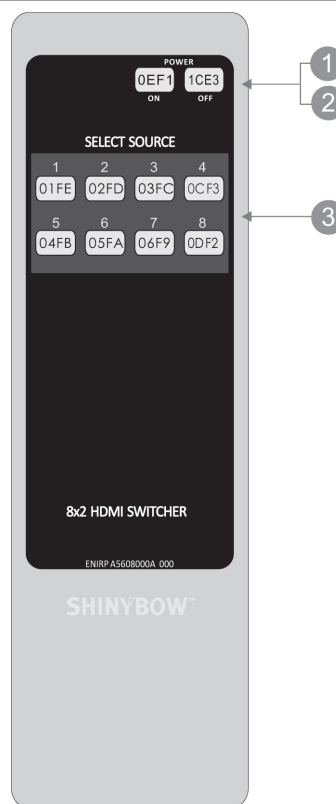

## IR REMOTE CUSTOM AND DATA CODES (NEC Standard)

### HOW TO SETUP IR CODES :

POWER ON: 28D7 0BF4

### CUSTOM CODE : 28D7

#### PRESS SOURCE - #

SOURCE #1 : 04FB

SOURCE #2 : 05FA

SOURCE #3 : 06F9

SOURCE #4 : 0DF2

SOURCE #5 : 1EE1

SOURCE #6 : 00FF

SOURCE #7 : 1BE4

SOURCE #8 : 18E7

*For Example:* Select source to show Source #1~8 on display,

#### The IR Data Code list :

SOURCE #1 : 28D7 04FB

SOURCE #2 : 28D7 05FA

SOURCE #3 : 28D7 06F9

SOURCE #4 : 28D7 0DF2

SOURCE #5 : 28D7 1EE1


SOURCE #6 : 28D7 00FF

SOURCE #7 : 28D7 1BE4

SOURCE #8 : 28D7 18E7


# IR EXTENDER

## 1. SB-100 IR 300M Receiver

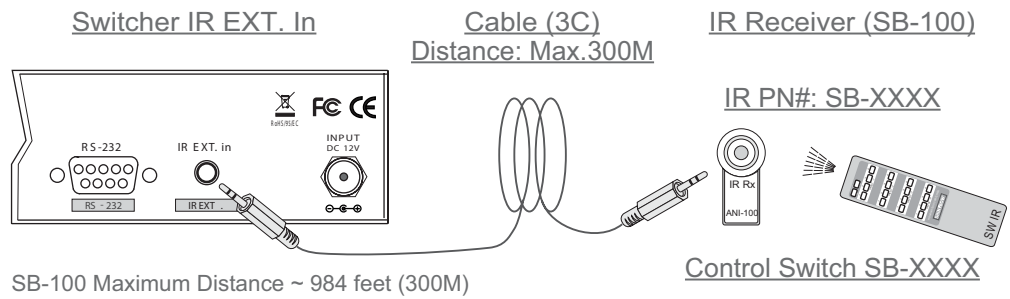

The SB-100 IR Receiver is required when using the port "ALL in" Jack.


## 2. SB-100C IR 2M Receiver

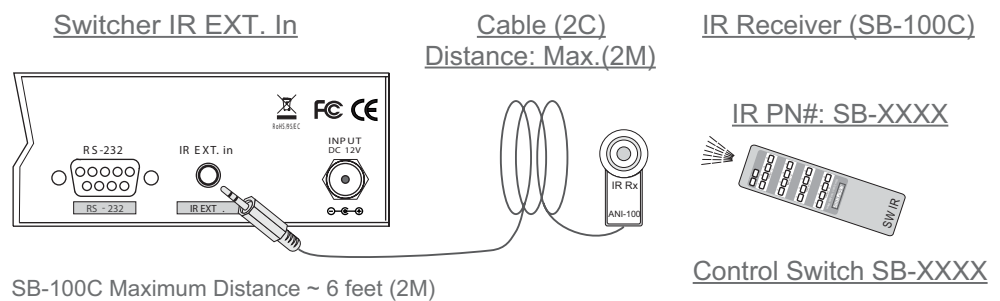

The SB-100C IR Receiver will not function on the port "ALL in" Jack.


\*\*\* When you plug the External IR extender into the switcher, the front panel IR receiver remains active. \*\*\*

Pin configuration for IR 984 feet (300M) Extender Receiver such as SB-100 compatible

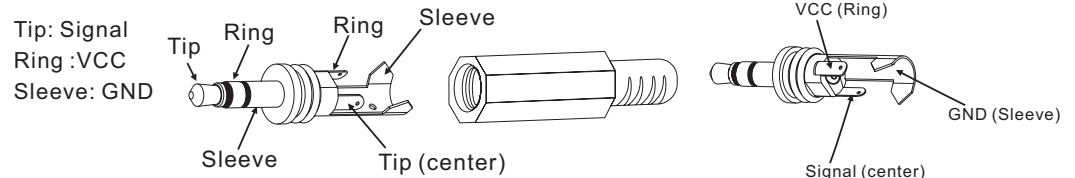

SB-100 Receiver and SB-101 Transmitter The DISTANCE maximum ~ 984 feet (300M)

Pin configuration for IR Receiver 6 feet (2M) cable such as SB-100C compatible

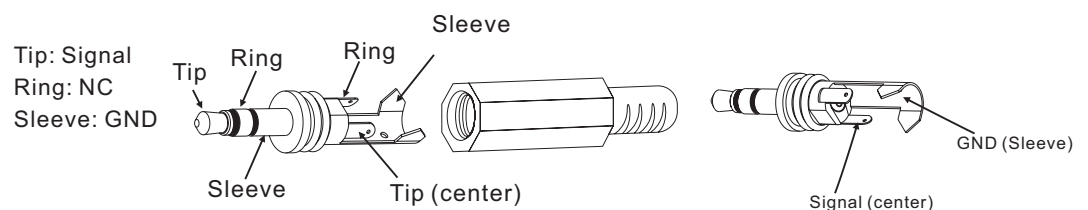

SB-100 Receiver and SB-101C Transmitter The DISTANCE maximum ~ 984 feet (300M)

**Note:** The External IR jack has voltage on the "Ring" portion of a 3-conductor plug. You must use a 3-conductor plug (aka: stereo plug). Using a 2-conductor plug will short out the power supply. Always make connections with the switcher power off.



# RS-232 & ETHERNET SERIAL INTERFACE


## RS-232 SERIAL INTERFACE CONNECT a PC or CONTROL SYSTEM. VERSION COMPATIBLE V16

Example of the commanded string to select Inputs:

| FUNCTION      | COMMAND    | VARIABLES  |   |
|---------------|------------|--|---|
| Select source | Output xx; | xx = Input Channel<br>01=Source1<br>02=Source2<br>03=Source3<br>04=Source4<br>05=Source5<br>06=Source6<br>07=Source7<br>08=Source8 | 09=Source9<br>0A=Source10<br>0B=Source11<br>0C=Source12<br>0D=Source13<br>0E=Source14<br>0F=Source15<br>10=Source16 |

| COMMAND EXAMPLE | RESPONSE                          | RESPONSE DESCRIPTION   |
|-----------------|-----------------------------------|--|
| Output 01;      | SB56xx 01;                        | Select source number 1   |
| Power 01;       | SB56xx 00;                        | Power ON   |
| Power 00;       | SB56xx 00;                        | Power OFF  |
| ACTIVESOURCE ?; | Activesource<br>0100000101010100; | Each position indicates which source is active(01) or inactive(00) |


**FOR EXAMPLE:**

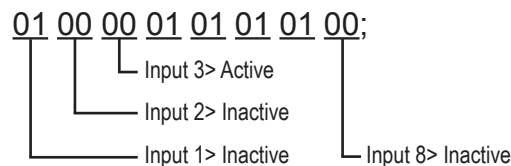

**Note:** This does not validate if the signal is within proper format (ex: 1VPP Video), only that one is present and active.

### RS-232 CONFIGURATION

RS-232 cable is a straight thru cable and not null-modem

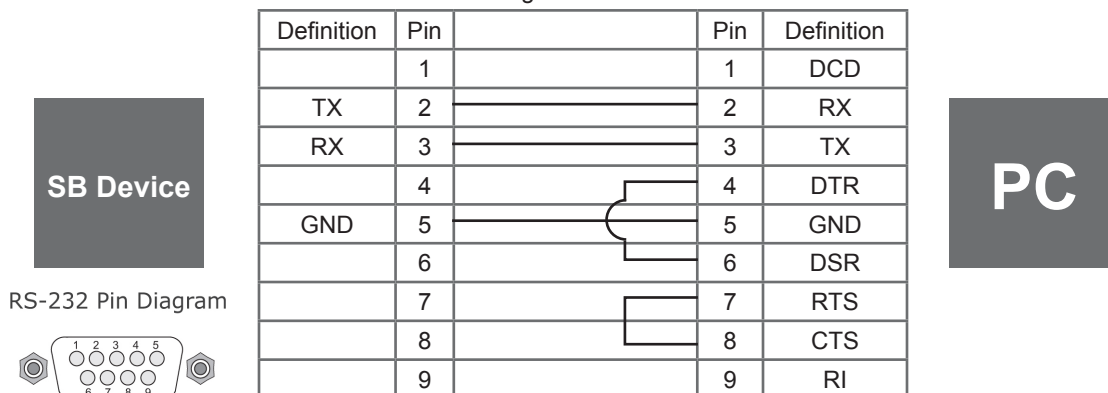

### RS-232 SERIAL INTERFACE PROTOCOL COMMANDS ( RS-232 Control driver V1.6 )


The Shinybow switcher can be controlled via the RS-232 serial control port to allow for interfacing to a PC, or similar third party control system. The serial communication parameters are 9600 baud, 8 bit, No Parity and 1 stop bit - this is often referred to as 9600 8N1. When the unit recognises a complete command it will perform the requested action - there is no delimiter character required.

# TYPICAL APPLICATION

## INSTALLING DIAGRAM

### Sample Connection:

Using SB-5608 switching (8) HDMI signals to (2) displays via SB-100 IR Receiver. (Max. 300M distance).

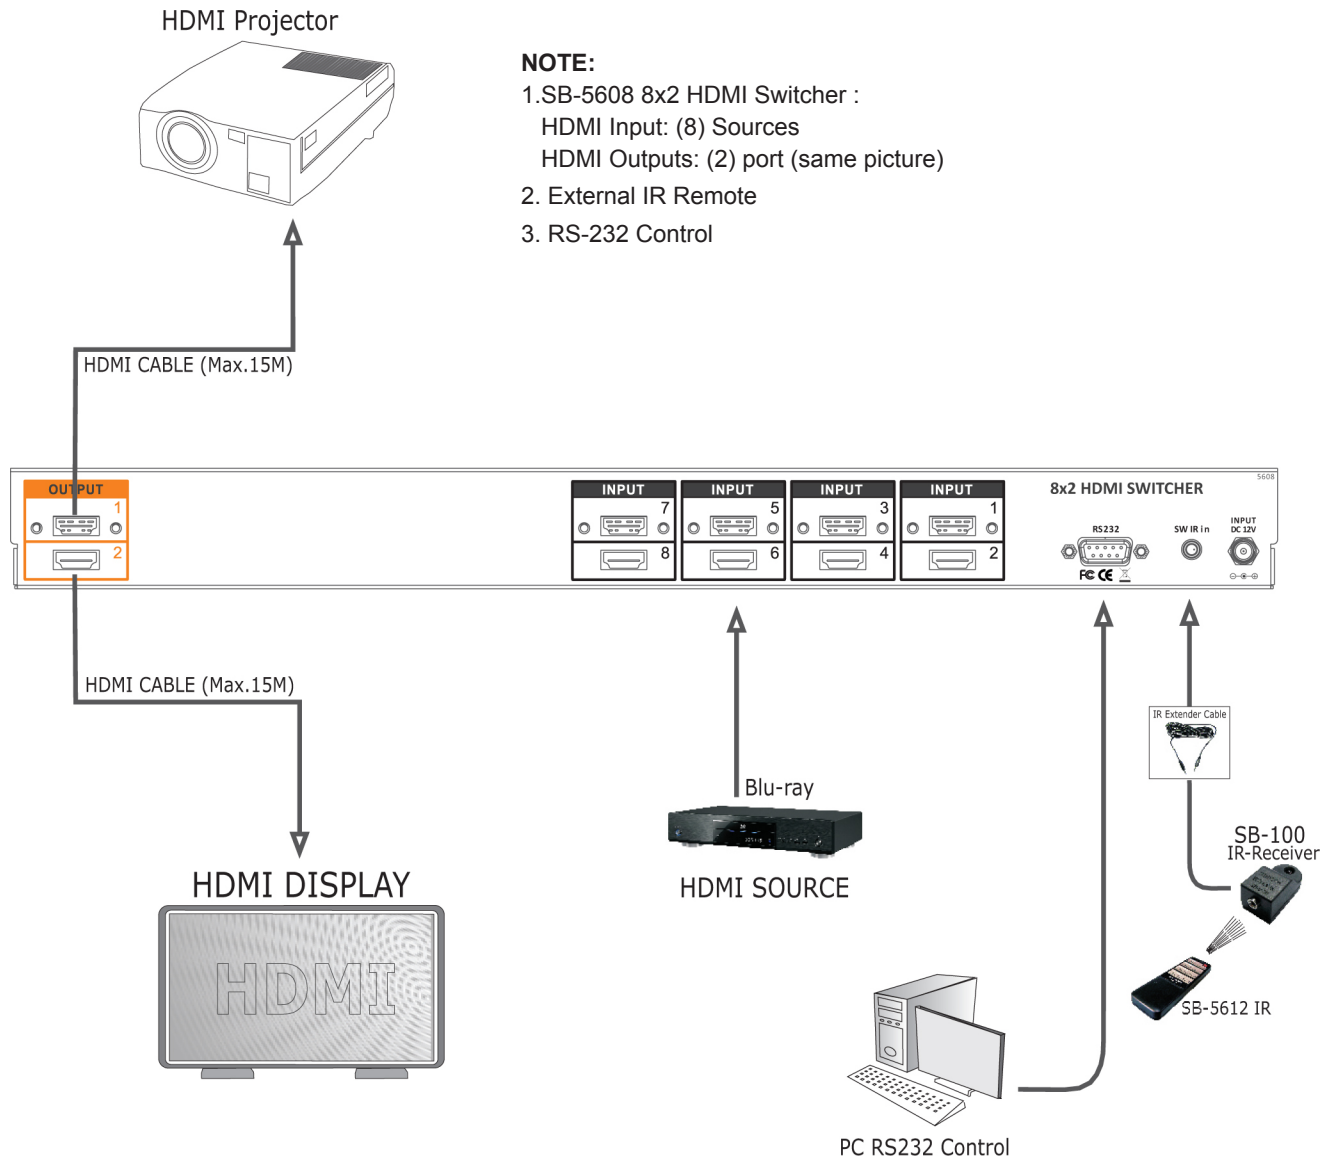

Supports (8) HDMI Sources and (2) outputs (same pictures) control via IR/RS-232/Front Panel.

# LIMITED WARRANTY

PLEASE READ THE FOLLOWING TERMS AND CONDITIONS CAREFULLY BEFORE USING THIS HARDWARE, COMPONENTS AND SOFTWARE PROVIDED BY, THROUGH OR UNDER SHINYBOWUSA, INC (COLLECTIVELY, THE "PRODUCT"). By using or installing the product, you unconditionally signify your agreement to these Terms and Conditions. If you do not agree to these Terms and Conditions, do not use the product and return the product to SHINYBOWUSA, Inc. at the return address set forth on the product's packing label at your expense. SHINYBOWUSA, Inc. may modify these Terms and Conditions at anytime, without notice to you.

## RESTRICTIONS ON USE OF THE PRODUCT

It is your responsibility to read and understand the installation and operation instructions, both verbal and in writing, provided to you with respect to the product. You are authorized to use the product solely in connection with such instructions. Any use of the product not in accordance with such instructions shall void any warranty pertaining to the product. Any and all damages that may occur in the use of the product that is not strictly in accordance with such instructions shall be borne by you and you agree to indemnify and hold harmless SHINYBOWUSA, Inc. from and against any such damage.

The product is protected by certain intellectual property rights owned by or licensed to SHINYBOWUSA. Any intellectual property rights pertaining to the product are licensed to you by SHINYBOWUSA, Inc. and/or its affiliates, including any manufacturers or distributors of the product (collectively, "SHINYBOWUSA") for your personal use only, provided that you do not change or delete any proprietary notices that may be provided with respect to the product.

The product is sold to you and any use of any associated intellectual property is deemed to be licensed to you by SHINYBOWUSA for your personal use only. SHINYBOWUSA does not transfer either the title or the intellectual property rights to the product and SHINYBOWUSA retains full and complete title to the intellectual property rights therein. All trademarks and logos are owned by SHINYBOWUSA or its licensors and providers of the product, and you may not copy or use them in any manner without the prior written consent of SHINYBOWUSA, which consent may be withheld at the sole discretion of SHINYBOWUSA.

The functionality and usability of the product is controlled by SHINYBOWUSA, Inc. from its offices within the State of Texas, United States of America. SHINYBOWUSA makes no representation that materials pertaining to the product are appropriate or available for use in other locations other than the shipping address you provided with respect thereto. You are advised that the product may be subject to U.S. export controls.

## DISCLAIMERS AND LIMITATION OF LIABILITY

SHINYBOWUSA may change or modify the product at any time, from time to time.

THE PRODUCT IS PROVIDED "AS IS" AND WITHOUT WARRANTIES OF ANY KIND EITHER EXPRESS OR IMPLIED. SHINYBOWUSA DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE PRODUCT'S CORRECTNESS, ACCURACY, RELIABILITY, OR OTHERWISE.

SHINYBOWUSA has no duty or policy to update any information or statements pertaining to the product and, therefore, such information or statements should not be relied upon as being current as of the date you use the product. Moreover, any portion of the materials pertaining to the product may include technical inaccuracies or typographical errors. Changes may be made from time to time without notice with respect to the product.

TO THE FULLEST EXTENT PERMISSIBLE PURSUANT TO APPLICABLE LAW, SHINYBOWUSA DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. SHINYBOWUSA DOES NOT WARRANT THE ACCURACY, COMPLETENESS OR USEFULNESS OF ANY INFORMATION WITH RESPECT TO THE PRODUCT. SHINYBOWUSA DOES NOT WARRANT THAT THE FUNCTIONS PERTAINING TO THE PRODUCT WILL BE ERROR-FREE, THAT DEFECTS WITH RESPECT TO THE PRODUCT WILL BE CORRECTED, OR THAT THE MATERIALS PERTAINING THERETO ARE FREE OF DEFECTS OR OTHER HARMFUL COMPONENTS. SHINYBOWUSA WILL USE ITS REASONABLE EFFORTS TO CORRECT ANY DEFECTS IN THE PRODUCT UPON TIMELY WRITTEN NOTICE FROM YOU NOT TO EXCEED 10 BUSINESS DAYS AFTER RECEIPT BY YOU OF THE PRODUCT, BUT YOU (AND NOT SHINYBOWUSA) ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR AND CORRECTION THAT WAS CAUSED BY YOU UNLESS OTHERWISE AGREED TO IN A SEPARATE WRITING BY SHINYBOWUSA.

UNDER NO CIRCUMSTANCES, INCLUDING, BUT NOT LIMITED TO, NEGLIGENCE, SHALL SHINYBOWUSA BE LIABLE FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OF, OR THE INABILITY TO USE THE PRODUCT IN ACCORDANCE WITH ITS SPECIFICATIONS, EVEN IF SHINYBOWUSA OR ITS REPRESENTATIVES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL SHINYBOWUSA'S TOTAL LIABILITY TO YOU FROM ALL DAMAGES, LOSSES, AND CAUSES OF ACTION (WHETHER IN CONTRACT, OR OTHERWISE) EXCEED THE AMOUNT YOU PAID TO SHINYBOWUSA, IF ANY, FOR THE PRODUCT.

**END OF DOCUMENT**

122 Rose Ln. Suite 303 | Frisco, Texas 75034

1-877-SHINY-USA

1-877-744-6987

1-972-377-2508

[sales@shinybowusa.com](mailto:sales@shinybowusa.com)

[www.shinybowusa.com](http://www.shinybowusa.com)

**SHINYBOW™ USA**  
MULTIMEDIA AUDIO AND VISUAL