

User Manual 17" 4K 3840 x 2160@60Hz LCD



Designed and manufactured by Austin Hughes

751

Legal Information

First English printing, July 2022

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

Safety Instructions

Please read all of these instructions carefully before you use the device. Save this manual for future reference.

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labeled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

What the warranty does not cover

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:

[Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or
	failure to follow instructions supplied with the product.
[Repair or attempted repair by anyone not authorized by us.
[Any damage of the product due to shipment.
[Removal or installation of the product.
[Causes external to the product, such as electric power fluctuation or failure.
[Use of supplies or parts not meeting our specifications.

- Normal wear and tear
- ☐ Normal wear and tear.
 - ☐ Any other causes which does not relate to a product defect.
- Removal, installation, and set-up service charges.

Regulatory Notices Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Contents

< Part. 1 >	RP-K117 / RP-K1417	
1.1	Package Content	P.1
1.2	Structure Diagram & Dimension	P.1
1.3	Installation	P.4
< Part. 2 >	Specifications / OSD	
2.1	Product Specifications	P.5
2.2	On-screen Display Operation (OSD)	P.7
< Part. 3 >	Options	
3.1	3G / HD / SD-SDI Broadcast-grade input (RP-K117 only)	P.10
3.2	HDMI 2.2 video input	P.11
3.3	Touchscreen (RP-K1417 only)	P.12
3.4	DC Power: 12V / 24V / 48V / 125V	P.14
3.5	ORB-2.1 : 2-post rack mounting brackets (RP-K1417 only)	P.15

Before Installation

- It is very important to mount the equipment in a suitable cabinet or on a stable surface.
- Make sure the place has a good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.

Unpacking

The equipment comes with the standard parts shown in package content. Check and make sure they are included and in good condition. If anything is missing, or damaged, contact the supplier immediately.

How To Clean Your LCD Monitor



Caution :

- To avoid the risk of electric shock, make sure your hands are dry before unplugging your monitor from or plugging your monitor into an electrical outlet.
- When you clean your monitor, do not press down on the LCD screen. Pressing down on the screen can scratch or damage your display. Pressure damage is not covered under warranty.
- Use only cleansers made specifically for cleaning monitors and monitor screens. Cleansers not made to clean monitors and monitor screens can scratch the LCD display or strip off the finish.
- Do not spray any kind of liquid directly onto the screen or case of your monitor. Spraying liquids directly onto the screen or case can cause damage which is not covered under warranty.
- Do not use paper towels or abrasive pads to clean your monitor. Using an abrasive pad or any wood based paper product such as paper towels can scratch your LCD screen.

Cleaning Your Monitor

To clean your LCD safely, please follow these steps:

- ① Disconnect the power cord.
- ② Gently wipe the surface using a clean, dry microfiber cloth. Use as littl e pressure as possible.

Cleaning Tough Marks and Smudges

To remove tough marks and smudges, please follow these steps:

- ① Disconnect the power cord.
- Spray a small amount of non-abrasive cleanser on a microfiber cloth.
- Caution: Do not spray or apply any liquids directly onto the monitor. Always apply the solution to your microfiber cloth first, not directly on the parts you are cleaning.
- Gently wipe the surface. Use as little pressure as possible.
- Wait until your monitor is completely dry before plugging it in and powering it up.

< Part 1 >

< 1.1 > Package Content



RP-K117 unit X1


- Power cord X1
- M6 screw, cage nut & cup washer X8



RP-K1417 unit X 1

- 4A Power adapter & Power cord X 1
- M6 screw, cage nut & cup washer X 8


< 1.2 > Structure Diagram

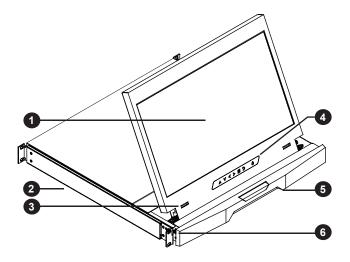

- 1 LCD panel
- 2 Installation Slide
- 3 Audio speaker (for SDI or HDMI option)



- 5 Carry handle to release the 2-pt lock
- 6 2-point lock

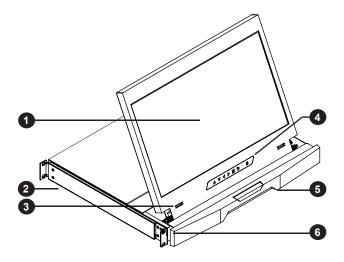


- 1 LCD panel
- 2 Installation Slide
- 3 Audio speaker (for SDI or HDMI option)



- 5 Carry handle to release the 2-pt lock
- 6 2-point lock

< 1.2 > Dimension - RP-K117

Front View

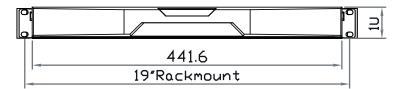


Rear View




Side View

UNIT: mm 1mm = 0.03937 inch

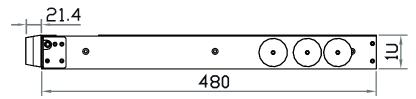

Top View

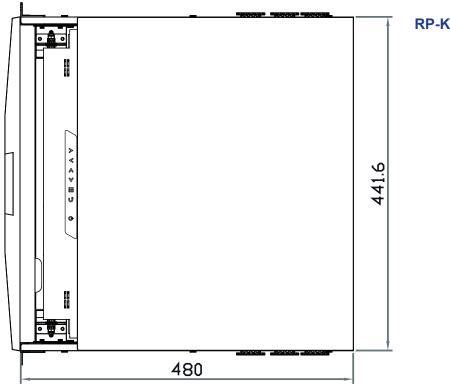

R	P	_K	4	1	7	


Model	Product Dimension (W x D x H)	Packing Dimension (W x D x H)	Net Weight	Gross Weight
RP-K117	441.6 x 480 x 44 mm	588 x 758 x 120 mm	11 kg	15 kg
	17.4 x 18.1 x 1.73 inch	23.1 x 29.8 x 4.7 inch	24.2 lb	33 lb



The weight is only for the pure models. It varies with accessories & options such as SDI, HDMI, touchscreen & DC power.

< 1.2 > Dimension - RP-K1417

Front View

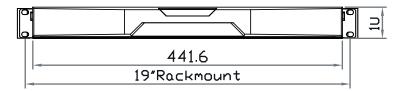


Rear View




Side View

UNIT : mm 1mm = 0.03937 inch

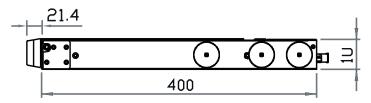


Top View

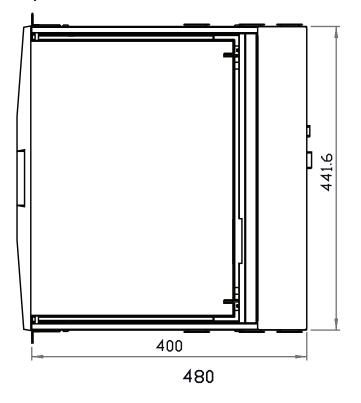

RP-K1417


Model	Product Dimension (W x D x H)	Packing Dimension (W x D x H)	Net Weight	Gross Weight
RP-K1417	441.6 x 400 x 44 mm	588 x 758 x 120 mm	8.7 kg	13.7 kg
	17.4 x 15.7 x 1.73 inch	23.1 x 29.8 x 4.7 inch	19.1 lb	30.1 lb

< 1.3 > Installation - How to install Installation Slides

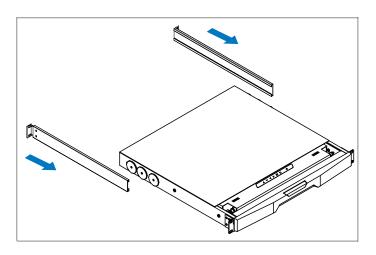


Step

■ Insert the left and right rear mounting brackets into the display drawer.

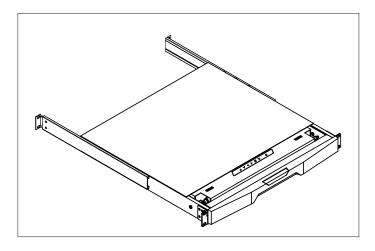

Step 2

- Measure the depth of the front and rear mounting rails.
- Align each rear mounting bracket to a suitable length.

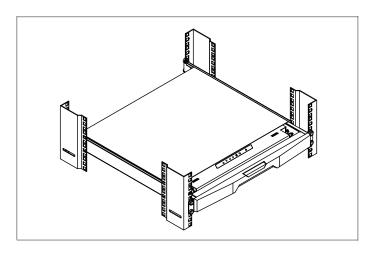

Step

Complete the installation

Fix the display drawer into the rack.



M6 screw, cage nut & cup washer x 8 are provided.



After use the drawer

Basically, user can push in the drawer back to park position by releasing the left & right slide lock arrow (as long as the drawer starts moving, he/she can release their finger right away, holding the arrow is not necessary).

< Part 2 >

< 2.1 > Product Specifications

LCD		RP-K117 / RP-K1417
Panel	Native Resolution	3840 x 2160@60Hz
	Panel Size (diagonal)	17.3-inch TFT color LCD
	Brightness (cd/m²)	400
	Contrast Ratio (typ.)	1000:1
	Colors	16.7 M, 8-bit
	Viewing Angle (L/R/U/D)	89/89/89
	Response Time (ms)	16
	Dot pitch (mm)	0.0995
	Display Area (mm)	382.12 x 214.94V
	Surface treatment	Anti-glare
	Surface hardness	3H
	Backlight Type	LED
	MTBF (hrs)	15,000

Video	Package	DP 1.2 / HDCP 1.3
	Option	HDMI 2.0 / HDCP 2.2

Power	Power Supply	Range	Auto-sensing 100 to 240VAC,
			50 / 60Hz
	Power Consumption	Screen ON	Max. 21W
		Power saving mode	Max. 2W
		Power button OFF	Max. 1W

Compliance	EMC	FCC & CE
	Safety	CE / LVD & UKCA
	Environmental	RoHS3 & REACH / WEEE

Environmental	Operating	Temperature	0 to 55°C degree
Conditions		Humidity	10~90%, non-condensing
		Altitude	16,000 ft
Storage / Non-operating Temperature	-20 to 60°C degree		
		Humidity	5~90%, non-condensing
		Altitude	40,000 ft
		Shock	10G acceleration (11ms duration)
		Vibration	10~300Hz 0.5G RMS random

Physical		RP-K117	RP-K1417
Specification	Product (WxDxH)	442 x 480 x 44 mm	442 x 400 x 44 mm
		17.4 x 18.9 x 1.73 inch	17.4 x 15.7 x 1.73 inch
	Packing (WxDxH)	588 x 758 x 120 mm	588 x 758 x 120 mm
		23.1 x 29.8 x 4.7 inch	23.1 x 29.8 x 4.7 inch
	Net Weight	11 kg / 24.2 lb	8.7 kg / 19.1 lb
	Gross Weight	15 kg / 33 lb	13.7 kg / 30.1 lb

^{*} All dimensions stated are subject to change if options are selected / integrated to base model part codes

Applicable	Display Port Input	PC Signal	2040 × 2460 × 60H=
	Display Port Input	PC Signal	3840 x 2160 x 60Hz
Format			2560 x 1440 x 60Hz
			1920 x 1080 x 60Hz
			1600 x 1200 x 60Hz
			1360 x 768 x 60Hz
			1280 x 1024 x 60 / 75Hz
			1280 x 768 x 60Hz
			1024 x 768 x 60 / 70 / 75Hz
			800 x 600 x 60 / 72 / 75Hz
			720 x 400 x 70Hz
			640 x 480 x 60 / 72 / 75Hz
		Audio Signal	2ch Linear PCM
	HDMI Input	HDMI 2.0	3840 x 2160 x 60Hz
			2560 x 1440 x 60Hz
		HDMI 2.0 / 1.4	3840 x 2160 x 30Hz
			2560 x 1440 x 60Hz
			1920 x 1080 x 50 / 60Hz (1080p)
			1920 x 1080 x 25 / 30Hz (1080i)
			1280 x 720 x 50 / 60Hz (720p)
			720 x 480 x 50 / 60Hz (576p / 480p)
		Audio Signal	2ch Linear PCM

< 2.2 > On-screen Display Operation (OSD)



Membrane Switch	Function	
	Turn the monitor on or off	
	Display the OSD menu Act as an Enter key to select screen setting options	
$\wedge $	Scroll through menu options and adjust the displayed control	
	Exit the OSD screen Go back to the previous on-screen sub-menu or main menu	

Remark: All LED touch buttons in WHITE light.

The LED of **Power** (b) touch button will flash continuously when there is no signal input.

- 1 All the LED touch buttons will automatically turn off after 10 minutes of idle status (except the **Power** (b)).
- 2 Light up all membrane buttons, please press any button for 1 2 seconds (except the **Power** 🕲).
- 3 Select another video input (only available for models with multiple video input) :
 - (a) Press the button $\ \ \ \ \$ to call up the on-screen video mode on top right corner.
 - (b) Use up/down arrow $\ \ \bigwedge \ \ \bigvee \ \$ to the select the video input
 - (c) Press the button otin
 otin
 otin to confirm the selection

< 2.2 > On-screen Display Operation (OSD)

1 Picture


Brightness: Adjust the screen brightness

Contrast : Adjust the difference between the image background

(black level) and the foreground (white level)

Black level: Adjust background black level of the screen

Eco : Screen in power saving mode

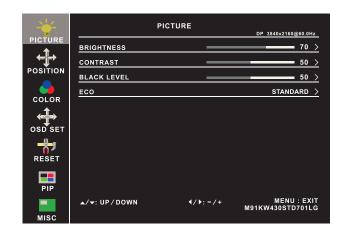


(2) Position

Picture size : Adjust the image size

- Full Screen / 4:3 / 5:4 / Pixel to Pixel

DP version: Select the DP version

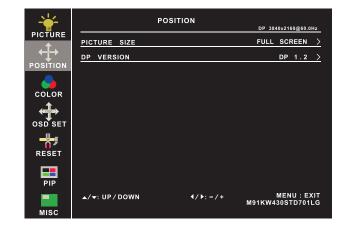

(3) Color

Color temperature: User / Warm / Cool / 5400k mode and

Red / Green / Blue color balance


Sharpness : Adjust the image from weak to sharp

Hue : Adjust the screen hue value

Saturation : Adjust the saturation of the image color

Dynamic

luminous control : Control the dynamic brightness

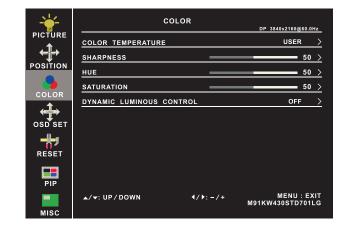

4 OSD Set


Language : Select the language in which the OSD menu is

displayed - English

OSD H-Position : Align the screen image left or right
OSD V-Position : Align the screen image up or down

OSD time out : Adjust the screen timeout
OSD transparency : Adjust the screen transparency


OSD size : Adjust the screen size - Normal / Small
OSD rotation : Rotate the screen - 90° / 180° / 270°

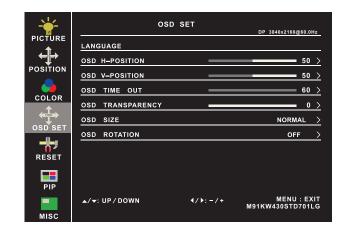

< 2.2 > On-screen Display Operation (OSD)

5 Reset

Reset : Return the adjustment back to factory setting

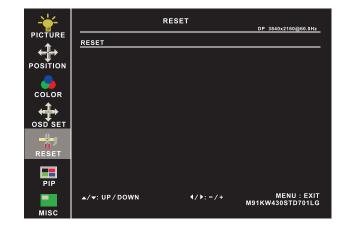

6 PIP

PIP mode : Enter into PIP / PBP setting - PIP MODE /

PBP 2WIN (Main screen + 1 sub screen) / PBP 3WIN (Main screen + 2 sub screen) / PBP 4WIN (Main screen + 3 sub screen) Select the signal input of each sub screen

PIP size : Adjust the size of the Sub screen

- Small / Medium / Large / Huge

PIP position : Adjust the position of the Sub screen

- Top Left / Top Right / Bottom Left / Bottom Right

Swap : Swap the input signal of PIP / PBP sub screen



(7) MISC

Signal source : Select the signal source - DP / HDMI1 / HDMI2


Mute : Turn off the surrounding sound

Audio in : Auto / Line in / DP

Volume : Adjust the volume of sound

Sleep mode : Set the off time - 10 min / 20 min / 30 min /

50 min / 60 min / 120 min / 240 min

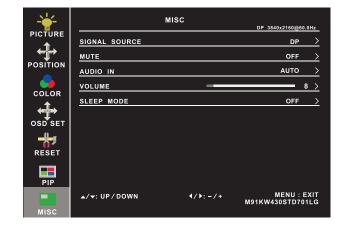


Options on Reset page

Rotation : Rotate the image in Full screen or 1:1

- 90° / 180° / 270°

Picture size: Adjust the image size in Full screen or 1:1

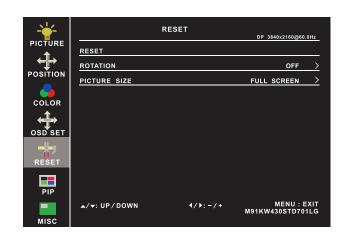


< 3.1 > Options : 3G / HD / SD-SDI input (RP-K117 only)



Austin Hughes' SDI input is an ideal solution for the broadcast-grade video and high resolution CCTV market.

Designed for use with CyberView displays, a SDI input module can support up to 1080p @60Hz resolution without using additional space or power and it comes standard with a 2-year warranty.

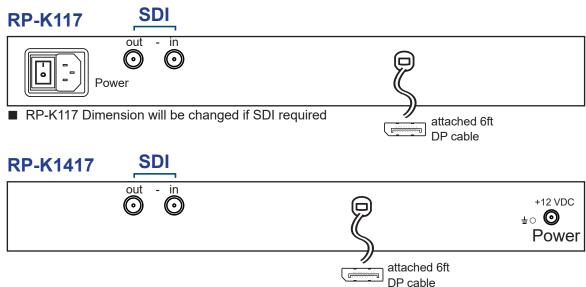

INPUT	3G-SDI IN	BNC x 1 / 0.8Vp-p (75 ohm)	
	3G-SDI OUT	BNC x 1 / Active through, equalized & relocked	


Standard Compliance	Video	SMPTE 425M / 274M / 296M / 125M ITU-R BT.656		
	Audio	SMPTE 299M / 272M-C		
Compatible Video Format	3G-SDI	1080p @60 / 50Hz, 4:2:2 1080p @30 / 25 / 24Hz, 4:4:4 1080i @60 / 50Hz, 4:4:4 720p @60 / 50Hz, 4:4:4		
	HD-SDI	1080p @30 / 25 / 24Hz, 4:2:2 1080i @60 / 50Hz, 4:2:2 720p @60 / 50Hz, 4:2:2		
	SD-SDI	480i @60Hz, 4:2:2		
	ITU-R BT.656	576i @50Hz, 4:2:2		
Compatible Audio Format	3G-SDI	48kHz, 16 / 20 / 24 bit, 2 CH, Synchronized Video		
	HD-SDI	48kHz, 16 / 20 / 24 bit, 2 CH, Synchronized Video		
	SD-SDI	48kHz, 16 / 20 / 24 bit, 2 CH, Synchronized / Asynchronized Video		
Max. Transmission Distance	3G-SDI	150m at 2.97Gb/s		
75 ohm coaxial cable	HD-SDI	250m at 1.485Gb/s		


480m at 270Mb/s

SD-SDI

< 3.2 > Options:

- **HDMI 2.0** (HDCP 2.2)

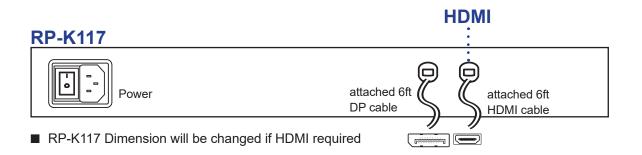

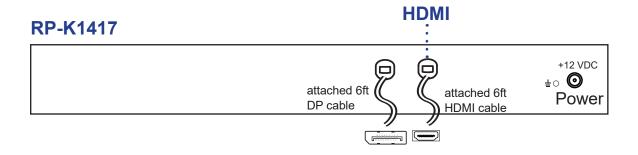

< 3.3 > Options : Touchscreen & driver



Projected Capacitive 10-pt Touch screen Specification

Model	RP-K117 / RP-K1417		
	TPC-10 Multi-touch		
Technology	Projected Capacitive		
Touch Point	10		
Input Type	Finger or Capacitive Stylus		
Resolution	4096 x 4096		
Touch Point Accuracy	± 2 mm		
Response Speed	< 5 ms		
Activation Force	< 5 g		
Surface Hardness	6H		
Light Transmission	> 85%		
Haze	3% ↓		
Durability	50 million touches		
Top Layer	1.8 mm Glass		
Bottom Layer	0.7 mm Sensor Glass		
Thickness	2.7 ± 0.1 mm		
Connector	USB		
Compatibility	Linux / Android / Windows / Mac		


Resistive 1-pt Touchscreen Specification


Model	RP-K117 / RP-K1417		
	TRB e-Resistive		
Technology	5-Wire Resistive		
Touch Point	Single		
Method	Stylus or Finger		
Activation Force	≤ 50g		
Durability	10 million touches		
Response Time	15 ms		
Optical Transmittance	80% ± 3%		
Surface Hardness	3H		
Haze	8% ± 3%		
Glass	2.2 ±0.2 mm		
Connector	USB Type A		
Compatibility	Windows 7 / XP / Vista, Linux		

- USB touchscreen package includes 1 x 6ft USB cable, quick reference guideline and CD disc
- For detailed information, please refer to the attached CD disc
- As the touchscreen unit is not made of toughened glass, please handle it carefully

< 3.3 > Options : Touchscreen & driver



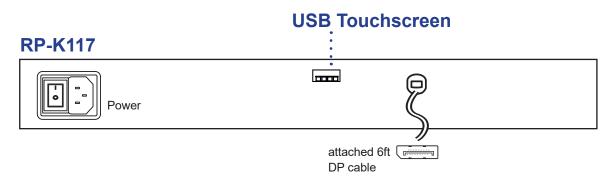

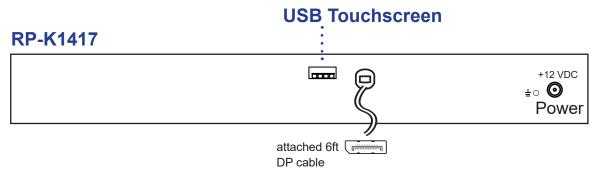

TPC-10 Driver



Connect the USB cable from the USB port on the LCD to a computer. The touch screen supports easy Plug-and-Play operations. There is no need to install additional drivers on the computer.

TRB Driver

Please follow the below steps to setup the touch screen:-

- **Step 1.** Run the bundled CD disc or download the driver from the link below : http://www.austin-hughes.com/resources/driver/rackmount-display
- Step 2. Double click the Setup.exe
- Step 3. Follow the installation instruction to finish the setup
- Step 4. After installation, run the TouchKit program & the "4 point calibration"



Please do the initial calibration after the first setup




< 3.4 > Options : DC Power




Model	12V	24V	48V	125V	250V
Input rating					
Input voltage:	12-Volt	24-Volt	48-Volt	110-Volt	300-Volt
Input range:	9 ~ 18V	18 ~ 36V	36 ~ 75V	66 ~ 160V	180 ~ 425V
Input current					
- No load	50 mA	50 mA	50 mA	35 mA	10 mA
- Full load	4950 mA	2450 mA	1220 mA	749 mA	600 mA
Output rating					
Output voltage:	12-Volt	12-Volt	12-Volt	12-Volt	12-Volt
Output current:	4.16A	4.16A	4.16A	6.25A	12.5A
Efficiency	84%	85%	85%	91%	86%



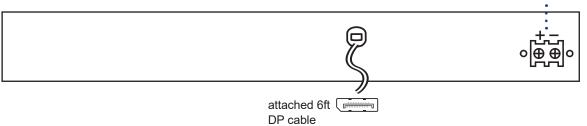

- *** For DC power option :
 - (1) If the unit with LCD, earthing may be required
 - u ...
 - (2) DC option excludes AC power adapter and power cord.
 - (3) RP-K117 Dimension will be changed if DC power required


< 3.5 > RP-K1417 Options : ORB-2.1 2-Post Rack Mounting Brackets

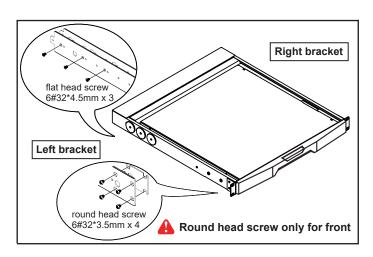

Step 1


- Before apply 2-post rack brackets, please release front mounting ears and rear mounting wheels.
- Attach | left and right mounting brackets | to the drawer with the screws below:

6#32*3.5 mm screw x 8 (only for front) 6#32*4.5 mm screw x 6 (only for rear)

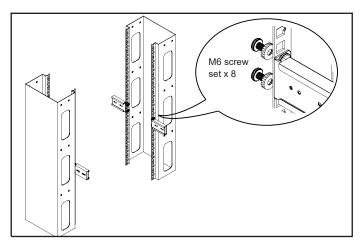


Step 2

- Attach the set of 4 mini brackets to the 2-post rack.
- M6 screw set is not provided.

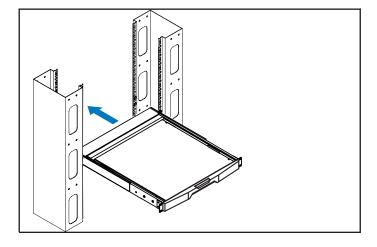

Step 3

■ Insert the drawer into the mini brackets.

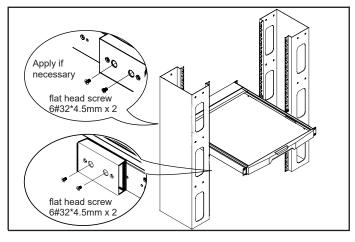

Step 4

- Fix the LCD console drawer to the mini brackets with 6#32*4.5 mm screw x 8.
- Installation completed



This step is necessary for front. Failure to complete this will cause damage.

The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.
All brand names, logo and registered trademarks are properties of their respective owners.
Copyright 2022 Austin Hughes Electronics Ltd. All rights reserved.