## **HDMIFOEXT-1000 User's Manual**

HDMIFOEXT-1000 Installation Guide






#### **HDMIFOEXT-1000**

#### Connection

- Connect product transmitter to the HDMI port on your source device.
- Connect product receiver to the HDMI port on your digital display device.
- Connect Multi-mode SC type 1 Channel standard fiber-optic cable between transmitter and receiver.
- Connect power adapter to the receiver which has been provided.
  - Connecting power adapter to the transmitter is option. (In the case of power shortage)
- The Green LED will appear on the transmitter and receiver, after all the product connections are completed.
  - LED On: Power supply and Signal transfer
  - LED Blinking: Only Power supply. Signal not transfer(Connections are not completed)

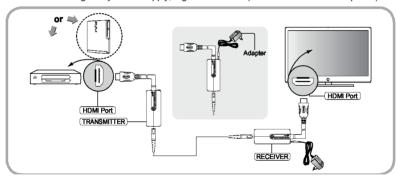

## • Contact us (KVMSwitchTech)

**KVMSwitchTech** 

118 W. Streetsboro St., Suite 125 Hudson, OH 44236

Tel: 234-380-5708

## Caution

Use the DC adapter (5V, 2A) included in the product package for the receiver, which is connected to the display device and requires the external power supply. The transmitter connected to the source device normally used the power from source. Therefore, no external DC adapter is required except some device with the special specifications. In this case, use the external DC adapter used for the transmitter.

(Connect transmitter to adapter only in case of either insufficient power or no power from source device.)

#### Troubleshooting

- Check if the source device power is on.

Screen is not displayed. - Check if connections to the source and display device are correct.

- Turn the source device power off and on again.

Noise is shown on the -Check the HDMI connection.

-Check the display resolution.

- If the malfunction is not fixed by the above measures, please contact us.

screen

#### HDMIFOEXT-1000 Installation Guide

#### Precautions for safety

Make sure to comply with precautions to prevent danger and damage on the property through proper usage product.



If precautions are ignored, if may incur decease or serious injury.




If precautions are ignored, if may incur decease or serious injury.

#### ■ Warnings

- 1. Do not plug in several power cords. It can cause overheating and a fire.
- Do not bend the power cord by force, or do not put heavy object on the power cord to prevent breakdown. It can cause a fire.
- 3. Do not touch the power plug with wet hands. You may be struck by electricity.
- 4. Insert the power plug firmly to avoid shaking. If not inserted firmly, it can cause a fire.
- Do not disassemble, repair of modify. It can cause a fire and an injury by electrical shock due to abnormal operation.
- Do not insert a metallic material (hair pin or ironware) or combustible foreign object (match, paper and so on) into the terminal hole, or drop the terminal. It may cause a fire and an injury by electrical shock,
- Do not put vase, flowerpot, cup, cosmetics, medicines and container filled with water near the product. It may cause a fire and an injury by electrical shock, or injury by dropping.
- 8. Stay away from the direct sunlight and the heat source like the heater. It may cause a fire.
- Do not spray water on the product. It may cause a fire and an injury by electrical shock. Scrub the product surface softly with a dry towel.
- 10. Use the DC power adapter with correct specification. It may cause a fire.

#### ● Cautions /\

- 1. Do not put the heavy object on top of the product. It may cause malfunction.
- Put the product in the even and stable location. If the product falls down or dropped, It may cause an injury and malfunction.
- Stay away from the place with too high temperature (over 50°c) and too low temperature (under 0°c), or the high humidity. It may cause a fire and an injury by electrical shock.
- Do not twist or pull by force the both ends of the optical cable. It can cause malfunction
  (Minimum bending diameter: 75mm).



4

# Warranty

- We, OPHIT hereby warrant the final purchase of our product as follows.
- In the case of troubles on our products, please contact the shop purchased.

Name of products				Name of Model	
Date Purchased	Day	Month	Year	Serial No.	
Shop purchased					

## One year limited warranty

Our customers have right to be served with free of charge when there is trouble in this product during 1(one) year from the day purchased.

## Out of warranty services

When you request services (in the case of non manufacturing defects but the troubles by misusage), may served with charge as follows.

- · defects of products caused by accident, disaster
- damages of products caused by the customer's carelessness or mistaken application
- damages of products caused by the application of the parts or products not supplied or sold by our company
- damages of products and related defects caused by not our staff or the men or group not nominated by us for services.

The interchanged parts and products for maintenance services shall be replaced as new parts and products operating normally, and the inter-changed parts and products shall be subjected to our company.