

SB-5645CAK

4x4 HDMI-HDBaseT™ Matrix Switch with Auxiliary Audio I/O



IMPORTANT WARRANTY INFORMATION.

If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.



SAFETY INFORMATION



1. To ensure the best results from this product, please read this manual and all other documentation before operating your equipment. Retain all documentation for future reference.
2. Follow all instructions printed on unit chassis for proper operation.
3. To reduce the risk of fire, do not spill water or other liquids into or on the unit, or operate the unit while standing in liquid.
4. Make sure power outlets conform to the power requirements listed on the back of the unit. Keep unit protected from rain, water and excessive moisture.
5. Do not attempt to clean the unit with chemical solvents or aerosol cleaners, as this may damage the unit. Dust with a clean dry cloth.
6. Do not use the unit if the electrical power cord is frayed or broken. The power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
7. Do not force switched or external connections in any way. They should all connect easily, without needing to be forced.
8. Always operate the unit with the AC ground wire connected to the electrical system ground. Precautions should be taken so that the means of grounding of a piece of equipment is not defeated.
9. AC voltage must be correct and the same as that printed on the rear of the unit. Damage caused by connection to improper AC voltage is not covered by any warranty.
10. Turn power off and disconnect unit from AC current before making connections.
11. Never hold a power switch in the "ON" position.
12. This unit should be installed in a cool dry place, away from sources of excessive heat, vibration, dust, moisture and cold. Do not use the unit near stoves, heat registers, radiators, or other heat producing devices.
13. Do not block fan intake or exhaust ports. Do not operate equipment on a surface or in an environment which may impede the normal flow of air around the unit, such as a bed, rug, carpet, or completely enclosed rack. If the unit is used in an extremely dusty or smoky environment, the unit should be periodically "blown free" of foreign dust and matter.
14. To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside. Refer all servicing to qualified service personnel. There are no user serviceable parts inside.
15. When moving the unit, disconnect input ports first, then remove the power cable; finally, disconnect the interconnecting cables to other devices.
16. Do not drive the inputs with a signal level greater than that required to drive equipment to full output.
17. The equipment power cord should be unplugged from the outlet when left unused for a long period of time.
18. Save the carton and packing material even if the equipment has arrived in good condition. Should you ever need to ship the unit, use only the original factory packing.
19. Service Information Equipment should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the equipment.
 - C. The equipment has been exposed to rain.
 - D. The equipment does not appear to operate normally, or exhibits a marked change in performance.
 - E. The equipment has been dropped, or the enclosure damaged.

TABLE OF CONTENTS

HDMI-HDBaseT™ -AUDIO MATRIX SWITCHER SERIES

Thank you for purchasing the SB-5645CAK HDMI-HDBaseT™ Matrix Switcher. You will find this unit easy to install and highly reliable but it is essential that you read this manual thoroughly before attempting to use 4x4 HDMI-HDBaseT™ Matrix switcher.

CONTENTS

INTRODUCTION	1
FEATURES & CONTENTS.....	2
SPECIFICATIONS	3
FRONT PANEL	4
BACK PANEL	10
REMOTE CONTROL	14
ETHERNET / RS-232 SERIAL INTERFACE	17
EDID FUNCTIONS	18
IR EXTENDER	23
TYPICAL APPLICATION	24
HDBASET™ APPLICATION	26

INTRODUCTION

The SB-5645CAK is a professional 4x4 matrix routing switch. Supporting (4) HDMI Inputs and (4) Auxiliary Audio Inputs and (4) HDMI, (4) SPDIF and (4) HDBaseT™ Outputs. The SB-5645CAK is based on the HDBaseT™ standard and supports full resolution HDMI video with embedded EDID and PoE function (optional), Audio, RS-232, Ethernet and bi-directional IR, all over a single CATx cable. With a signal bandwidth of 340Mhz, there is no signal degradation. High Definition Digital signals can be selected and distributed to any (4) Inputs to (8) outputs simultaneously (channel outputs mirrored). The switcher is certified as being fully CEC, ARC and HDCP 1.3 compliant with HDMI 1.4a, 4K2K@30Hz, DVI 1.0, 3D formats and a wide frequency range of 25MHz ~ 340MHz. Supports UXGA/WUXGA/DVI 1920x1200 resolution to any HD display. The SB-5645CAK has (1) HDMI and Auxiliary Audio (analog stereo audio) connector for Input, effectively making this an (4) in by (8) out switcher (same signal on both outputs). Using the IR remote the switchers HDBaseT™ extender Transmitter (Tx) allows you to connect a source in a remote location. Likewise, the HDBaseT™ Output and our HDBaseT™ Receiver allows you to connect a display in a remote location. The EDID management can be selected between (7) different modes. Control is provided via front panel push buttons, IR remote, RS-232 or TCP/IP (not a web-browser). A RS-232 Windows GUI interface is provided for matrix routing control (Windows only).

LOOK A PUPPY!! NOW READ THIS!!

IMPORTANT WARRANTY INFORMATION.

If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.



SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply. Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. We assume no responsibility for any infringements of patents or other rights of third parties which may result from its use.

We assume no responsibility for any inaccuracies that may be contained in this document. We make no commitment to update or to keep current the information contained in this document.

We reserve the right to make improvements to this document and/or product at any time and without notice.

COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means — electronic, mechanical, magnetic, optical, chemical, manual, or otherwise — without express written permission and consent.

© Copyright 2016. All Rights Reserved.

Version 1.3 DEC 2016

5645CAK-20150702-004

TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

FEATURES

FEATURES

Based on HDBaseT™; bi-directional IR, RS-232, Multi format audio, Ethernet and PoE (Optional). Full resolution HD Video, all HDBaseT™ signals over a CAT6/6a/7 category cable. (4) HDMI with Auxiliary Audio (Analog Audio) source devices matrix switched to (4) HDMI with S/PDIF output destinations.

- (4) HDMI with Auxiliary Audio (Analog Audio) player devices matrix switched to (4) HDMI with S/PDIF outputs and (4) HDBaseT™ Transmitter outputs to (8) destinations
- HDBaseT™ with PoE (optional), IR, RS-232, Multi Audio Format and HD video signals over a CAT6/6a/7 category cable
- HDMI digital video w/ embedded HDCP, DVI format and CEC/HDCP 1.3 compliant
- Worldwide EDID control modes for HDMI full 4K2K@30Hz HD video resolutions
- Wide frequency range of 25MHz ~ 340MHz up to HDMI 4K2K@30Hz, 1.4a 3D formats
- Wide range of HD resolutions from PC XGA to WUXGA 1920x1200 and HDTV/DTV HDMI resolutions 480i/480p, 576i/576p, 720p, 1080i/p & 4K2K@30Hz
- Compatible with all HDMI source devices, PC monitors, Plasma HD displays, HDTV and audio receivers or audio amplifiers
- Digital video TMDS formats for resolutions up to 4K2K@30Hz with Deep color 36-bit
- Digital Audio Support: Dolby TrueHD, Dolby Digital, Dolby Digital Plug/ex, DTS, DTS-HD, DTS-HD Master, DTS-EX, PCM, PCM2, LPCM2
- Supports (10) World Wide Control Function Keys: Full function front panel controls: ARC / AUX/ ALL / OFF / EDID / LOCK / RECALL / MEMORY / ENTER
- Audio Input: Supports Auxiliary Audio (Analog stereo audio)
- Audio Output: Supports Digital audio ARC or Digital audio S/PDIF (from HDMI source or Auxiliary Audio)
- Various User Interface Controls:
 - Windows based GUI control via RS-232 interface 2000/XP/WIN7-32/WIN-64/WIN8
 - Front panel push button
 - IR remote control
 - Ethernet switch control
 - Third party RS-232 control (via simple ASCII)
- Supports EDID Modes:
 - a. Embedded EDID Modes: FSS/ H24-3D/ H24-3D-M/ H36-3D/ H36-3D-M/ 4K2K-3D / DVI-D 1920x1200-60Hz
 - b. External Modes: Learning mode
- Automatic scanning input & output status via LCM show on front panel
- Using the build-in booster, each HDMI Output port is capable of driving cable lengths for 1080p up to 98 ft (30M) & 4K2K@30Hz up to 66 ft (20M)
- Supports IR remotes and IR extenders for a distance of up to ~ 984 ft (300M) Max
- Supports universal power adaptor AC100V~AC240V, 50/60Hz

The switcher will remember that last state during a power cycle. When power is removed and resorted, the last configuration will be invoked.

PACKAGE CONTENTS

Check that you have the following components;

- SB-5645CAK Matrix Switcher
- RS-232 V2.0 / Ethernet V2.0 Protocol Instructions
- IR Remote Control (SW-5645CAK)
- (4) Individual IR Remote Controls (SW-5645CAK-IR01~IR04)
- 19 inch ear mount bracket (Part # 1U-440L)
- SB-100 IR Extender Receiver Set
- CD Contents: Manual, Windows GUI, ISP V1.0 Windows driver
- RS-232 Cable 6 feet (2M)
- HDMI Locking Post Replacement Screws
- Users Guide
- Power Supply Input: Worldwide Universal 100~240VAC, AC 50/60Hz
- *Optional: SB-100C IR Extender Receiver Cable (6.5ft (2M))*



-- SB-6335T HDBaseT™ Transmitters & SB-6335R HDBaseT™ Receiver sold separately. --

SPECIFICATIONS


SPECIFICATIONS

- **Type of HDMI Switcher:** (4) Inputs to (4) Outputs HDMI over HDBaseT™ Matrix Switch with Audio and Extension
- **HDMI Support:** HDMI 4K2K@30Hz, 1080p@60Hz, H36-bit Deep color, 3D of HDMI V1.4 formats
- **HDBaseT™ Support:** Bi-directional IR, RS-232, Multi format Audio and Ethernet over a CAT6/6a/7 cable
- **HDCP / CEC Support:** HDCP 1.3 Compliant, CEC Compliant
- **Video Bandwidth:** Double Data Rates: up to 340MHz, HD 4K2K@30Hz
- **Digital Video Support:** HD: 480i/ 480p/ 720p/ 1080i/p and 4K2K@30Hz up to 36bit deep color
- **Video Inputs (HDMI):** (4) HDMI (HDMI or DVI digital source)
- **Audio Inputs (Audio):** (4) Audio (Analog Stereo, AUX port. 3.5mm Jack)
- **Video Outputs:**
 - **HDMI:** (4) HDMI: With Booster output 1080p up to ~98ft (35M) & 4K2K@30Hz up to ~66 ft (20M)
 - **HDBaseT™:** (4) HDBaseT™ Transmitter with PoE (optional) via category cable & RJ-45 connector)
- **Audio Outputs:**
 - **S/PDIF:** (4) S/PDIF: Multi Audio Formats 5.1 from HDMI or LPCM-2CH from Auxiliary audio
 - **ARC:** (4) ARC: TV Return Channel Audio
 - **HDMI:** (4) HDMI: Multi Audio Formats 5.1 / 7.1, MAT (MLP), Dolby Digital, Dolby TrueHD, Dolby Digital Plus, DTS, DTS-ES 6CH, DTS-HD, DTS-HD-HRA, DTS-HD Master, (PCM-2CH)
- **HDBaseT™ Control In:**
 - (4) IR In (Send IR signals to (8) rooms via HDBaseT™ Transmitters)
 - (1) ALL IR In (Send IR signals to (8) rooms via HDBaseT™ Transmitters)
- **HDBaseT™ Control Out:**
 - (4) IR Out (Link to receive IR signals from (4) rooms via HDBaseT™ Extenders)
 - (1) ALL IR Out (Link to receive IR signals from (4) rooms via HDBaseT™ Extenders)
 - (1) All Tx LAN (All switcher HDBaseT™ Transmitter Ethernet links to a HDBaseT™ Receiver)
- **HDBaseT™ Control I/O:** (4) RS-232 I/O (Control (4) rooms with RS-232 via HDBaseT™ Extender Tx)
- **Switch Controls:**
 - Select & Function buttons on front panel (Data status via LCM panel show out)
 - IR remote control (switch control)
 - (4) IR room remote controls (switch control)
 - IR external port (switch control via 3.5mm OD Jack)
 - RS-232 series interface (switch control)
 - Ethernet series interface (switch control)
- **(17) Function Control Keys:** 1. ARC, 2. AUX, 3. ALL, 4. OFF, 5. RECALL, 6. ENTER, 7. MEMORY, 8. LOCK, 9. EDID, 10. Destination button 1 thru 4, 11. Source button 1 thru 4
- **(7) EDID Management:** Select Embedded EDID Modes: Mode1: Fast Speed Start®, Mode2: H24-3D, Mode3: H24-3D-M, Mode4: H36-3D, Mode5: H36-3D-M, Mode6: 4K2K-3D, PCM-2CH, Mode7: DVI-D 1920x1200
- **Select LEARNING Mode:**
 - Learning Destination EDID to Link Source
 - Learning Mode-1 (Single Learning), Learning Mode-2 (Multiple Learning)
- **Infrared Frequency:** 38Khz
- **IR External Distance:** ~984 ft / 300M max
- **HDBaseT™ Extender Distance:** ~328 ft / 100M max
- **HDMI I/O Connector:** HDMI Type A - SMD 19pin female type
- **Temperature:** Operating Temperature 32°F - 100°F (0°C - 32°C)
- **Dimensions (LxWxH):** 19 x 9.85 x 1.76 in (482x250x44mm)
- **Rack Mount:** 1RU High 19 in rack mount #1U-440L (with rack mount)
- **Power Supply:** Power input AC100~240 VAC 50/60Hz (Power Consumption: 3500mA Max)
- **Safety Approvals:** CE, FCC, RoHs, REACH, WEEE
- **Weight:** 2.25 Kgs / 4.725 lb

As product improvements are continuous, specifications are subject to change and without notice.

FRONT PANEL

FRONT PANEL

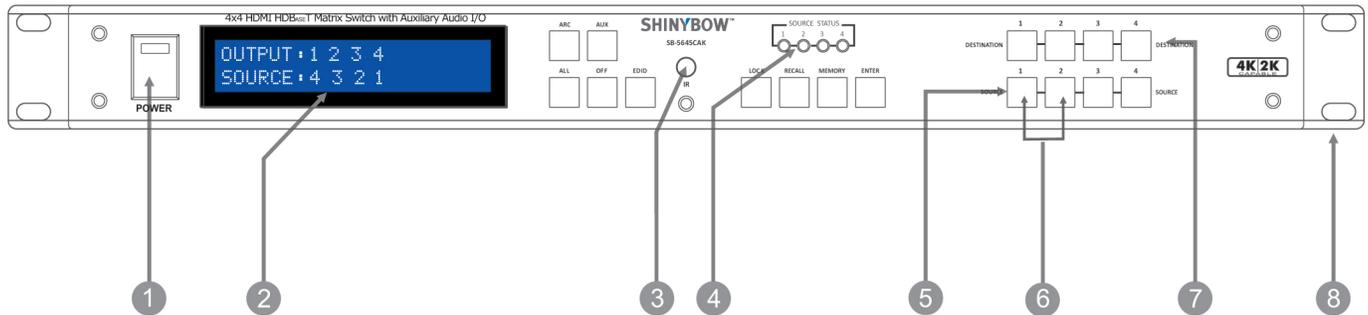

1. POWER SWITCH: The power switch turns the unit on and off. The LED will illuminate blue to indicate that the switcher is ON and is receiving power. The switcher will remember that last state during a power cycle. When power is removed and resorted, the last configuration will be evoked.

2. STATUS DISPLAY: Front panel status display shows current matrix routing configuration. This same display also shows particular configuration settings depending on your current function. In run mode (as shown above), the display shows each Output (destination) channel to which Input (source) it is assigned.

3. IR SENSOR: The IR sensor receives IR commands from the supplied remote control or third party IR emitter.

4. INPUT STATUS DISPLAY: Input sources 1 to 4 LED illuminates blue to indicate that a video source is present on that input.

5. SOURCE SELECT BUTTONS: Separate inputs 1 thru 4 select buttons are provided each source selection.

6. EDID MODE SELECT BUTTONS: Used to select EDID mode using buttons Source button #1 or #2.


7. DESTINATION SELECT BUTTONS: Separate outputs 1 thru 4 select buttons are provided for each destination assignment. Routing can be Source to Destination or one source to multiple destinations.

Example: Press Destination 1, 3, 4, then press Source 2 will route Input 2 to Output 1, 3, 4 respectfully.


8. 19 INCH EAR MOUNT PAIR: Converts desktop to 19 inch rack mount. Bracket (part # 1U-440L) INCLUDED. Image shows rack mount bracket attached.

FRONT PANEL

FRONT PANEL

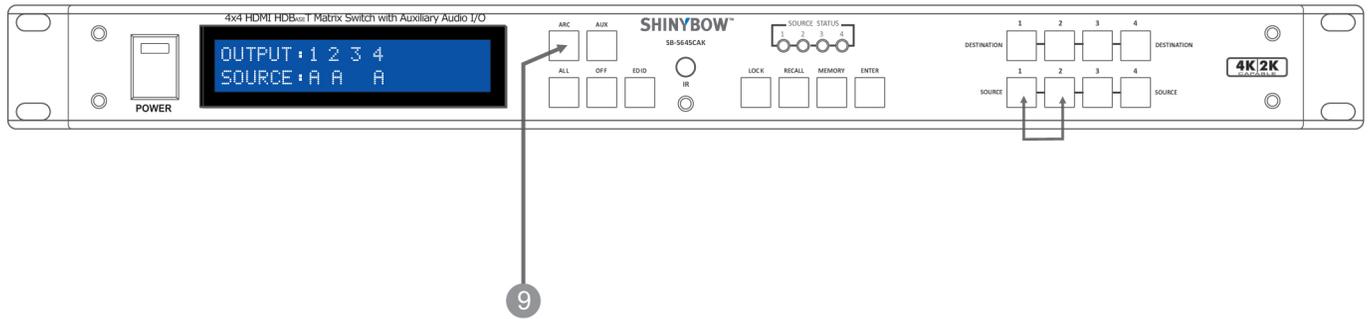

9. FUNCTION KEY - ARC:

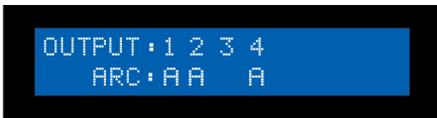

Audio Return Channel (ARC) is a feature that sends audio from the TV back down the HDMI cable to its source device, in this case, the switcher. Not all displays support ARC, check your Users Guide for additional information. (Default = ARC Disabled)

The “Audio & ARC” port can support audio from either of (3) sources.

If the Input Video/Audio Source is HDMI, the audio can be extracted from the embedded signal.

If the Input Audio Source is connected to the external Audio Input, this same audio will be present on the Audio & ARC jack.

If ARC is selected, the audio will be from the destination device (**ex:** TV).

To enable the ARC option on a specific Output, perform the following steps:

- Press the **ARC** button.
- On the Destination row, Press **1 THRU 4** (the buttons will illuminate).
- Press the **ENTER** button. The new configuration will be stored.

The front panel LCD display will now show an “A” under the Output port.

- Or press **ARC** again to cancel the operation.

To disable the ARC option on a specific Output, perform the following steps:

- Press the **ARC** button
- On the Destination row, press **1 THRU 4** (the buttons will illuminate).
- Press **ENTER**. The pre-set configuration will execute.

The front panel LCD display will be blank under the Output port.

- Or press **ARC** again to cancel the operation.


Note:

1. Operation will abort if no keys are pressed within 5 seconds.

2. The AUX Audio input only functions when a valid HDMI / DVI video signal is present. Without video, the AUX audio will not operate.

FRONT PANEL

FRONT PANEL

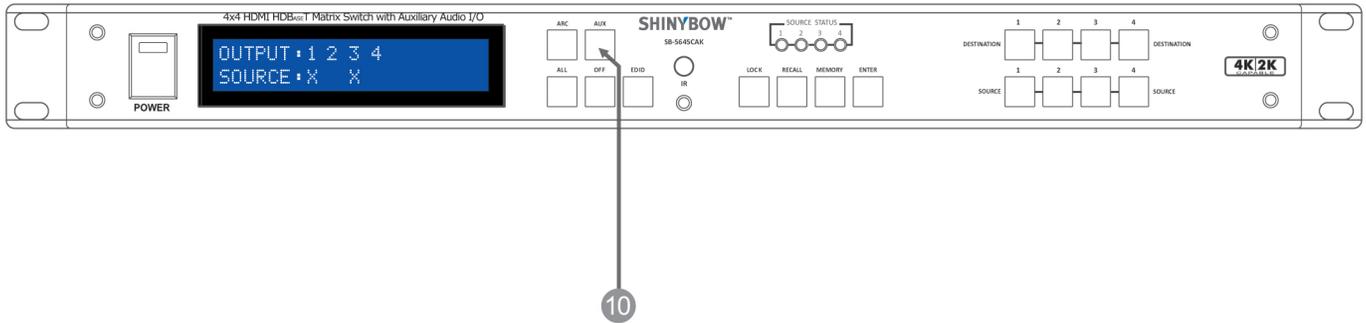

10. FUNCTION KEY - AUX (The audio additional on the “Audio / ARC” Port):



The AUX FUNCTION feature allows you to replace the embedded HDMI audio signal with an audio signal that is connected to the switchers Audio AUX Input. Using the AUX function, this replaces the audio and does not mix the audio. (Default = AUX Disabled)

To enable the AUX option on a specific Output, perform the following steps:

- Press the **AUX** button.
- On the Source row, press **1 THRU 4** (the buttons will illuminate).
- Press **ENTER**. The new configuration will be stored.

The front panel LCD display will show an “X” under the Source port.

- Or press **AUX** again to cancel the operation.

To disable the AUX option on a specific Output, perform the following steps:

- Press the **AUX** button.
- On the Source row, press **1 THRU 4** (the buttons will illuminate).
- Press **ENTER**. The pre-set configuration will execute.

The front panel LCD display will be blank under the Output port indicating the audio source is not embedded on the HDMI cable.


- Or press **AUX** again to cancel the operation.

Note:

1. Operation will abort if no keys are pressed within 5 seconds.
2. The AUX Audio input only functions when a valid HDMI / DVI video signal is present. Without video, the AUX audio will not operate.

FRONT PANEL

FRONT PANEL

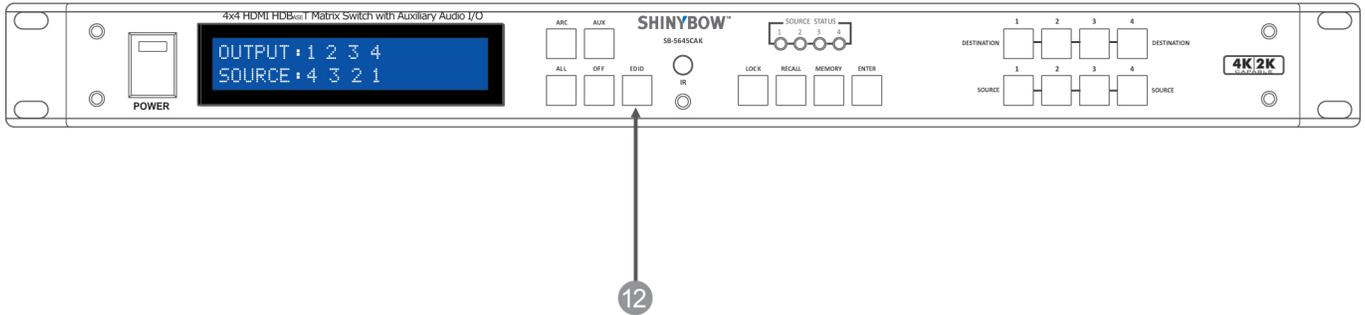

12. FUNCTION KEY - EDID (1):



Used to display change current EDID mode.

- Press **EDID** to select the new EDID mode or selection.
- Press Source row **#1** or **#2** to select EDID modes.
- Press **ENTER** to ready memory location.
- Or press **EDID** again to cancel the operation.

Operation completes.

Note: Operation will abort if no keys are pressed within 5 seconds.

FUNCTION KEY - EDID (2):



Select external LEARNING mode.


- Press **EDID** to select the new EDID mode or select
- Press **DESTINATION** again. Press the same Destination **1 THRU 4** to learn the HDBaseT™ EDID output. The EDID for HDBaseT™ (CATx) has been learned.
- Press **ENTER** to ready memory location.
- Or press **EDID** again to cancel the operation.

Operation completes.

Note: Operation will abort if no keys are pressed within 5 seconds.

FRONT PANEL

FRONT PANEL

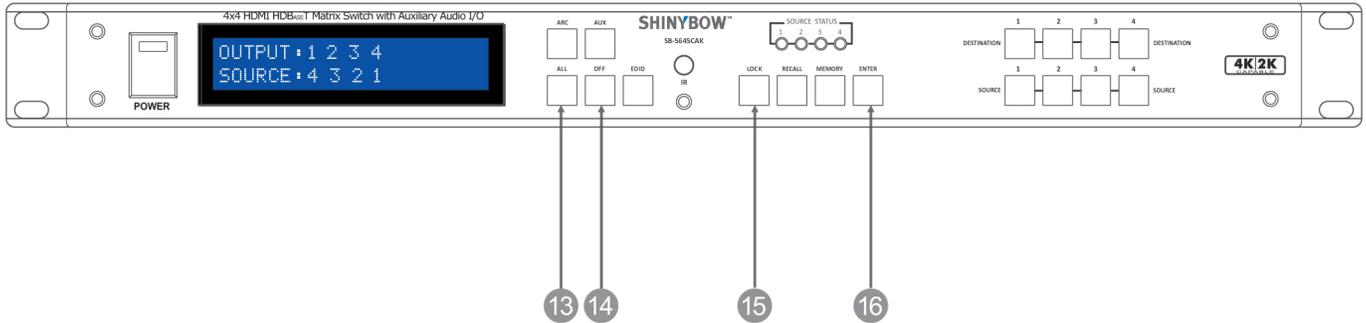

13. FUNCTION KEY - ALL:



Disables (mutes) video on all destinations OR Selects the same source to all destinations.


Option 1

- Press **ALL** followed by the **OFF** button. The display will show "0" indicating all destinations have no video selected.

Option 2

- Press **ALL** followed by Source **1 THRU 4**. The display will show the Source selected.
- Press **ENTER**. The pre-set source selection will be assigned to all destinations.

14. FUNCTION KEY - OFF:

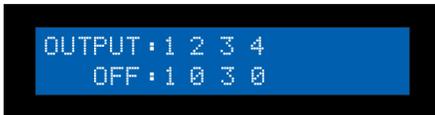

Disables (mutes) video to the selected channels or either destination.

- Press **OFF** button followed by any Destination channel.
- Press **1 THRU 4** output destinations. The display will show "0" for the selected channel indicating no video selected.

15. FUNCTION KEY - LOCK:




- Press and hold **LOCK** button for two seconds lockout the front panel.
- Press and hold **LOCK** button for two seconds to enable the front panel.


16. FUNCTION KEY - ENTER: Press **ENTER** to confirm entries.

FRONT PANEL

FRONT PANEL

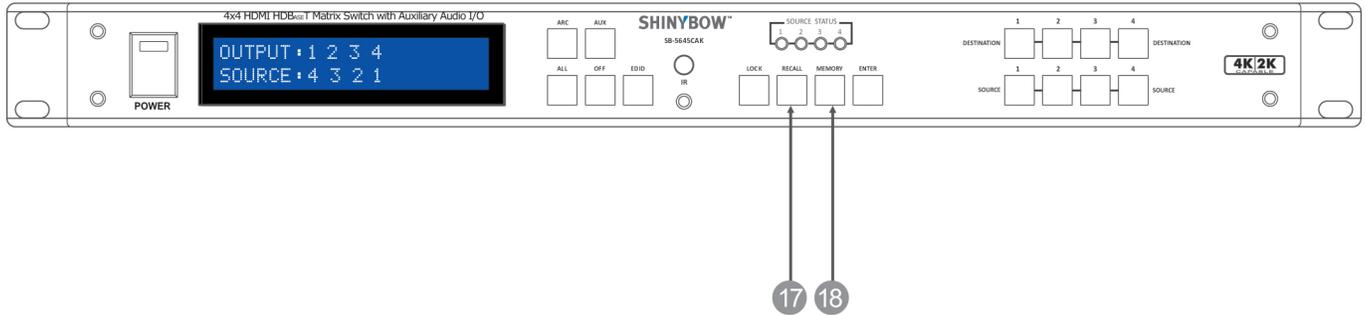

17. FUNCTION KEY - RECALL:

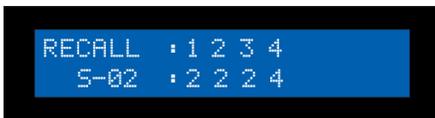

The system will show previously stored presets, up to a total of (8). Presets are stored in local memory using Source keys 1 thru 4 or Destination keys 1 thru 4 as the memory preset location.

- Press **RECALL** button.
- Press **1 THRU 4** on either the Source or Destination row.
- Press **ENTER**. The pre-set configuration will execute.

Operation completes.

Note: Operation will abort if no keys are pressed within 5 seconds.

- Or press **RECALL** again to cancel the operation.

18. FUNCTION KEY - MEMORY:



The system will show stored presets, up to a total of (8). Presets are stored in local memory using Source keys 1 thru 4 or Destination keys 1 thru 4 as the memory preset location.

- Configure desired matrices.
- Press **MEMORY** button.
- Press **1 THRU 4** on either Source or Destination row.
- Press **ENTER** to ready the memory location.
- Or press **MEMORY** again to cancel the operation.


Operation completes.

Note: Operation will abort if no keys are pressed within 5 seconds.


- Or press **MEMORY** again to cancel the operation.

BACK PANEL

BACK PANEL

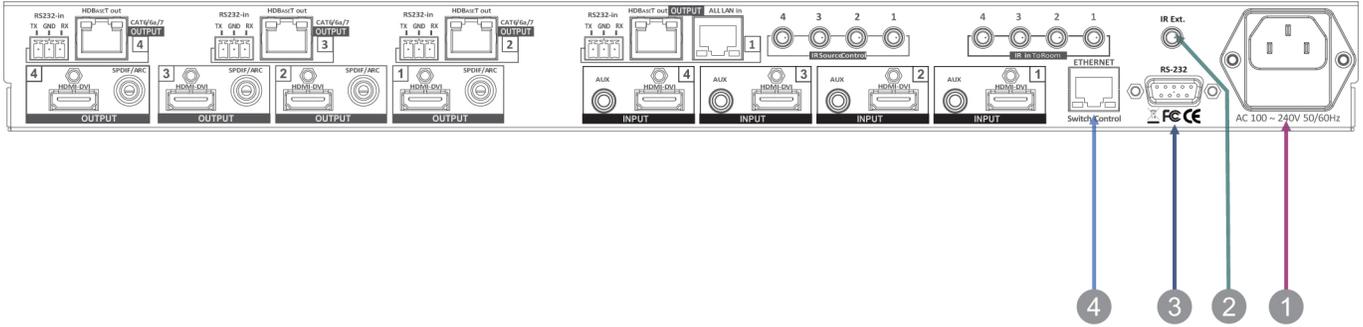

1. DC POWER INLET: The switcher is fitted with a DC power plug input connector. Ensure that the plug used is of an approved type and is of sufficient current carrying connector capacity with the correct voltage and connector polarity. 100~240Volt AC, 50/60Hz power supply.

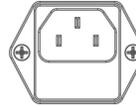

POWER SOCKET: Connector Type: IEC 60320 C13

2. IR EXTENDER CONTROL: Supports one IR extender. Extends a maximum distance ~1000 feet/300M. When you plug the external IR extender into the switcher, the front panel IR receiver remains active.

SW IR in



Switch Control

IR EXTENDER JACK: Female Jack - inner OD Ø 3.5mm

3. RS-232 CONNECTION: RS-232 control port allows for interfacing to a PC, such as a computer or touch panel control, to the switcher via the DB-9pin female connector for serial RS-232 control.

RS232




Switch Control

This port also supports F/W updates.

REMOTE PORT: D-SUB-9pin female connector

4. ETHERNET CONNECTION: ETHERNET control port allows for TCP/IP interfacing to a PC, such as a computer or touch panel control (not a web-browser), to the switcher via the RJ-45 female connector to control the switcher.

Ethernet

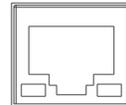

Switch Control


REMOTE PORT: Control the switcher via RJ-45 female connector

ETHERNET PORT:

Note: The Ethernet port and RS-232 port cannot be used simultaneously. Any connection to the Ethernet port will disable serial commands sent to the RS-232 port.

BACK PANEL

BACK PANEL

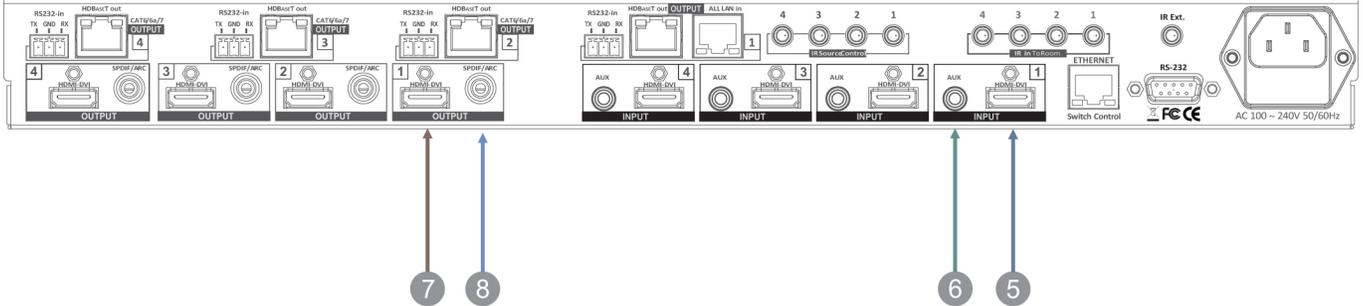

5. INPUTS - 1, 2, 3 & 4 HDMI: Connects a HDMI signal source to this Input. This HDMI port supports HDMI with embedded audio and DVI with AUX audio sources. If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.



HDMI CONNECTOR: HDMI Type A SMD 19pin female socket connector.

Note: With the proper adapters, the switcher can be used with DVI digital video signals, as it is HDCP compliant. The DVI supports Audio.

6. INPUTS - 1, 2, 3 & 4 AUDIO (Auxiliary Audio): Connects an Auxiliary Audio/ Stereo Audio signal link of AUDIO direct to the 3.5mm OD female jack. This jack supports DVI audio or Auxiliary Analog Stereo Audio sources.



AUDIO CONNECTOR: 3.5mm OD phone jack female socket connector.

Note: With the proper adapters, the switcher can be used with Auxiliary Audio signals and the DVI support Audio input.

AUDIO Connector for Inputs 1 ~ 4

Audio: The auxiliary audio (Analog Stereo Audio).

7. OUTPUTS - 1, 2, 3 & 4 HDMI: Connects a HDMI signal source to this Output. This HDMI port supports HDMI with embedded audio and DVI with AUX audio. If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.



HDMI CONNECTOR: HDMI Type A SMD 19pin female socket connector.

Note: With the proper adapters, the switcher can be used with DVI digital video signals, as it is HDCP compliant. The DVI supports Audio.

8. OUTPUTS - 1, 2, 3 & 4 S/PDIF / ARC: Connects an Auxiliary Audio, HDMI digital audio source or ARC TV return channel audio output signal link direct to the RCA jack audio connector. This port uses ARC digital audio (TV return digital audio) and S/PDIF digital audio from HDMI or Auxiliary Audio.



ARC & SPDIF AUDIO CONNECTOR: RCA female connector.


Note: With the proper adapters, the Audio can be used with HDMI Audio, DVI Audio and Auxiliary Audio signal outputs. The Auxiliary Audio uses digital LPCM-2CH output.

Use RCA connector for Outputs 1 ~ 4 Audio Output signals:

- ARC Audio (HDTV ARC Turn On)
- S/PDIF (HDMI/DVI Source Audio or Auxiliary Audio LPCM-2CH)

BACK PANEL

BACK PANEL

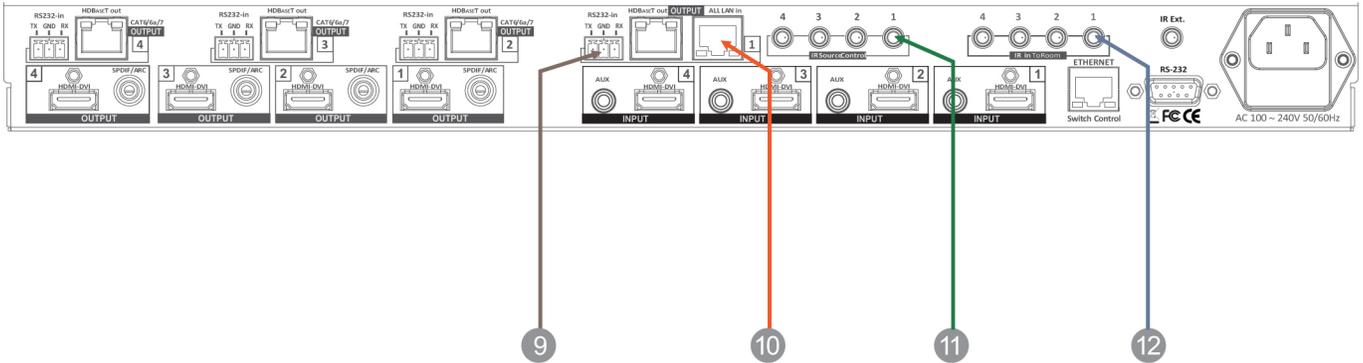

9. HDBASET™ RS-232 - 1, 2, 3 & 4 CONNECTION: (4) RS-232 control ports allow for interfacing to a PC. RS-232 control via the switchers HDBaseT™ Transmitters up to (4) rooms each via the D-sub-15p female connector control serial RS-232.



REMOTE PORT: Terminal Block female 3pin connector.

10. HDBASET™ LAN CONNECTION: All Tx LAN: Provides Ethernet (LAN) connection from the switcher to All HDBaseT™ Transmitters (ie SB-6320T).



ALL HDBASET™ TX LAN PORT CONNECTOR: HDBaseT™ Phone-Jack 8P8C, RJ-45 female socket.

LAN CONTROLS: *Note: From the switcher to the HDBaseT™ Transmitter.*

11. HDBASET™ IR OUTPUT - 1,2,3 & 4 REMOTE IR SIGNAL FROM ROOM: Receives (4) IR signals from (4) rooms via the switchers HDBaseT™ Transmitters. When you plug the switcher HDBaseT™ IR Transmitters into the external port, the room IR HDBaseT™ receiver remains active.



IR EXTENDER JACK: Female Jack - inner OD Ø 3.5mm


12. HDBASET™ IR INPUT - 1,2,3 & 4 REMOTE IR SIGNAL TO ROOM: Sends (4) IR signals to (4) rooms via the switchers HDBaseT™ Transmitters. When you plug the switchers HDBaseT™ IR Transmitters into the external port, the room IR HDBaseT™ receiver remains active.



IR EXTENDER JACK: Female Jack - inner OD Ø 3.5mm

BACK PANEL - HDBASET™ OUT & RS-232-IR TRANSMISSION


BACK PANEL-HDBASET™ I/O

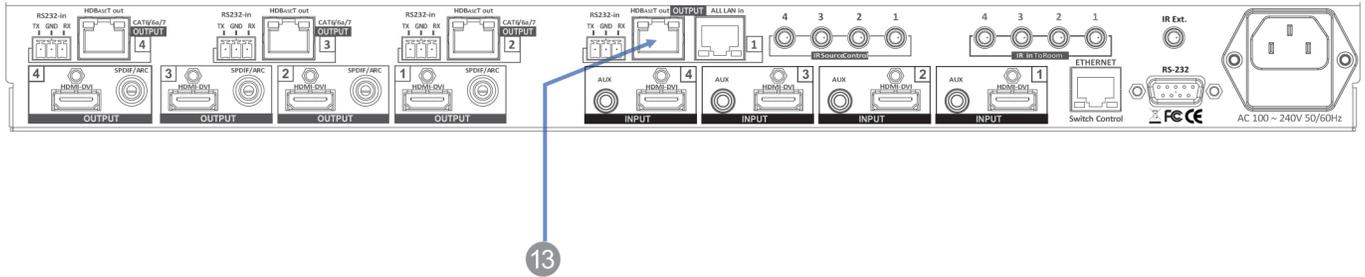

15. OUTPUT - 1, 2, 3 & 4 HDBASET™ (Transmitter): Sends (4) HDMI and control signals via the switchers (4) HDBaseT™ Transmitters to link (4) external HDBaseT™ Receivers. The switcher uses (4) HDBaseT™ Transmitter Outputs 1~4 with PoE (optional) RJ-45 via a CAT6/6a/7 category cable. Control signals with RS-232, Ethernet, IR Input/Output and PoE between the switcher and Receiver.

HDBASET™ TRANSMITTER CONNECTOR:

(4) RJ-45 Jack 8P8C female socket.

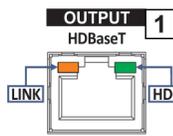

Link LED: solid = valid link
Flash = attempting to link
Off = no link established

HDBaset I/O Transmission :




Projector
RS-232 & IR




SB-6335R
HDBaset Receiver



RS-232 Pin Define:

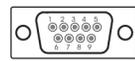

RS-232 Cable Pins out
PC 232 PINS
DB-9P , MALE plug

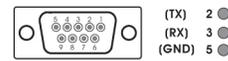

HDBaset Receiver SB-6335R
RS-232 PINS OUT
DB-9P , FEMALE socket



SB-5645CAK
4x4 HDMI-HDBaset Matrix Switcher



RS-232 & IR
TX

Category Cable Lengths via Switcher and HDBaset™ Receiver

Cable Type Resolution	Pixel clock rate (MHZ)	CAT5e (70M)	CAT6 (100M)	CAT6 (100M)
1024x768@60Hz	65.00 MHZ	Yes	Yes	Yes
1280x720p@60Hz	73.84 MHZ	Yes	Yes	Yes
1920x1080i@60Hz	74.25 MHZ	NA	NA	NA
1280x1024@60Hz	108.00 MHZ	Yes	Yes	Yes
1920x1080p@60Hz	148.50 MHZ	Yes	Yes	Yes
1920x1200@60Hz	152.90 MHZ	Yes	Yes	Yes
1600x1200@60Hz	162.00 MHZ	Yes	Yes	Yes
BD player: 1080p	174.00 MHZ	Yes	NA	Yes

REMOTE CONTROL

Before making any connections observe the following:

- Ensure the main voltage supply matches the label on the supplied plug-pack (+/-10%).
- Ensure that the power switch is OFF.
- Ensure that all system grounds (earth) are connected to a common point.
- Avoid powering equipment within a system from multiple power sources that may be separated by large distances.
- Connect all audio video sources and destination equipment.
- Power up all source and destination audio-visual sources.
- For each destination output select the appropriate input source by using the front panel input select buttons. The supplied IR remote control. Or through the RS-232 serial communications port.
- Upon powering up the switcher, it will return to its last used setting before being powered down.

REMOTE CONTROL

1. & 2. SWITCH POWER ON or OFF:

Power ON and OFF

3. DESTINATION: 1 THRU 4 OUTPUT SELECTION:


Destination button to select the output display channel

4. SOURCE: 1 THRU 4 INPUT SOURCE SELECTION:

Input 1~4 source selection buttons

5. FUNCTION KEY:

Function selection buttons
ARC AUX ALL OFF EDID LOCK
RECALL MEMORY ENTER

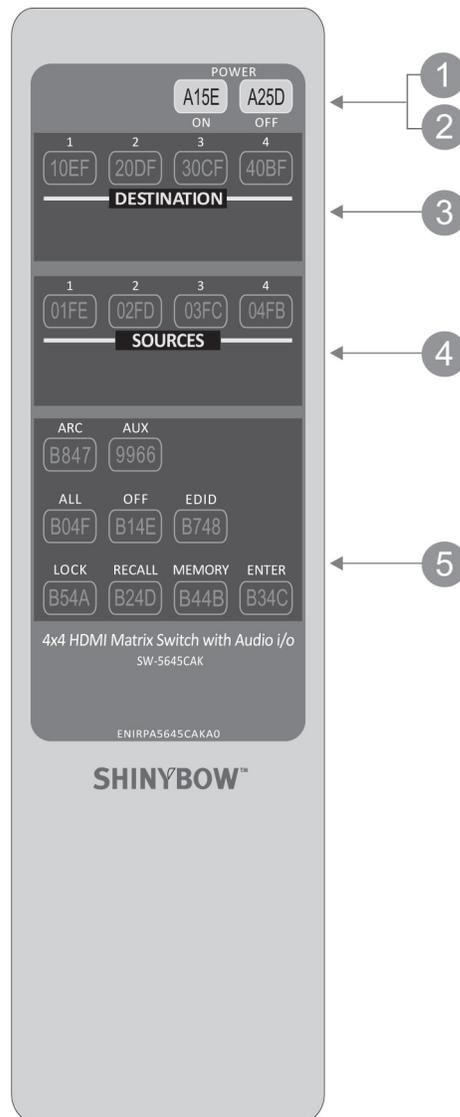

REMOTE PROTOCOL COMMANDS

IR REMOTE CUSTOM AND DATA CODES (NEC Standard)

HOW TO SETUP IR CODES :

CUSTOM CODE : 44BB

DATA CODE :

POWER ON:	44BB	A15E	LOCK:	44BB	B54A	AUX:	44BB	9966
POWER OFF:	44BB	A25D	RECALL:	44BB	B24D			
ALL:	44BB	B04F	MEMORY:	44BB	B44B			
OFF:	44BB	B14E	ENTER:	44BB	B34C			
EDID:	44BB	B748	ARC:	44BB	B847			

PRESS TV DESTINATION - # then PRESS AV SOURCE -

DESTINATION #1 : 44BB 10EF	SOURCE #1 : 44BB 01FE
DESTINATION #2 : 44BB 20DF	SOURCE #2 : 44BB 02FD
DESTINATION #3 : 44BB 30EF	SOURCE #3 : 44BB 03FC
DESTINATION #4 : 44BB 40DF	SOURCE #4 : 44BB 04FB

For Example:

Select Destination # 1 to show Source #1~4

The IR Data Code list :

Destination # 1, Source #1	44BB 10EF 44BB 01FE
Destination # 1, Source #2	44BB 10EF 44BB 02FD
Destination # 1, Source #3	44BB 10EF 44BB 03FC
Destination # 1, Source #4	44BB 10EF 44BB 04FB

ROOM REMOTE CONTROLS

ROOM REMOTE CONTROL #1 ~ #4 CUSTOM CODE AND DATA CODES

IR CUSTOM AND DATA CODES (NEC Standard)

PRESS Number To Select SOURCE

CUSTOM CODE: 44BB

ROOM-#1 Remote controller
SW-5645CAK-IR01



IR-01 DATA CODE:

SOURCE #1 : 44BB 11EE
SOURCE #2 : 44BB 12ED
SOURCE #3 : 44BB 13EC
SOURCE #4 : 44BB 14EB


ROOM-#2 Remote controller
SW-5645CAK-IR02



IR-02 DATA CODE:

SOURCE #1 : 44BB 21DE
SOURCE #2 : 44BB 22DD
SOURCE #3 : 44BB 23DC
SOURCE #4 : 44BB 24DB

ROOM-#3 Remote controller
SW-5645CAK-IR03

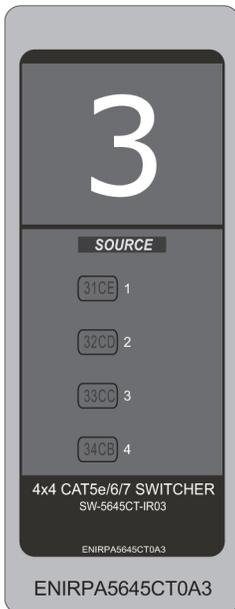

IR-03 DATA CODE:

SOURCE #1 : 44BB 31CE
SOURCE #2 : 44BB 32CD
SOURCE #3 : 44BB 33CC
SOURCE #4 : 44BB 34CB

ROOM-#4 Remote controller
SW-5645CAK-IR04



IR-04 DATA CODE:

SOURCE #1 : 44BB 41BE
SOURCE #2 : 44BB 42BD
SOURCE #3 : 44BB 43BC
SOURCE #4 : 44BB 44BB

ETHERNET & RS-232 SERIAL INTERFACE

ETHERNET SERIAL INTERFACE CONNECT A PC OR CONTROL SYSTEM. VERSION COMPATIBLE V2.0


For a complete list of commands, please reference external document extended Ethernet Protocol Instruction Manual.

Example of command strings to select Inputs:

FUNCTION	COMMAND	VARIABLES
Select source	Source xxx;	xxx = Input Channel (001=Source1, 002=Source2, etc.)

COMMAND	EXAMPLE RESPONSE	DESCRIPTION
Source 001;	Source 001#ok;	Select source number 1

Ethernet

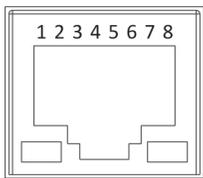

Note:

Control the switcher

SPD: Speed

LINK: Ethernet link

RJ-45 Female 8P-8 Connector

ETHERNET SERIAL INTERFACE


Pin	Ethernet	Reference
1	TXOP	TX +
2	TXON	TX -
3	RXIP	RX +
4	NC	
5	NC	
6	RXIN	RX -
7	NC	
8	GND	

ETHERNET TCP/IP PROTOCOL COMMANDS (ETHERNET / RS-232 CONTROL DRIVER V2.0.1)

*** The Ethernet port and RS-232 port cannot be used simultaneously. Any connection to the Ethernet Control port will disable serial commands send to the RS-232 port.***

RS-232 CONFIGURATION

RS-232 cable is a straight thru cable and not null-modem

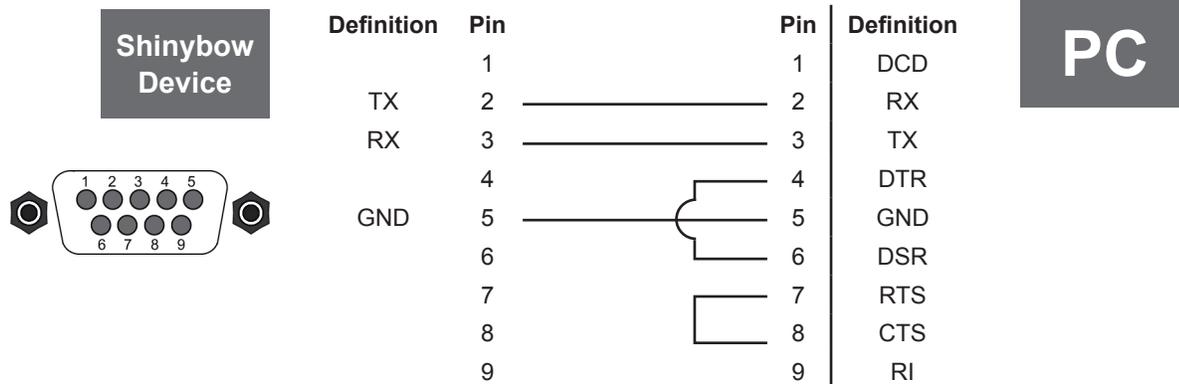

RS-232 PROTOCOL COMMANDS (RS-232 CONTROL DRIVER V2.0.1)

The ShinybowUSA switcher can be controlled via the TCP/IP serial control port to allow for interfacing to a PC, or similar third party control system.


The serial communication parameters are 9600 baud, 8 bit, No Parity and 1 stop bit - this is often referred to as 9600 8N1. When the unit recognizes a complete command it will perform the requested action - there is no delimiter character required.

EDID FUNCTION - SYSTEM RESET/FACTORY RESET

SYSTEM RESET

SYSTEM RESET	RETURN SWITCH TO FACTORY DEFAULTS
<p>Press RECALL > OFF > ENTER</p>   	<p>RESET to Factory Default</p> <ol style="list-style-type: none"> 1. Press RECALL button: The LCM will show the current stored presets status. 2. Press OFF button: The LCM will show “SYSTEM RESET” 3. Press ENTER button: To confirm entries. The switch will reset all customizable values back to factory defaults. You must POWER CYCLE the switch for the new values to take effect.
<p>NOTE: Factory Reset Defaults to:</p> <ol style="list-style-type: none"> 1. Source Destination will be set to 1-1, 2-2, 3-3, etc. 2. Switch matrices stored in memory will be cleared. 3. Lock function will return to Un-Locked. 4. AUX function will disable and return to UN-AUX (On Select Models). 5. ARC function will disable and return to SPDIF as the Output (On Select Models). 6. EDID will return to FSS® (1080p-2ch Mode). 7. Ethernet port will return to DHCP=ENABLED. 	

RESET EDID

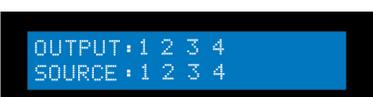EDID RESET	PROCEDURE
<p>From the Front Panel: Press EDID > RECALL > OFF > ENTER</p> 	<p>RESET EDID</p> <p>Press EDID.</p> <p>Press RECALL.</p> <p>Press OFF. The display should show Reset EDID.</p> <p>Press ENTER.</p>
<p>LEARNING MODE 2</p> <p>Press EDID > OFF > DESTINATIONS > ENTER</p> <p>The EDID for HDMI has been passed from the Destination port to the Source port.</p>    	<p>SETTING EDID TO LEARNING MODE 2</p> <ol style="list-style-type: none"> 1. Press EDID button: The LCM will show the current EDID status. 2. Press OFF button: Does the OFF button stay illuminated? <ul style="list-style-type: none"> *If Yes: Press ALL the Destination buttons individually so they illuminate blue. The switcher will LEARN the destination HDMI EDID and pass to the selected source. The switcher will Enable or Disable HDMI EDID for the selected source. 3. Press ENTER to confirm changes. The LCM will return to the default screen showing selected matrix routing status. This puts you in Learning Mode 2. <ul style="list-style-type: none"> *If No: You might need a f/w update.

EDID FUNCTION

EDID FUNCTION FOR HDMI MATRIX SWITCHER

EDID SETUP	To Change The EDID Setup
Step 1. Press the EDID button	The display will show the currently selected EDID mode.
Step 2. Press SOURCE #1 OR #2 button row	The button will flash blue and the display will show the current Embedded EDID Status.
Step 3. Press the ENTER button	To set EDID mode. The switcher will return to operation mode.
Operation will abort if no keys are pressed within 5 seconds.	
EMBEDDED EDID MODES	Total 7 EDID Modes
Embedded EDID Setup Press EDID > SOURCE > ENTER SOURCE #1 or SOURCE #2 	To select Embedded EDID mode or LEARNING mode. Repeatedly pressing the SOURCE 1 button will cycle up thru the options. Repeatedly pressing the SOURCE 2 button will cycle down thru the options. Embedded EDID: Mode 1 : FSS® Mode 2 : H24-3D Mode 3 : H24-3D-M Mode 4 : H36-3D Mode 5 : H36-3D-M Mode 6 : 4K2K (24/30Hz) Mode 7 : DVI-D 1920x1200-60Hz

EDID FUNCTION FOR HDMI MATRIX SWITCHER

RESET	EDID Return To Factory Default
How to RESET EDID mode Press EDID > RECALL > ENTER  	To RESET to FACTORY DEFAULT (1080p-2CH). Press EDID button: The LCM will show the current EDID status. Press RECALL button: The LCM will show the RESET EDID . Press ENTER to confirm entries. The EDID will return to FSS® mode and resolution 1080p-2CH.
EDID STATUS	To View The Current EDID Status
Step 1. Press EDID button	The button will flash blue and the display will show the current Embedded EDID Status.
Step 2. Press EDID button	To exit.
HOW TO SETUP FSS® FUNCTION	Fast Speed Start®
Step 1. Press the DESTINATION #1~4 button row Then Press the SOURCE #1~4 button row	To setup and Install all devices.
Step 2. Press EDID button	Select a optimum status of Embedded EDID mode.
Step 3. Press ENTER button	To confirm entries.
Step 4. Press EDID button	To select the EDID FSS® mode.
Step 5. Press ENTER button	To confirm entries.

EDID FUNCTION

EDID FUNCTION FOR HDMI MATRIX SWITCHER	
Mode 1. FSS® (Fast Speed Start®) 	Fast Speed Start® mode shortens the startup time of the switcher. Selecting this mode does not force the EDID setup to be cancelled. Users may first select one EDID mode from mode 2 to 3, and then select mode 1 for fast speed start®.
Mode 2. H24-3D (1080p-24 bits) 	Audio Support: PCM 2CH
Mode 3. H24-3D-M (1080p-24 bits) 	Audio Support: MAT(MLP) 7.1CH, PCM-2CH, One Bit Audio 2CH, AC-3 5.1CH, DTS 5.1CH, PCM 7.1CH, Dolby Digital + 7.1CH, DTS-HD 7.1CH
Mode 4. H36-3D (1080p-36 bits) 	Audio Support: PCM 2CH
Mode 5. H36-3D-M (1080p-36 bits) 	Audio Support: MAT(MLP) 7.1CH, PCM 2CH, One Bit Audio 2CH, AC-3 5.1CH, DTS 5.1CH, PCM 7.1CH, Dolby Digital + 7.1CH, DTS-HD 7.1CH
Mode 6. 4K2K (24/30Hz) 	HDMI Support: 4K2K-3D, PCM 2CH (3860x2160-24/30Hz) Audio Support: PCM 2CH
Mode 7. 1920x1200-60Hz (DVI-D) 	DVI Support: DVI-D 1920 x 1200 60Hz

EDID FUNCTION

LEARNING EDID SINGLE TO SINGLE	Learning Destination #2 EDID To Source #3
Step 1. Press EDID button	The button will flash blue and the display will show the current Embedded EDID Status.
Step 2. Press the DESTINATION #2 button row	Copy the Destination #2 Display EDID.
Step 3. Press the SOURCE #3 button row	Learning the Destination #2 EDID To Source # 3.
Step 4. Press ENTER button	To confirm entries.
LEARNING EDID SINGLE TO MULTIPLE	Learning Destination EDID Link To The Majority Sources
Step 1. Press EDID button	The button will flash blue and the display will show the current Embedded EDID Status.
Step 2. Press the DESTINATION #2 button row	Copy any 1~2 Destinations EDID.
Step 3. Press the SOURCE #1, #3, #4 button row	Learning the Destination EDID link to source #1, #3, #4.
Step 4. Press ENTER button	To confirm entries.
LEARNING EDID SINGLE TO ALL	Learning Destination EDID Link To All Sources
Step 1. Press EDID button	The button will flash blue and the display will show the current Embedded EDID Status.
Step 2. Press destination button 1THRU 2	Learning anyone 1~2 Destination EDID to all sources.
Step 3. Press ALL button	Learning selected destination EDID to all sources.
Step 4. Press ENTER button	To confirm entries.
SINGLE LEARNING #1 DEFINITION	Single Learning EDID From Destination To Source
<p>1. The switcher will LEARN the destination EDID and pass to the selected source.</p> <p>2. To set up learning between a single destination and single source: Press EDID button > Press DESTINATION 1 THRU 4 > Press SOURCE 1 THRU 4 > Press ENTER to confirm. The switcher will learn the destination EDID for the source device.</p> <p>3. To set up learning between a single destination and multiple sources: Press EDID button > Press DESTINATION 1 THRU 4 > Press the majority SOURCES 1 THRU 4 > Press ENTER. The switcher will learn the single destination EDID to many source devices.</p> <p>4. How to Learn single destinations with all sources. Press EDID button > Press ALL button > Press ENTER to confirm.</p>	
MULTIPLE LEARNING #2 DEFINITION	Multiple Learning EDID From Destination To Source
<p>1. The switcher will LEARN multiple destination EDID and pass to the selected source.</p> <p>2. To set up multiple learning between a multiple destinations and multiple source: Press EDID button > Press OFF button > Press Destination 1THRU 4 > Press ENTER to confirm. Switcher will learn destination EDIDs to the source devices.</p> <p>3. When the Source has “Learned” the EDID data from a destination, it will save that EDID information into EPROM and the EDID data will not change. To change a saved HDMI EDID information, you have to select a new LEARNING destination to source or Disable the LEARNING.</p>	

EDID FUNCTION

EDID MULTIPLE LEARNING MODE-1

SINGLE LEARNING EDID #1	Learning EDID From Destination To Source
<p>Single Learning EDID mode #1 setup Press EDID > DESTINATION > SOURCE > ENTER</p> 	<p>Press EDID > DESTINATION Button: The LCM will show LEARNING. The switcher will LEARN the HDMI EDID destination and pass to the selected source. Learning EDID setup for HDMI. Key Press Sequence: EDID > DESTINATION # > SOURCE # > ENTER The EDID for HDMI has been learned.</p>
<p>Single Learning EDID Mode #1 setup Press EDID > DESTINATION > DESTINATION > SOURCE > ENTER</p> 	<p>The switcher will LEARN the HDBaseT™ CATx EDID destination and pass to the selected source. Learning EDID setup for HDBaseT™ CATx. Key Press Sequence: EDID > DESTINATION # > DESTINATION # > SOURCE # > ENTER Again, Press the same DESTINATION # to learn HDBaseT™ CATx EDID. The EDID for HDBaseT™ CATx has been learned.</p>
<p>NOTE: The already learned EDID cannot be modified. You can only rebuild a new Learning EDID. For Example: When the Source has “Learned” the EDID data from a destination, It will save that EDID information into EPROM and the EDID data cannot change. Please select new learning destination to sources or change to one of the embedded EDID modes when you want to remove the learning EDID memory from EPROM.</p>	

EDID MULTIPLE LEARNING MODE-2


The MULTIPLE LEARNING MODE-2 feature is part of a firmware update released after JUNE 2014. If you do not see the MULTIPLE LEARNING MODE-2 feature then you do not have the latest firmware. You should contact your place of purchase for availability of a firmware update. Not all devices are capable of a firmware update. Firmware update requires a PC with OS Windows XP or WIN7 and an RS-232 port (or USB to RS-232). Customer is responsible for implementing a firmware update and accepts all risks. Others limitations may apply.

LEARNING EDID #2	Passing EDID From Destination To Source
<p>Multiple Learning mode #2 EDID setup Press EDID > OFF > DESTINATION #1 THRU #4 > ENTER</p>	<p>The EDID for HDMI has been Learned from the Destination port to the Source port.</p> <ol style="list-style-type: none"> Press EDID button  <p>The LCM will show the current EDID status.</p> Press OFF button  <p>The LCM will show the current EDID LEARN status.</p> Press DESTINATION button  <p>Press DESTINATION #1 THRU #4 The switcher will LEARN the destination HDMI EDID and pass to the selected source. Switcher will Enable or Disable HDMI EDID for the selected source.</p> Press ENTER button  <p>Press ENTER to confirm changes. The LCM will return to the default screen showing selected matrix routing status.</p>

NOTE: When the Source has “Learned” the EDID data from a destination, it will save that EDID information into EPROM and the EDID data will not change. To change a saved HDMI EDID information, you have to select a new LEARNING destination to source or Disable the LEARNING


IR EXTENDER

1. SB-100 IR 300M Receiver

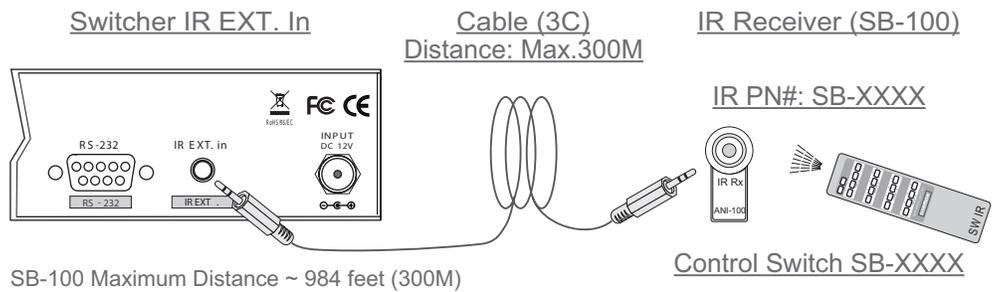

The SB-100 IR Receiver is required when using the port "ALL in" Jack.


2. SB-100C IR 2M Receiver

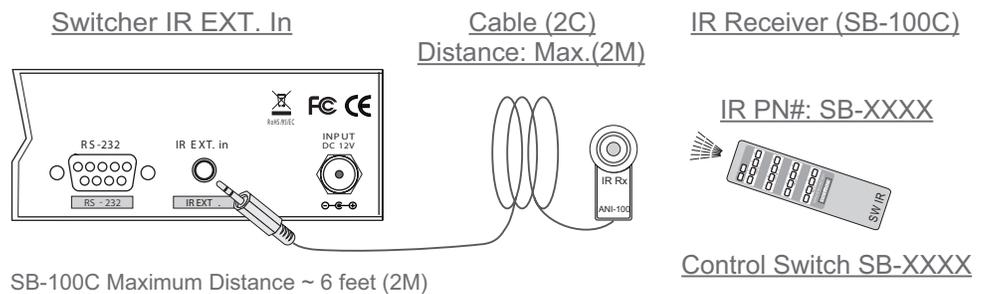

The SB-100C IR Receiver will not function on the port "ALL in" Jack.


*** When you plug the External IR extender into the switcher, the front panel IR receiver remains active. ***

Pin configuration for IR 984 feet (300M) Extender Receiver such as SB-100 compatible

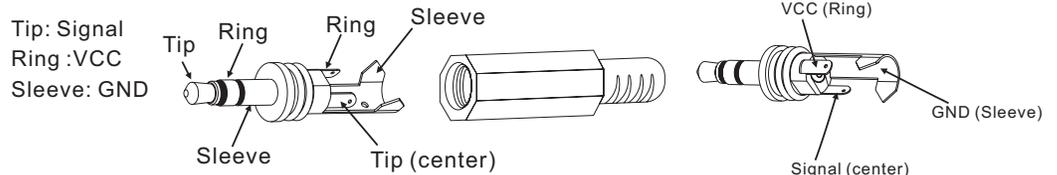

SB-100 Receiver and SB-101 Transmitter The DISTANCE maximum ~ 984 feet (300M)

Pin configuration for IR Receiver 6 feet (2M) cable such as SB-100C compatible

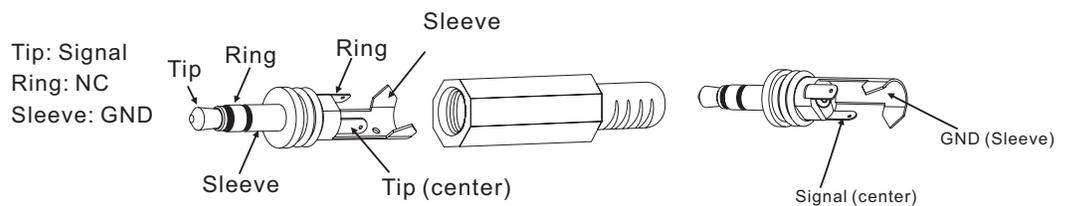

SB-100 Receiver and SB-101C Transmitter The DISTANCE maximum ~ 984 feet (300M)


Note: The External IR jack has voltage on the "Ring" portion of a 3-conductor plug. You must use a 3-conductor plug (aka: stereo plug). Using a 2-conductor plug will short out the power supply. Always make connections with the switcher power off.

TYPICAL APPLICATION

INSTALLING DIAGRAM

Samples Connection:

1. Using external IR, RS-232 or Ethernet commands to control the switcher SB-5645CAK via PC or SB-100 IR receivers to transmit the SB-5645CAK's IR signal.
2. Audio output link ARC from TV return channel, HDMI audio source or mixing Auxiliary audio.

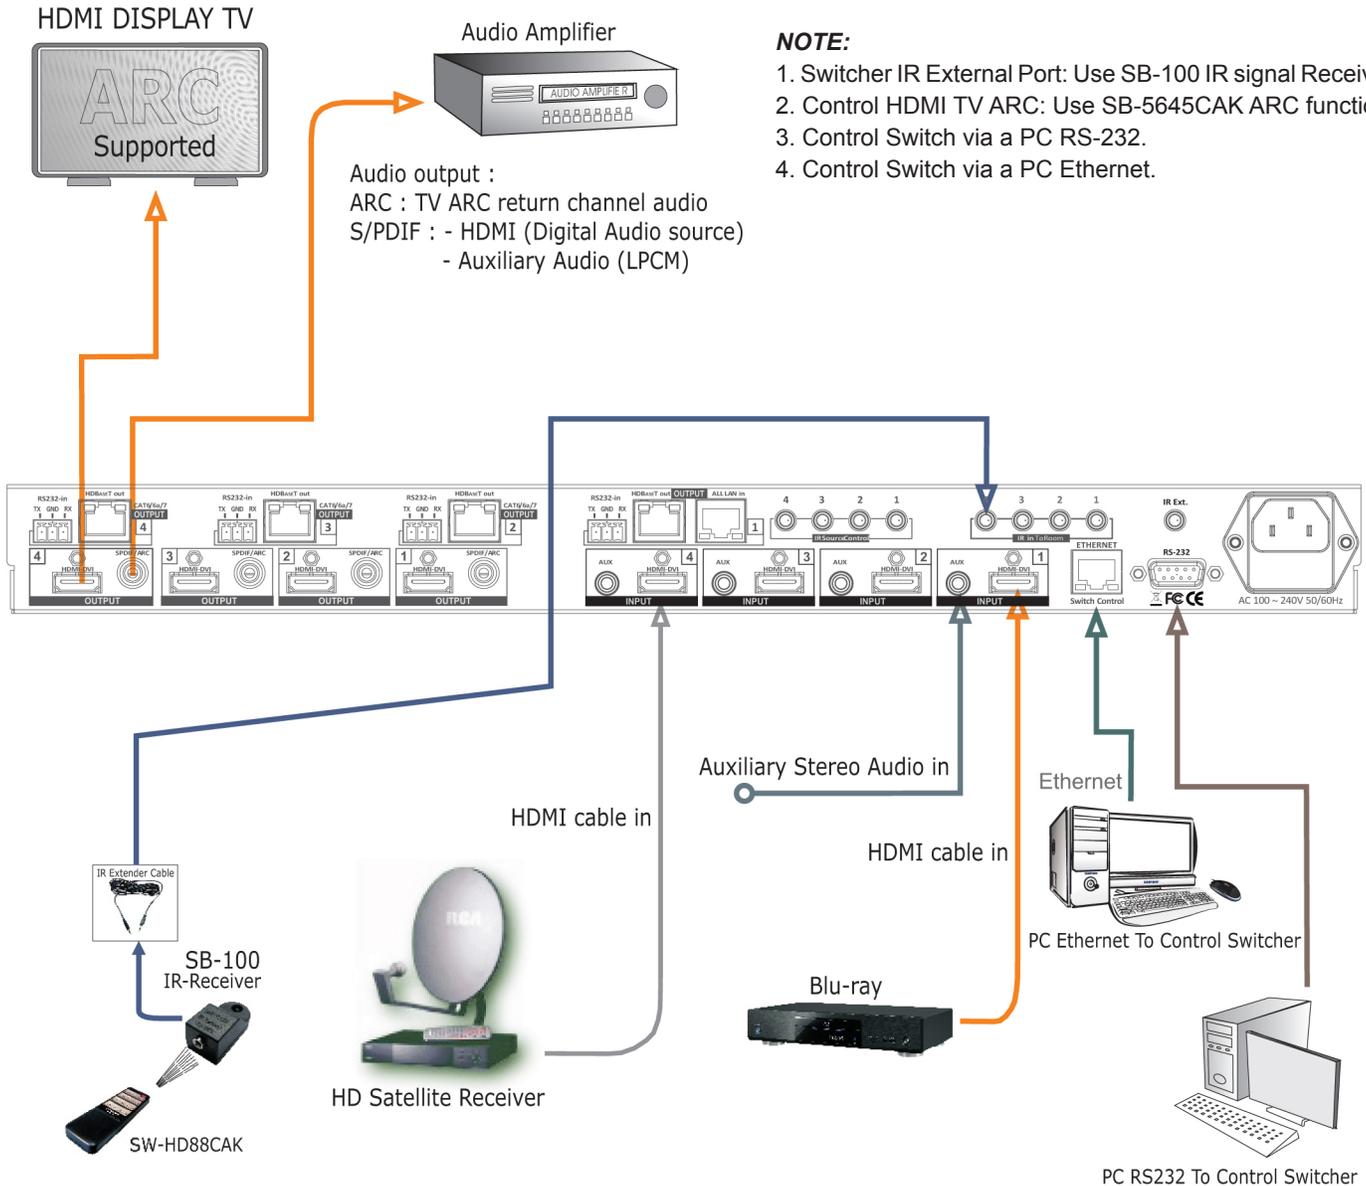

NOTE:

1. Switcher IR External Port: Use SB-100 IR signal Receiver.
2. Control HDMI TV ARC: Use SB-5645CAK ARC function.
3. Control Switch via a PC RS-232.
4. Control Switch via a PC Ethernet.

Audio output :
 ARC : TV ARC return channel audio
 S/PDIF : - HDMI (Digital Audio source)
 - Auxiliary Audio (LPCM)


Application RS-232, IR and Ethernet to control the switcher.

TYPICAL APPLICATION

INSTALLING DIAGRAM

Sample Connection:

Using the SB-5645CAK HDBaseT™ Transmitter and one HDBaseT™ Receiver (SB-6335R) to control a projector via RS-232 or IR signals.

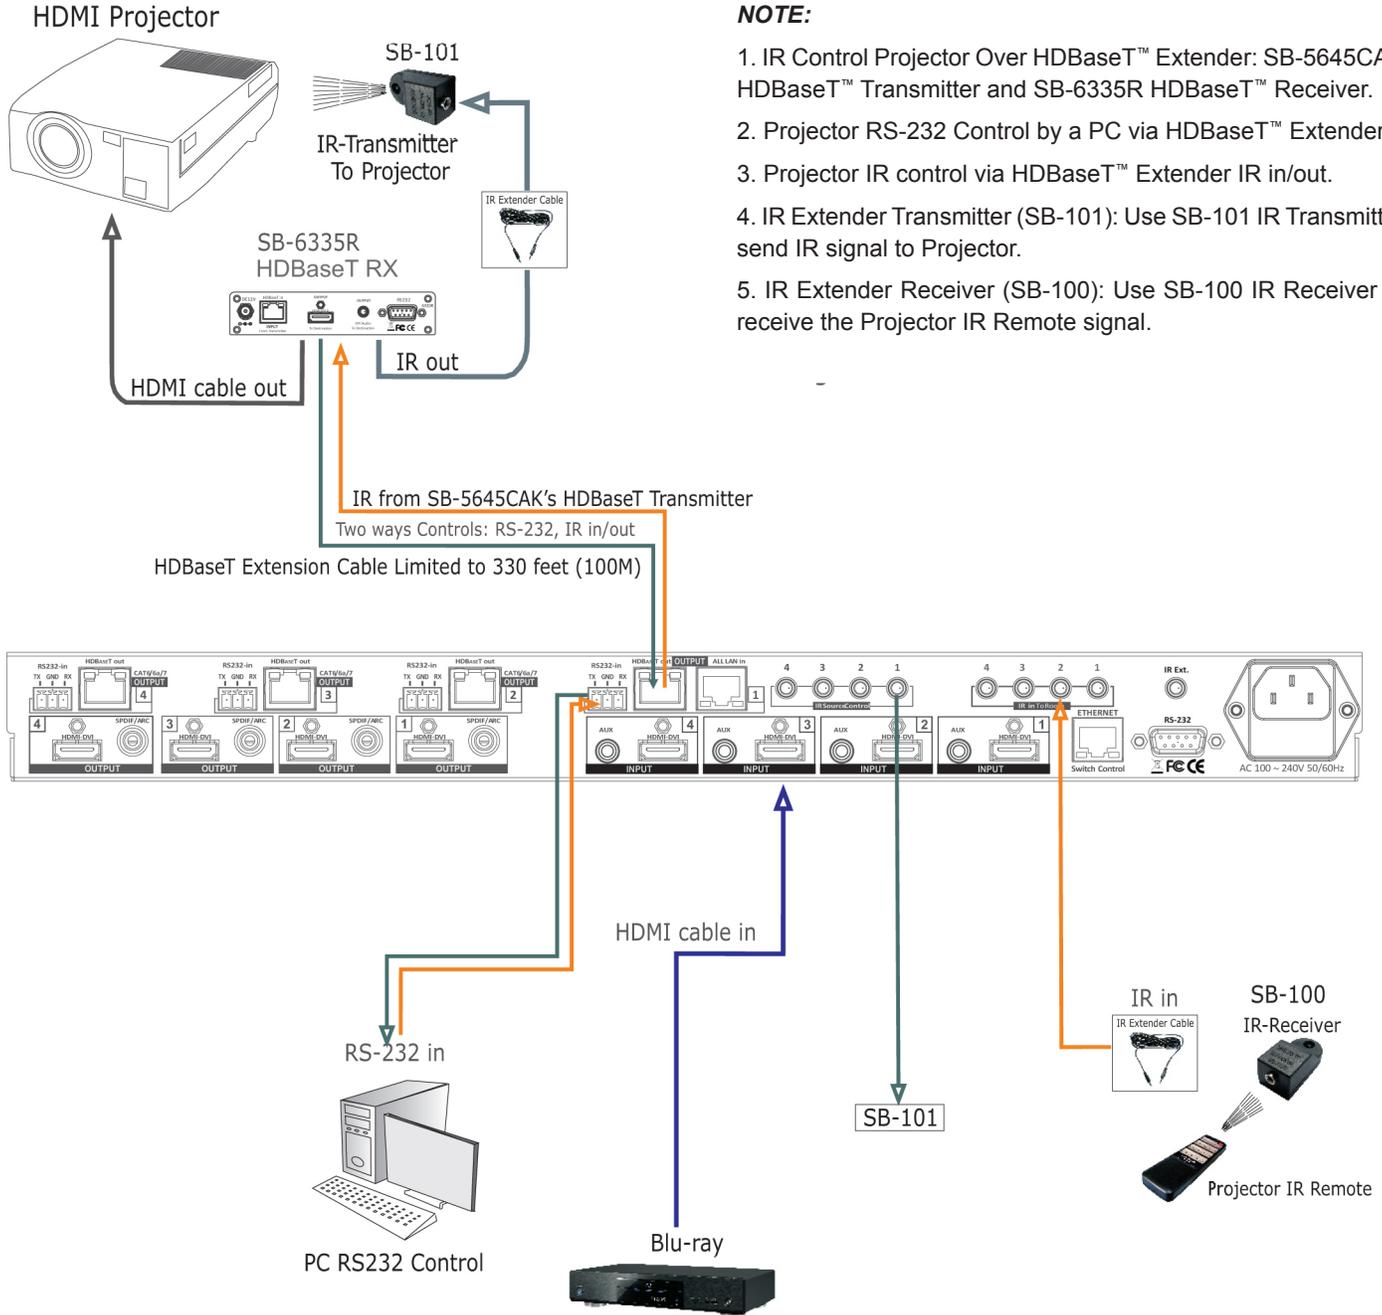


TYPICAL APPLICATION

HDBASET™ APPLICATION 4X4 IR MATRIX ROUTING SOURCE CONTROL

Sample Connection:

HDBaseT™ IR return (From Room) will follow the Video Source. **In this example:** the IR remote for the projector is connected to port #2 “IR To Room.” From the SB-6335R, the IR Output is connected to the projector. This allows remote operation of the projector from the SB-5645CAK. The IR control for source devices uses the same port number on “IR Source” as the Source device connection. The Blu-Ray player is connected to Input port #4. Likewise, the IR to control the Blu-Ray player is connected to port #5.

IR Source device control will follow Video Source selected. Connect the IR emitter SB-101 or SB-101C to the corresponding port number as the source device, video Input port.

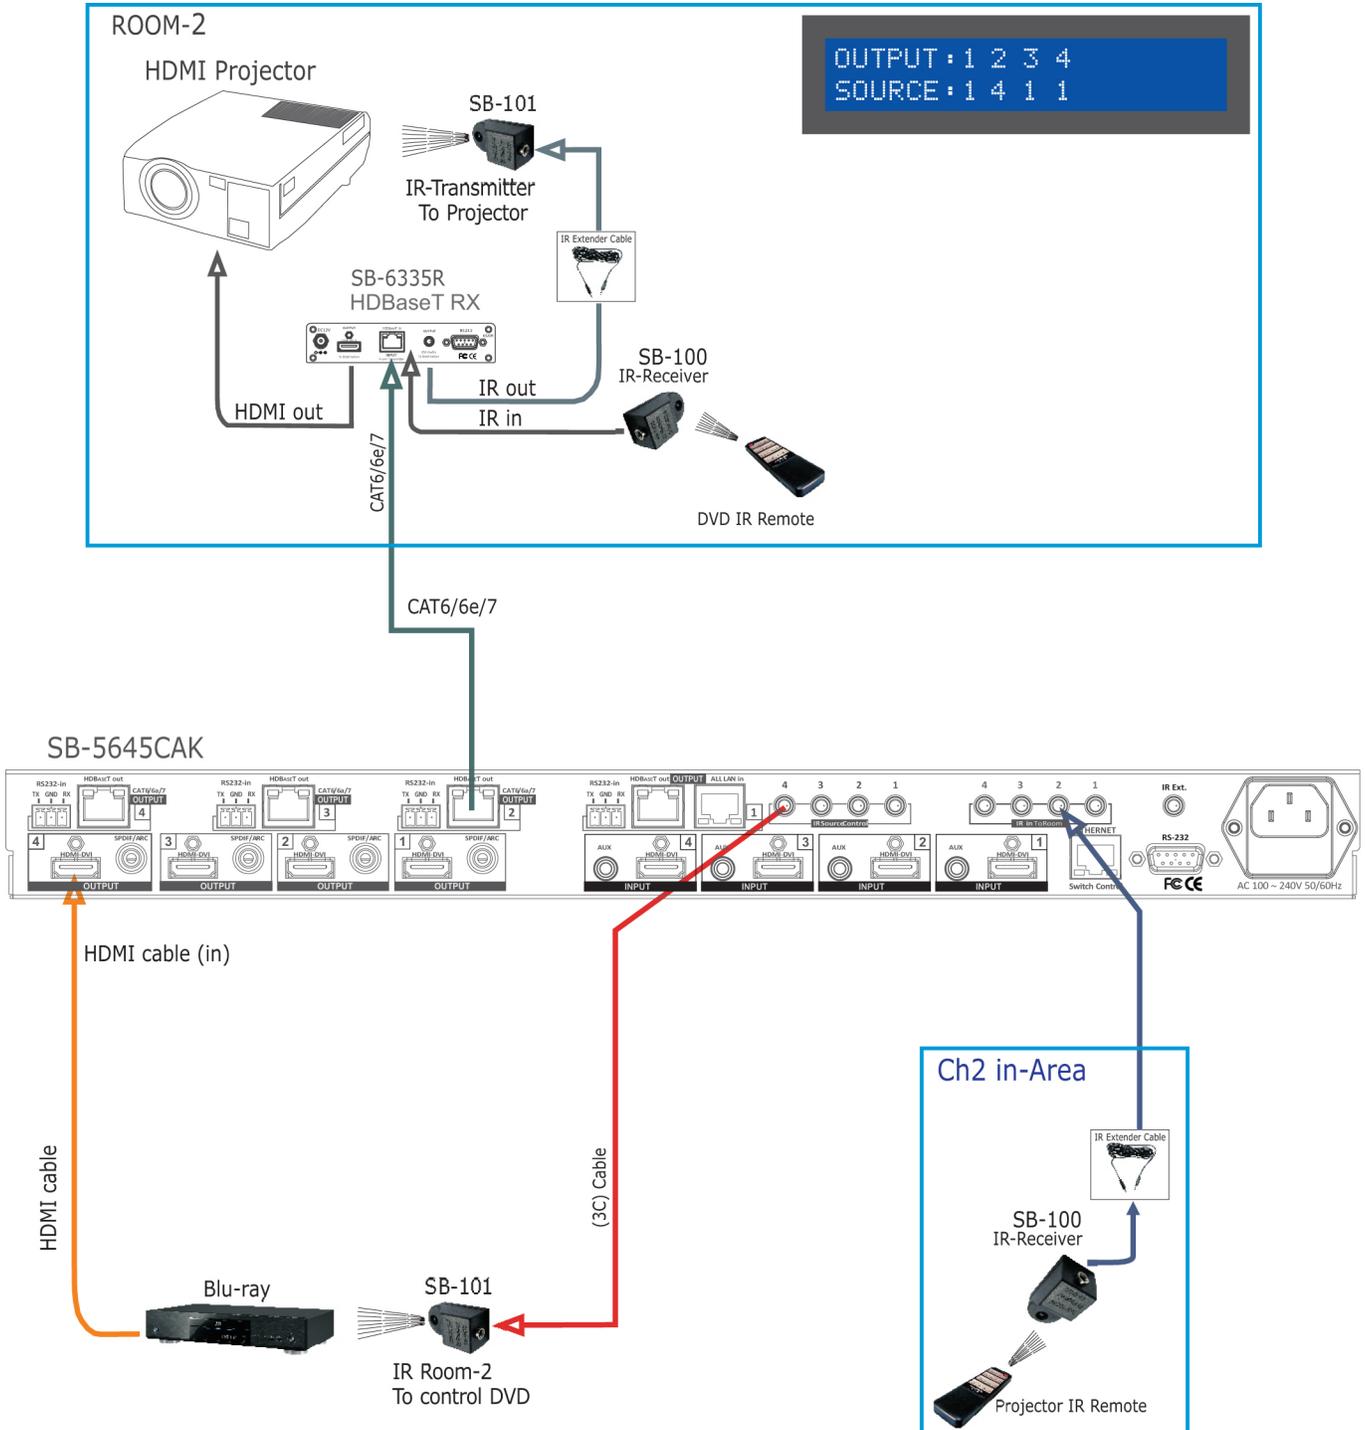


APPLICATION

Optional 19 inch Rack Mount Bracket for SB-6335T and/or SB-6335R:

Complete 19 inch 4U rack mount of SB-6069

Install Application: SB-6335T/R

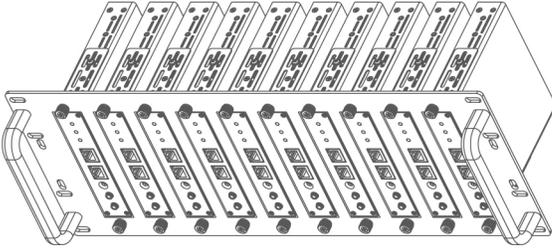


SB-6069 (optional)

SB-6335TR 19 INCH 4U-10P RACK MOUNT

1. Model No.: #4U-10p-M130MM

SB-6335T/R 4U Ear mount pairs

Parts No.: MEER6069ER13000

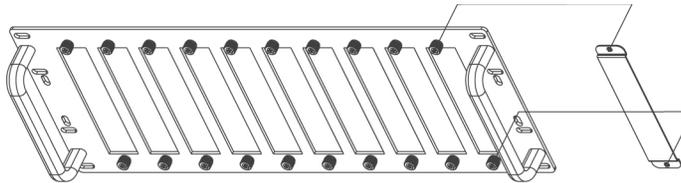

2. Model No.: #4U-10p-M130MM-COV

SB-6320T/R 4U Ear mount pairs

Parts No.: MEER6069ER11000





SB-6335T/R: Wall mount accessories

3. Model No.: #WM-1INCH-130MM

SB-6335T/R Wall mount pairs



Parts No.: MEER6320ER11000

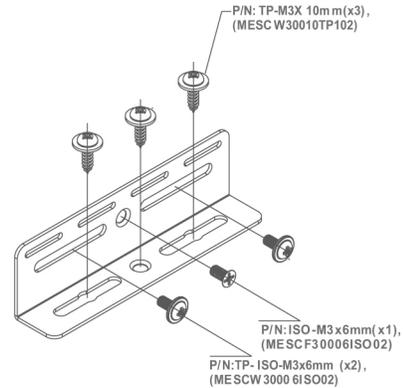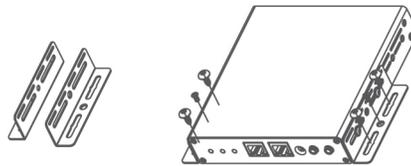

4. Model No.: #4U-10p-M130MM-EAR

SB-6335T/R 4U Ear mount pairs

Parts No.: MEER6320ER11001

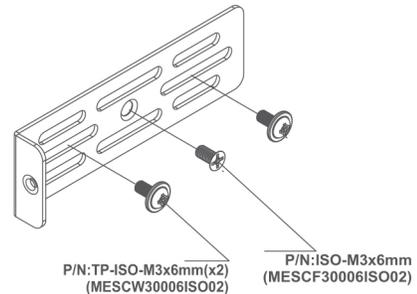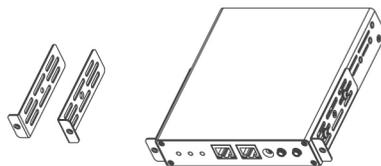

Supports HDBaseT™ Extender with Transmitter and Receiver via HDBaseT™ CAT6/6a/7 cable.

RACKMOUNT (OPTIONAL)


SB-6075A: SB-6335T/R 19 INCH 1RU-1UNIT RACK MOUNT

Model No.: #1U-1p-L440-44MM



SB-6075B: SB-6335T/R 19 INCH 1RU-2UNIT RACK MOUNT

Model No.: #1U-2p-L440-44MM

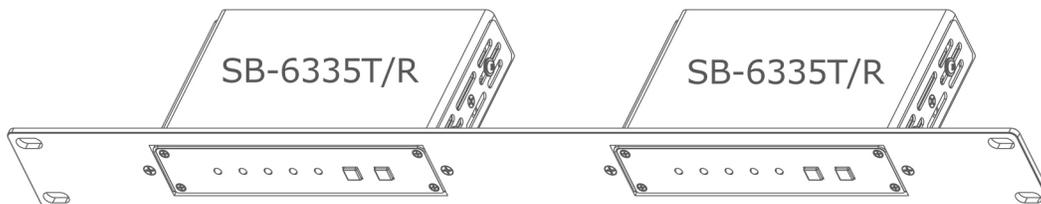


SB-6069: SB-6335T/R 19 INCH 4U-10P RACK MOUNT

Model No.: #4U-10p-L130MM

SB-6335T/R 4U Ear mount pairs

Parts No.: MEER6069ER13000

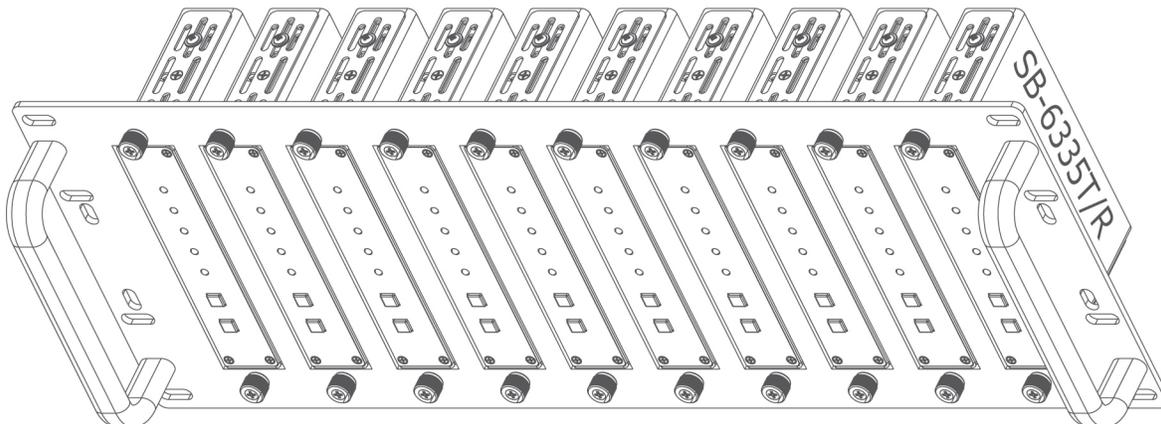

LIMITED WARRANTY

PLEASE READ THE FOLLOWING TERMS AND CONDITIONS CAREFULLY BEFORE USING THIS HARDWARE, COMPONENTS AND SOFTWARE PROVIDED BY, THROUGH OR UNDER SHINYBOWUSA, INC (COLLECTIVELY, THE "PRODUCT"). By using installing or using the Product, you unconditionally signify your agreement to these Terms and Conditions. If you do not agree to these Terms and Conditions, do not use the Product and return the Product to SHINYBOWUSA, Inc. at the return address set forth on the Product's packing label at your expense. SHINYBOWUSA, Inc. may modify these Terms and Conditions at anytime, without notice to you.

RESTRICTIONS ON USE OF THE PRODUCT

It is your responsibility to read and understand the installation and operation instructions, both verbal and in writing, provided to you with respect to the Product. You are authorized to use the Product solely in connection with such instructions. Any use of the Product not in accordance with such instructions shall void any warranty pertaining to the Product. Any and all damages that may occur in the use of the Product that is not strictly in accordance with such instructions shall be borne by you and you agree to indemnify and hold harmless SHINYBOWUSA, Inc. from and against any such damage.

The Product is protected by certain intellectual property rights owned by or licensed to SHINYBOWUSA. Any intellectual property rights pertaining to the Product are licensed to you by SHINYBOWUSA, Inc. and/or its affiliates, including any manufacturers or distributors of the Product (collectively, "SHINYBOWUSA") for your personal use only, provided that you do not change or delete any proprietary notices that may be provided with respect to the Product.

The Product is sold to you and any use of any associated intellectual property is deemed to be licensed to you by SHINYBOWUSA for your personal use only. SHINYBOWUSA does not transfer either the title or the intellectual property rights to the Product and SHINYBOWUSA retains full and complete title to the intellectual property rights therein. All trademarks and logos are owned by SHINYBOWUSA or its licensors and providers of the Product, and you may not copy or use them in any manner without the prior written consent of SHINYBOWUSA, which consent may be withheld at the sole discretion of SHINYBOWUSA.

The functionality and usability of the Product is controlled by SHINYBOWUSA, Inc. from its offices within the State of Texas, United States of America. SHINYBOWUSA makes no representation that materials pertaining to the Product are appropriate or available for use in other locations other than the shipping address you provided with respect thereto. You are advised that the Product may be subject to U.S. export controls.

DISCLAIMERS AND LIMITATION OF LIABILITY

SHINYBOWUSA may change or modify the Product at any time, from time to time.

THE PRODUCT IS PROVIDED "AS IS" AND WITHOUT WARRANTIES OF ANY KIND EITHER EXPRESS OR IMPLIED. SHINYBOWUSA DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE PRODUCT'S CORRECTNESS, ACCURACY, RELIABILITY, OR OTHERWISE.

SHINYBOWUSA has no duty or policy to update any information or statements pertaining to the Product and, therefore, such information or statements should not be relied upon as being current as of the date you use the Product. Moreover, any portion of the materials pertaining to the Product may include technical inaccuracies or typographical errors. Changes may be made from time to time without notice with respect to the Product.

TO THE FULLEST EXTENT PERMISSIBLE PURSUANT TO APPLICABLE LAW, SHINYBOWUSA DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. SHINYBOWUSA DOES NOT WARRANT THE ACCURACY, COMPLETENESS OR USEFULNESS OF ANY INFORMATION WITH RESPECT TO THE PRODUCT. SHINYBOWUSA DOES NOT WARRANT THAT THE FUNCTIONS PERTAINING TO THE PRODUCT WILL BE ERROR-FREE, THAT DEFECTS WITH RESPECT TO THE PRODUCT WILL BE CORRECTED, OR THAT THE MATERIALS PERTAINING THERETO ARE FREE OF DEFECTS OR OTHER HARMFUL COMPONENTS. SHINYBOWUSA WILL USE ITS REASONABLE EFFORTS TO CORRECT ANY DEFECTS IN THE PRODUCT UPON TIMELY WRITTEN NOTICE FROM YOU NOT TO EXCEED 10 BUSINESS DAYS AFTER RECEIPT BY YOU OF THE PRODUCT, BUT YOU (AND NOT SHINYBOWUSA) ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR AND CORRECTION THAT WAS CAUSED BY YOU UNLESS OTHERWISE AGREED TO IN A SEPARATE WRITING BY SHINYBOWUSA.

UNDER NO CIRCUMSTANCES, INCLUDING, BUT NOT LIMITED TO, NEGLIGENCE, SHALL SHINYBOWUSA BE LIABLE FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OF, OR THE INABILITY TO USE THE PRODUCT IN ACCORDANCE WITH ITS SPECIFICATIONS, EVEN IF SHINYBOWUSA OR ITS REPRESENTATIVES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL SHINYBOWUSA'S TOTAL LIABILITY TO YOU FROM ALL DAMAGES, LOSSES, AND CAUSES OF ACTION (WHETHER IN CONTRACT, OR OTHERWISE) EXCEED THE AMOUNT YOU PAID TO SHINYBOWUSA, IF ANY, FOR THE PRODUCT.

END OF DOCUMENT

122 Rose Ln. Suite 303 | Frisco, Texas 75034

1-877-SHINY-USA

1-877-744-6987

1-972-377-2508

sales@shinybowusa.com

www.shinybowusa.com

SHINYBOW™ USA
MULTIMEDIA AUDIO AND VISUAL