

SB-5688AK

8x8 HDMI UHD 4K2K Capable Matrix Routing Switch
w/ EDID Management, ARC and Auxiliary Audio Input & Output



IMPORTANT WARRANTY INFORMATION.

If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.



SAFETY INFORMATION



1. To ensure the best results from this product, please read this manual and all other documentation before operating your equipment. Retain all documentation for future reference.
2. Follow all instructions printed on unit chassis for proper operation.
3. To reduce the risk of fire, do not spill water or other liquids into or on the unit, or operate the unit while standing in liquid.
4. Make sure power outlets conform to the power requirements listed on the back of the unit. Keep unit protected from rain, water and excessive moisture.
5. Do not attempt to clean the unit with chemical solvents or aerosol cleaners, as this may damage the unit. Dust with a clean dry cloth.
6. Do not use the unit if the electrical power cord is frayed or broken. The power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
7. Do not force switched or external connections in any way. They should all connect easily, without needing to be forced.
8. Always operate the unit with the AC ground wire connected to the electrical system ground. Precautions should be taken so that the means of grounding of a piece of equipment is not defeated.
9. AC voltage must be correct and the same as that printed on the rear of the unit. Damage caused by connection to improper AC voltage is not covered by any warranty.
10. Turn power off and disconnect unit from AC current before making connections.
11. Never hold a power switch in the "ON" position.
12. This unit should be installed in a cool dry place, away from sources of excessive heat, vibration, dust, moisture and cold. Do not use the unit near stoves, heat registers, radiators, or other heat producing devices.
13. Do not block fan intake or exhaust ports. Do not operate equipment on a surface or in an environment which may impede the normal flow of air around the unit, such as a bed, rug, carpet, or completely enclosed rack. If the unit is used in an extremely dusty or smoky environment, the unit should be periodically "blown free" of foreign dust and matter.
14. To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside. Refer all servicing to qualified service personnel. There are no user serviceable parts inside.
15. When moving the unit, disconnect input ports first, then remove the power cable; finally, disconnect the interconnecting cables to other devices.
16. Do not drive the inputs with a signal level greater than that required to drive equipment to full output.
17. The equipment power cord should be unplugged from the outlet when left unused for a long period of time.
18. Save the carton and packing material even if the equipment has arrived in good condition. Should you ever need to ship the unit, use only the original factory packing.
19. Service Information Equipment should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the equipment.
 - C. The equipment has been exposed to rain.
 - D. The equipment does not appear to operate normally, or exhibits a marked change in performance.
 - E. The equipment has been dropped, or the enclosure damaged.

TABLE OF CONTENTS

HDMI-AUDIO MATRIX SWITCHER SERIES

Thank you for purchasing the SB-5688AK HDMI Matrix Switch with Auxiliary. You will find this unit easy to install and highly reliable but it is essential that you read this manual thoroughly before attempting to use the 8x8 HDMI matrix switcher.

CONTENTS

INTRODUCTION	1
FEATURES & CONTENTS	2
SPECIFICATIONS	3
FRONT PANEL	4
BACK PANEL	9
REMOTE CONTROL	11
EDID FUNCTIONS	13
TYPICAL APPLICATION	18
IR EXTENDER	19
ETHERNET SERIAL INTERFACE	20
RS-232 PROTOCOL	20

INTRODUCTION

The SB-5688AK is a professional 8x8 matrix routing switch. Supporting (8) HDMI Inputs, (8) Auxiliary Audio Inputs and (8) HDMI and (8) SPDIF audio Outputs. The SB-5688AK is based on HDMI standards and supports full resolution HDMI video with embedded EDID, with a signal bandwidth of 340Mhz so there is no signal degradation. High Definition digital signals can be selected and distributed from any of the (8) Inputs to the (8) Outputs. The switcher is certified as being fully CEC, ARC and HDCP 2.0 compliant with full HD 4K2K HDMI V1.4a 3D formats, and data rates up to 6.75Gbps. Using the build-in booster, each HDMI Output port is capable of driving cable lengths for 1080p up to 98 ft (30M) & 4K2K up to 66 ft (20M). Supports UXGA/WUXGA/DVI 1920x1200 resolutions to any HD display. The EDID management can be selected between (7) different modes. Control is provided via front panel push buttons, IR remote, RS-232 or TCP/IP (not a web-browser). A RS-232 Windows GUI interface is provided for matrix routing control (Windows only).

LOOK A PUPPY!! NOW READ THIS!!

IMPORTANT WARRANTY INFORMATION.

If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.



SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply. Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

DISCLAIMERS

The information in this manual has been carefully checked and is believed to be accurate. We assume no responsibility for any infringements of patents or other rights of third parties which may result from its use.

We assume no responsibility for any inaccuracies that may be contained in this document. We make no commitment to update or to keep current the information contained in this document.

We reserve the right to make improvements to this document and/or product at any time and without notice.

COPYRIGHT NOTICE

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means — electronic, mechanical, magnetic, optical, chemical, manual, or otherwise — without express written permission and consent. © Copyright 2016. All Rights Reserved.

Version 2.6 JULY 2016
5688AK-20131105-001
ENCL005688AK0A0

TRADEMARK ACKNOWLEDGMENTS

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

FEATURES & PACKAGE CONTENTS

FEATURES

- (8) HDMI with Auxiliary Audio (Analog Audio) Input source devices to (8) HDMI with S/PDIF output destinations
- HDMI digital video w/ embedded HDCP, DVI format and CEC/HDCP 2.0 compliant
- Worldwide EDID control modes for HDMI full 4K2K (24/30Hz) HD video resolutions
- Link speeds of up to 6.75Gbps (link clock rate of 340MHz), Supports HDMI 4K2K, 1.4a 3D formats
- Wide range of HD resolutions from PC XGA to WUXGA 1920x1200 and HDTV/DTV HDMI resolutions 480i/480p, 576i/576p, 720p, 1080i/p & 4K2K (24/30Hz)
- Compatible with all HDMI source devices, PC monitors, Plasma HD display, HDTV and audio receivers or audio amplifiers
- Digital Video TMDS formats resolutions up to 4K2K with Deep color 36-bit
- Digital Audio Support: Dolby TrueHD, Dolby Digital, Dolby Digital Plug/ex, DTS, DTS-HD, DTS-HD Master, DTS-EX, PCM, PCM2, LPCM2
- Audio Input: Supports Auxiliary Audio (Analog stereo audio)
- Audio Output: Supports Digital audio ARC or Digital audio S/PDIF (from HDMI source or Auxiliary Audio)
- Various User Interface Controls:
 - Windows based GUI control via RS-232 port
 - Front panel push buttons
 - IR wireless remote control
 - Ethernet switch control
 - Third party RS-232 control (via simple ASCII)
- Using the build-in booster, each HDMI output port is capable of driving cable lengths for 1080p up to 98 ft (30M) & 4K2K up to 66 ft (20M)
- Supports (9) worldwide EDID control function keys: Full function front panel controls: ARC / AUX / ALL / OFF / EDID / LOCK / RECALL / MEMORY / ENTER
 - Supports EDID Modes:
 - Embedded EDID Modes: FSS/ H24-3D/ H24-3D-M/ H36-3D/ H36-3D-M/ 4K2K-3D / DVI-D 1920x1200-60Hz/ AUTO
 - External Modes: Learning mode
- Automatic scanning input & output status via LCM display on front panel
- Supports IR Remote and IR Extender with distance up to ~984 feet (300M) Maximum
- Supports Universal power adaptor AC90V~AC240V, 50/60Hz

The switcher will remember that last state during a power cycle. When power is removed and resorted, the last configuration will be invoked.

PACKAGE CONTENTS

Check that you have the following components:

- SB-5688AK Matrix Switcher
- RS-232 V2.0 / Ethernet V2.0 Protocol Instructions
- IR Remote Control (SW-HD88AK)
- 19 inch Ear mount bracket (Part # 1U-440L)
- SB-100 IR Extender Receiver Set
- CD Contents: Manual, Windows GUI, ISP V1.0 Windows driver
- RS-232 Cable 6.5 feet (2M)
- HDMI Locking Post Replacement Screws
- Users Guide
- Power Supply: DC12V, 5A, (Worldwide Universal 100~230VAC, AC 50/60Hz)
- *Optional: SB-100C IR Extender Receiver Cable (6.5ft (2M))*



SPECIFICATIONS


SPECIFICATIONS

- **Type of HDMI Switcher:** (8) Inputs to (8) Outputs HDMI Matrix Switch with Audio and Extension
- **HDMI Support:** HDMI 4K2K, 1080p@60Hz, H36-bit Deep color, 3D of HDMI V1.4 formats
- **HDCP/CEC Support:** HDCP 2.0 Compliant, CEC Compliant
- **Video Bandwidth:** Double Data Rates: 340MHz, Total 6.75Gbps bandwidth
- **Digital Video Support:** HD: 480i/ 480p/ 720p/ 1080i/p and 4K2K up to 36bit deep color
- **Video Inputs:** (8) HDMI (HDMI or DVI digital source)
- **Audio Inputs:** (8) AUX Audio (Analog Stereo, AUX port 3.5mm Jack)
- **Video Outputs:** (8) HDMI (To Destination)
- **Audio Outputs:**
 - (8) S/PDIF: Multi Audio Formats 5.1 from HDMI or LPCM-2CH from Auxiliary audio
 - (8) ARC: TV Return Channel Audio
 - (8) HDMI: Multi Audio Formats 5.1 / 7.1, MAT(MLP), Dolby Digital, Dolby TrueHD, Dolby Digital Plus, DTS, DTS-ES 6CH, DTS-HD, DTS-HD-HRA, DTS-HD Master, (PCM-2CH)
- **Switcher Controls:**
 - Select & Function buttons on front panel (Data status via LCM panel show out)
 - IR Remote Control (Switch control)
 - IR External Port (Switch control via 3.5mm OD Jack)
 - RS-232 series interface (Switch control)
 - Ethernet series interface (Switch control)
- **Source Status:** Input status LEDs indicates presence of a live signal
- **(25) Function Control Keys:** 1. ARC, 2. AUX, 3. ALL, 4. OFF, 5. RECALL, 6. ENTER, 7. MEMORY, 8. LOCK, 9. EDID, 10. Destination button 1 thru 8, 11. Source button 1 thru 8
- **(7) EDID Management Modes:**
 - **Select Embedded EDID Modes:** Mode1: FSS, Mode2: H24-3D, Mode3: H24-3D-M, Mode4: H36-3D, Mode5: H36-3D-M, Mode6: 4K2K-3D, PCM-2CH, Mode7: DVI-D 1920x1200-60Hz
 - **Select LEARNING Mode:** Learning Destination EDID to Link Source
- **Infrared Frequency:** 38Khz
- **IR Extend Distance:** ~984 feet / 300M maximum
- **HDMI Video Booster:** HDMI output 1080p lengths up to 98 feet (30M)/4K2K up to 66 feet (20M)
- **HDMI I/O Connector:** HDMI Type A - SMD 19-pin female type
- **Temperature:** Operating Temperature 32°F-100°F (0°C-32°C)
- **Dimensions (LxWxH):** 17.5 x 10 x 1.75 in
- **Rack Mount:** 1RU High 19 in Rack Mount #1U-440L (with rack mount)
- **Power Supply:** DC12V, 5A, Power Input: AC 100~240VAC 50/60Hz (universal type supply)
- **Safety Approvals:** CE, FCC, RoHS, REACH
- **Weight:** 6.6 lb (Unit only) / 9.0 lb (Net)

As product improvements are continuous, specifications are subject to change without notice.

FRONT PANEL

FRONT PANEL

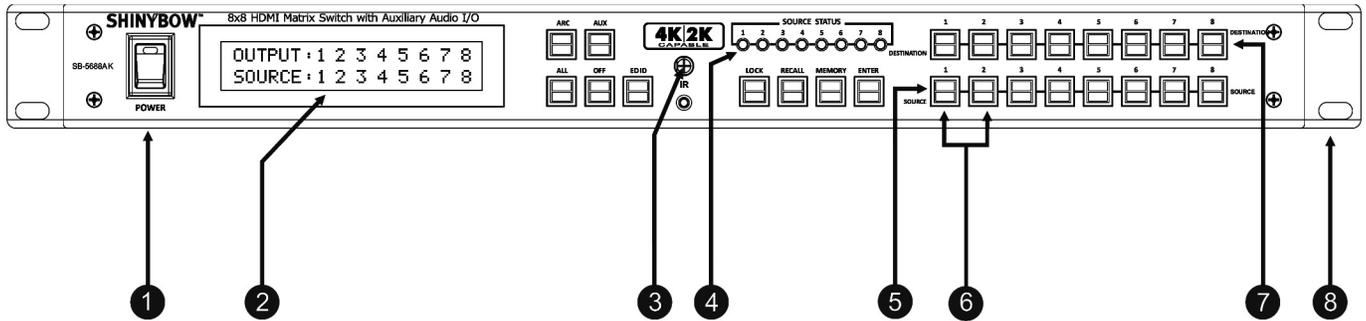

1. POWER ON SWITCH: The power switch turns the unit on and off. The LCM will illuminate blue to indicate the switcher is ON and receiving power. The switcher will remember the last setting during a power cycle. When power is removed and resorted, the last configuration will be evoked.

2. STATUS DISPLAY: Front panel status display shows current matrix routing configuration. This same display also shows particular configuration settings depending on your current function. In run mode (as shown above), the display shows each Output (destination) channel shows which input (source) it is assigned.

3. IR SENSOR: The IR sensor receives IR commands from the supplied remote control or third party IR emitter.

4. INPUT STATUS DISPLAY: Input sources 1 to 8 LED illuminates blue to indicate that a video source is present on that input.

5. SOURCE SELECT BUTTONS: Separate inputs 1 thru 8 select buttons are provided each source selection.

6. EDID MODE SELECT BUTTONS: Used to select EDID mode using buttons Source button #1 or #2.


7. DESTINATION SELECT BUTTONS: Separate outputs 1 thru 8 select buttons are provided for each destination assignment. Routing can be source to destination or one source to multiple destinations.

Example: Press Destination 1, 3, 5, then press Source 2. It will route Input 2 to Output 1, 3, 5 respectively.

8. 19 INCH EAR MOUNT PAIR: Converts desktop to 19 inch rack mount. Bracket (part # 1U-440L) INCLUDED. Image shows rack mount bracket attached.

FRONT PANEL-ARC

FRONT PANEL-ARC

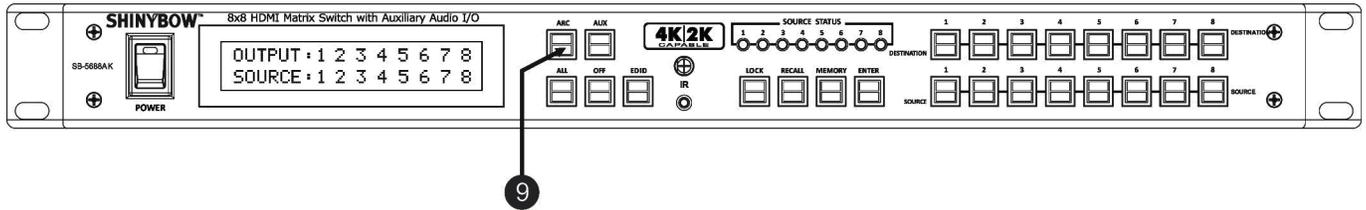

9. FUNCTION KEY - ARC:



Audio Return Channel (ARC) is a feature that sends audio from the TV back down the HDMI cable to its source device, in this case, the switcher. Not all displays support ARC; check your Users Guide for additional information. (Default = ARC Disabled)

The “Audio & ARC” port can support audio from either of (3) sources.

If the Input Video/Audio Source is HDMI, the audio can be extracted from the embedded signal.

If the Input Audio Source is connected to the external Audio Input, this same audio will be present on the Audio & ARC jack.

If ARC is selected, the audio will be from the destination device (ex: TV).

To enable the ARC option on a specific Output, perform the following steps:

- Press the **ARC** button.
- On the Destination row, press **1 THRU 8** (the buttons will illuminate).
- Press **ENTER** button. The new configuration will be stored. The front panel LCD display will now show an “A” under the Output port.
- Or press **ARC** again to cancel the operation.

To disable the ARC option on a specific Output, perform the following steps:

- Press the **ARC** button.
- On the Destination row, press **1 THRU 8** (the buttons will illuminate).
- Press **ENTER**. The pre-set configuration will execute. The front panel LCD display will be blank under the Output port.
- Or press **ARC** again to cancel the operation.


Note:

1. Operation will abort if no keys are pressed within 5 seconds.


2. The AUX Audio input only functions when a valid HDMI / DVI video signal is present. Without video, the AUX audio will not operate.

FRONT PANEL-AUX

FRONT PANEL-AUX

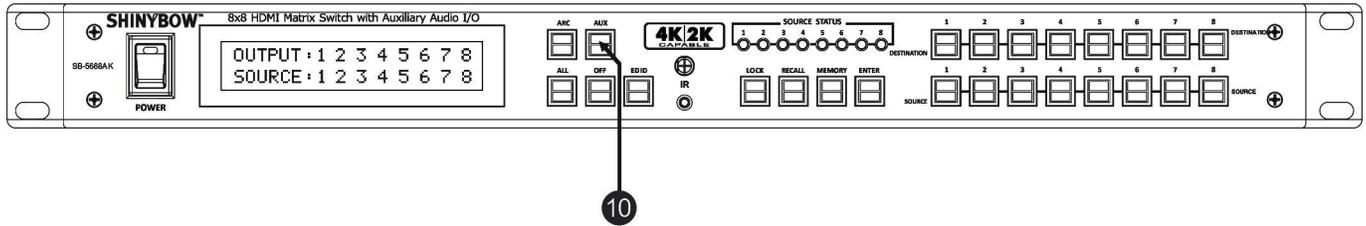

10. FUNCTION KEY - AUX (THE AUDIO ADDITIONAL ON THE “AUDIO / ARC” PORT):

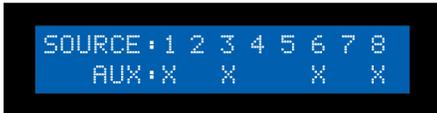

The AUX FUNCTION feature allows you to replace the embedded HDMI audio signal with an audio signal that is connected to the switchers Audio AUX Input. Using the AUX function replaces the audio and does not mix the audio. (Default = AUX Disabled)

To enable the AUX option on a specific Output, perform the following steps:

- Press the **AUX** button.
- On the Source row, Press **1 THRU 8** (the buttons will illuminate).
- Press **ENTER**. The new configuration will be stored. The front panel LCD display will show an “X” under the Source port.
- Or press **AUX** again to cancel the operation.

To disable the AUX option on a specific Output, perform the following steps:


- Press the **AUX** button.
- On the Source row, Press **1 THRU 8** (the buttons will illuminate).
- Press **ENTER**. The pre-set configuration will execute. The front panel LCD display will be blank under the Output port indicating audio source is embedded on the HDMI cable.
- Or press **AUX** again to cancel the operation.

Note:

1. Operation will abort if no keys are pressed within 5 seconds.
2. The AUX Audio input only functions when a valid HDMI / DVI video signal is present. Without video, the AUX audio will not operate.

FRONT PANEL-EDID-ALL-OFF-LOCK-ENTER

FRONT PANEL-EDID

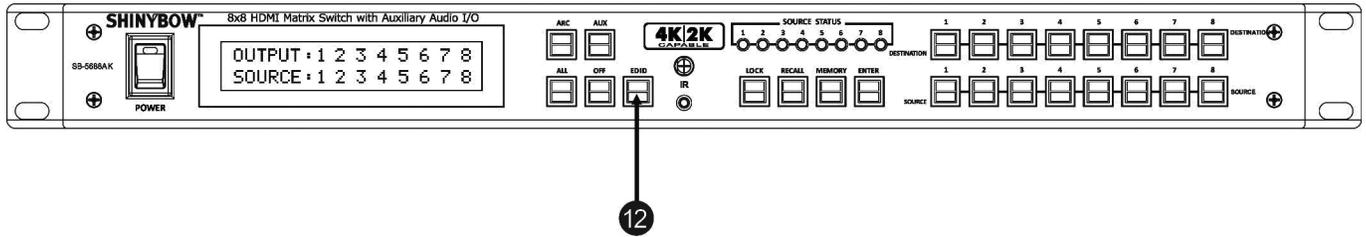

12. FUNCTION KEY - EDID (1):




Used to display changes to the current **EDID** mode.

- Press **EDID** to select new EDID mode.
- Press **SOURCE** row **#1** or **#2** to select the EDID modes.
- Press **ENTER** to ready memory location.
- Or press **EDID** again to cancel the operation.

Operation completes.

Note: Operation will abort if no keys are pressed within 5 seconds.

FRONT PANEL-ALL-OFF-LOCK-ENTER

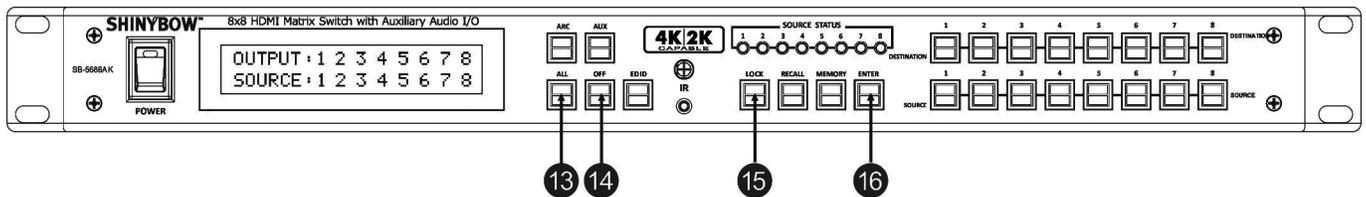

13. FUNCTION KEY - ALL:



Disables (mutes) video on all destinations OR assign the same source to all destinations.

Option 1

- Press **ALL** followed by **OFF** button. The display will show "0" to indicate none of the destinations are assigned a video source.

Option 2

- Press **ALL** followed by Source **1 THRU 8**. The display will show the source selected.
- Press **ENTER**. The pre-set source selection will be assigned all destinations.

14. FUNCTION KEY - OFF:



Disables (mutes) video on the selected destinations.

- Press **OFF** button followed by any Destination channel.
- Press **1 THRU 8** output destination. The display will show "0" for the selected channel, indicating no video is selected.

15. FUNCTION KEY - LOCK:




- Press and hold **LOCK** button for two seconds lockout the front panel.
- Press and hold **LOCK** button for two seconds to enable the front panel.


16. FUNCTION KEY - ENTER: Press **ENTER** to confirm entries.

FRONT PANEL-RECALL-MEMORY

FRONT PANEL-EDID

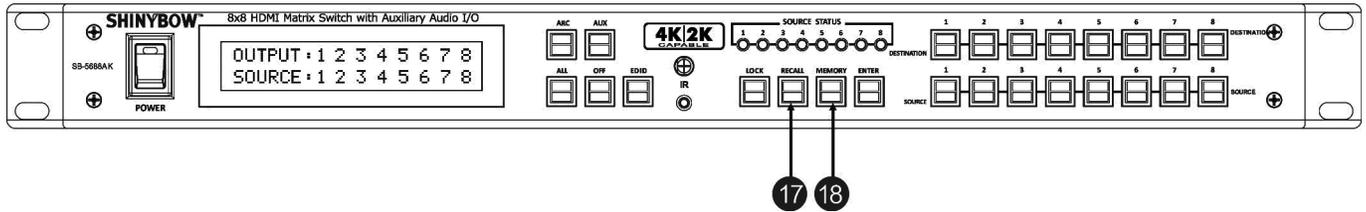

17. FUNCTION KEY - RECALL:

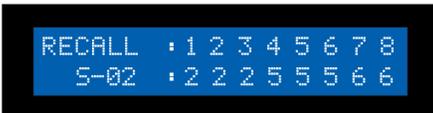

The system will show previously stored presets, up to a total of (16). Presets are stored in local memory using Source keys 1 thru 8 or Destination keys 1 thru 8 as the memory preset location.

- Press **RECALL** button.
- Press **1 THRU 8** on either Source or Destination row.
- Press **ENTER**. The pre-set configuration will execute.

Operation completes.

Note: Operation will abort if no keys are pressed within 5 seconds.

- Or press **RECALL** again to cancel the operation.

18. FUNCTION KEY - MEMORY:



The system will show store presets, up to a total of (16). Presets are stored in local memory using Source keys 1 thru 8 or Destination keys 1 thru 8 as the memory preset location.

- Configure desired matrices.
- Press **MEMORY** button.
- Press **1 THRU 8** on either Source or Destination row.
- Press **ENTER** to ready memory location.
- Or press **MEMORY** again to cancel the operation.


Operation completes.

Note: Operation will abort if no keys are pressed within 5 seconds.


- Or press **MEMORY** again to cancel the operation.

BACK PANEL-SWITCH CONTROLS

BACK PANEL-SWITCH CONTROLS

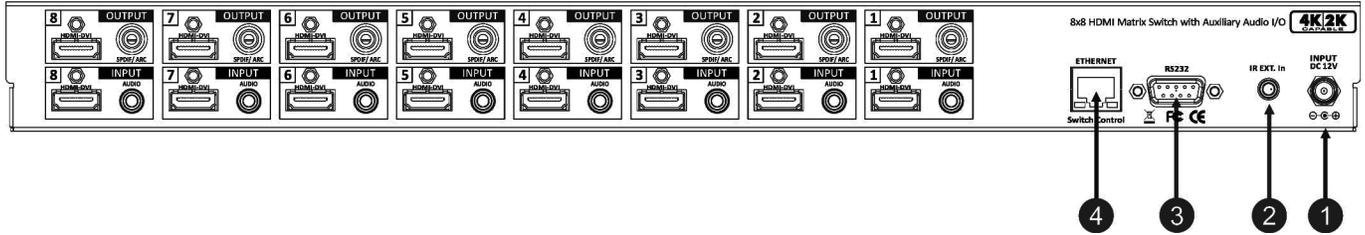

1. DC POWER INLET: The switcher is fitted with a DC power plug input connector. Ensure that it is of an approved type and is of sufficient current carrying connector capacity with the correct voltage and connector polarity. 12Volt DC power supply 5A Max (Center pin positive).

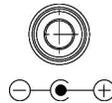


POWER SOCKET:
DC Jack - inner OD Ø 2.1mm (+)
Outside OD Ø 5.5mm (GND)
Power input - 12VDC, 5A

2. IR EXTENDER CONTROL: Supports one IR Extender. Extends a maximum distance of up to ~984 feet/300M. When you plug the external IR extender into the switcher, the front panel IR receiver remains active.




IR EXTENDER JACK: Female jack - inner OD Ø 3.5mm

3. RS-232 CONNECTION: RS-232 control port allows for interfacing to a PC, such as a computer or touch panel control, to the switcher via the DB-9pin female connector for serial RS-232 control.

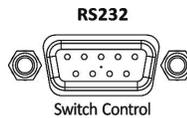

REMOTE PORT: DB-9pin female connector

4. ETHERNET CONNECTION: ETHERNET control port allows for TCP/IP interfacing to a PC, such as a computer or touch panel control (not a web-browser), to the switcher via the RJ-45 female connector to control switcher.

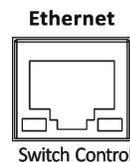


REMOTE PORT: Controls the switcher with a RJ-45 female connector

ETHERNET PORT:
Note: The Ethernet port and RS-232 port cannot be used simultaneously. Any connection to the Ethernet port will disable serial commands sent to the RS-232 port.


BACK PANEL-HDMI INPUT / OUTPUT

BACK PANEL-HDMI INPUT / OUTPUT

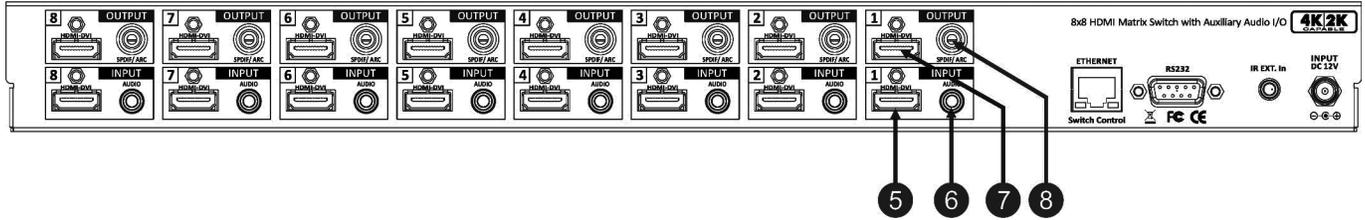

5. INPUTS- 1,2,3,4,5,6,7, & 8 HDMI: Connects a HDMI digital video/audio signal source direct to the female HDMI connector. The HDMI port supports HDMI and DVI digital video sources. If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.

HDMI in

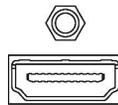

HDMI CONNECTOR: HDMI Type A SMD 19pin female socket connector

Note: With the proper adapters, the switcher can be used with DVI digital video signals as it is HDCP compliant. DVI Audio supported.

6. INPUTS- 1,2,3,4,5,6,7, & 8 AUDIO (AUXILIARY AUDIO): Connects a Auxiliary Audio/Stereo signal direct to this 3.5mm OD female jack. This jack supports DVI audio or Auxiliary Analog Stereo Audio sources.

Audio in



AUDIO CONNECTOR: 3.5mm OD phone jack female socket connector


Note: With the proper adapters, the switcher can be used with Auxiliary Audio signals. DVI Audio supported.

AUDIO Connector Inputs 1 ~ 8

Audio: Supports the auxiliary audio input when using DVI signals.

7. OUTPUTS- 1,2,3,4,5,6,7 & 8 HDMI: Connects a HDMI signal source to the Output. This HDMI port supports HDMI with embedded audio and DVI with AUX audio. If you remove the HDMI screw posts, you must use the provided HDMI Locking Post replacement screws to keep the internal HDMI jack secure. Removing the HDMI screws without installing the HDMI Locking Post replacement screws will void your warranty.

HDMI out

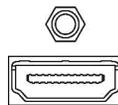

HDMI CONNECTOR: HDMI Type A SMD 19pin female socket connector

Note: With the proper adapters, the switcher can be used with DVI digital video signals as it is HDCP compliant. DVI Audio supported.

8. OUTPUTS- 1,2,3,4,5,6,7 & 8 S/PDIF / ARC: Connects an Auxiliary Audio, HDMI digital audio source or ARC TV return audio channel output signal direct to the RCA jack audio connector. This port uses ARC digital audio (TV return digital Audio) and S/PDIF digital audio from HDMI or Auxiliary Audio. Uses a RCA connector for Outputs 1 ~ 8.

SPDIF / ARC



ARC & SPDIF AUDIO CONNECTOR: RCA female connector

Note: With the proper adapters, the Audio can be used with HDMI Audio, DVI Audio and Auxiliary Audio output signals. The Auxiliary Audio uses digital LPCM-2CH output.

Audio Output Signals:

- ARC Audio (HDTV ARC Turn On)
- S/PDIF (HDMI/DVI Source Audio or Auxiliary Audio LPCM-2CH)

REMOTE CONTROL

BEFORE MAKING ANY CONNECTIONS TO THE SWITCHER, OBSERVE THE FOLLOWING:

- Ensure the main voltage supply matches the label on the supplied plug-pack (+/-10%).
- Ensure that the power switch is OFF.
- Ensure that all system grounds (earth) are connected to a common point.
- Avoid powering equipment within a system from multiple power sources that may be separated by large distances.
- Connect all audio video sources and destination equipment.
- Power up all source and destination audio-visual sources.
- For each destination output select the appropriate input source by using the front panel input select buttons. The supplied IR remote control. Or through the RS-232 serial communications port.
- Upon powering up the switcher, it will return to its last used setting before being powered down.

REMOTE CONTROL

IR REMOTE CONTROL KEY:

1. & 2. SWITCH POWER ON OR OFF:

Power ON and OFF

3. DESTINATION: 1 THRU 8 OUTPUT SELECTION:


Destination buttons to select the output display channel

4. SOURCE: 1 THRU 8 INPUT SOURCE SELECTION:

Input 1~8 source selection buttons

5. FUNCTION KEY: Function selection buttons

ARC	AUX	ALL
OFF	EDID	RECALL
MEMORY	ENTER	LOCK

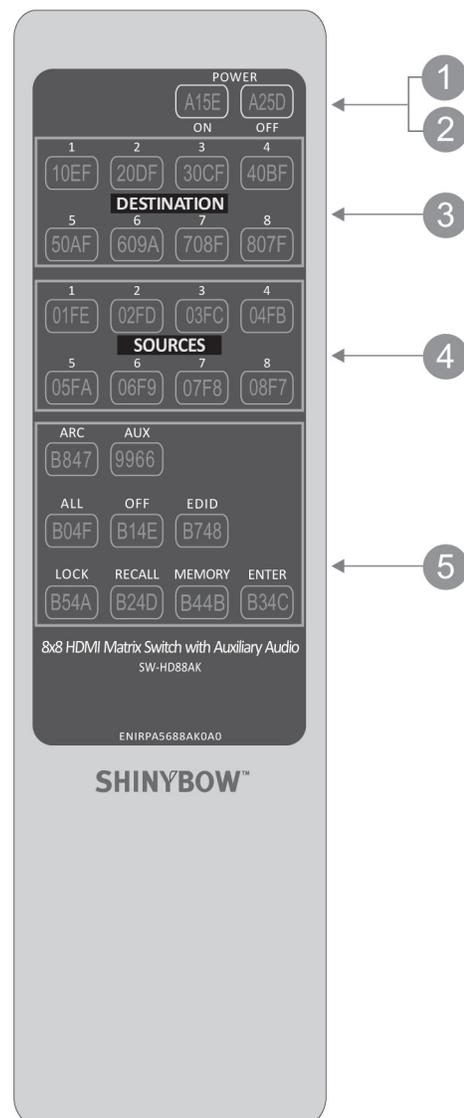

REMOTE PROTOCOL COMMANDS

IR REMOTE CUSTOM AND DATA CODES (NEC Standard)

HOW TO SETUP IR CODES :

POWER ON: 01FC A15E
POWER OFF: 01FC A25D
EDID: 01FC B748
ARC: 01FC B847

CUSTOM CODE : 01FC

ALL: 01FC B04F
OFF: 01FC B14E
LOCK: 01FC B54A
AUX: 01FC 9966

RECALL: 01FC B24D
MEMORY: 01FC B44B
ENTER: 01FC B34C

PRESS DESTINATION - # THEN PRESS SOURCE - #

DESTINATION #1 : 01FC 10EF	SOURCE #1 : 01FC 01FE
DESTINATION #2 : 01FC 20DF	SOURCE #2 : 01FC 02FD
DESTINATION #3 : 01FC 30CF	SOURCE #3 : 01FC 03FC
DESTINATION #4 : 01FC 40BF	SOURCE #4 : 01FC 04FB
DESTINATION #5 : 01FC 50AF	SOURCE #5 : 01FC 05FA
DESTINATION #6 : 01FC 609F	SOURCE #6 : 01FC 06F9
DESTINATION #7 : 01FC 708F	SOURCE #7 : 01FC 07F8
DESTINATION #8 : 01FC 807F	SOURCE #8 : 01FC 08F7

For Example:

SELECT DESTINATION # 1 TO SHOW SOURCE #1~8

The IR Data Code list :


Destination # 1 , Source #1	01FC	10EF	01FC	01FE	01FE
Destination # 1 , Source #2	01FC	10EF	01FC	01FE	02FD
Destination # 1 , Source #3	01FC	10EF	01FC	01FE	03FC
Destination # 1 , Source #4	01FC	10EF	01FC	01FE	04FB
Destination # 1 , Source #5	01FC	10EF	01FC	01FE	05FA
Destination # 1 , Source #6	01FC	10EF	01FC	01FE	06F9
Destination # 1 , Source #7	01FC	10EF	01FC	01FE	07F8
Destination # 1 , Source #8	01FC	10EF	01FC	01FE	08F7

EDID FUNCTION - SYSTEM RESET/FACTORY RESET

SYSTEM RESET

SYSTEM RESET	RETURN SWITCH TO FACTORY DEFAULTS
<p>Press RECALL > OFF > ENTER</p>   	<p>RESET to Factory Default</p> <ol style="list-style-type: none"> 1. Press RECALL button: The LCM will show the current stored presets status. 2. Press OFF button: The LCM will show “SYSTEM RESET” 3. Press ENTER button: To confirm entries. <p>The switch will reset all customizable values back to factory defaults. You must POWER CYCLE the switch for the new values to take effect.</p>
<p>NOTE: Factory Reset Defaults to:</p> <ol style="list-style-type: none"> 1. Source Destination will be set to 1-1, 2-2, 3-3, etc. 2. Switch matrices stored in memory will be cleared. 3. Lock function will return to Un-Locked. 4. AUX function will disable and return to UN-AUX (On Select Models). 5. ARC function will disable and return to SPDIF as the Output (On Select Models). 6. EDID will return to FSS® (1080p-2ch Mode). 7. Ethernet port will return to DHCP=ENABLED. 	

RESET EDID

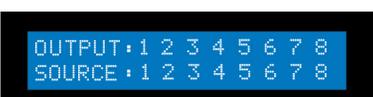EDID RESET	PROCEDURE
<p>From the Front Panel: Press EDID > RECALL > OFF > ENTER</p> 	<p>RESET EDID</p> <p>Press EDID. Press RECALL. Press OFF. The display should show Reset EDID. Press ENTER.</p>
LEARNING MODE 2	SETTING EDID TO LEARNING MODE 2
<p>Press EDID > OFF > DESTINATIONS > ENTER</p> <p>The EDID for HDMI has been passed from the Destination port to the Source port.</p>    	<ol style="list-style-type: none"> 1. Press EDID button: The LCM will show the current EDID status. 2. Press OFF button: Does the OFF button stay illuminated? <ul style="list-style-type: none"> *If Yes: Press ALL the Destination buttons individually so they illuminate blue. The switcher will LEARN the destination HDMI EDID and pass to the selected source. The switcher will Enable or Disable HDMI EDID for the selected source. 3. Press ENTER to confirm changes. The LCM will return to the default screen showing selected matrix routing status. This puts you in Learning Mode 2. <ul style="list-style-type: none"> *If No: You might need a f/w update.

EDID FUNCTION

EDID FUNCTION SETUP

EDID SETUP	To Change The EDID Setup
Step 1. Press the EDID button	The display will show the currently selected EDID mode.
Step 2. Press SOURCE #1 OR #2 button row	The button will flash blue and the display will show the current Embedded EDID Status.
Step 3. Press the ENTER button	To set EDID mode. The switcher will return to operation mode.
Operation will abort if no keys are pressed within 5 seconds.	
EMBEDDED EDID MODES	Total 7 EDID Modes
Embedded EDID Setup Press EDID > SOURCE > ENTER SOURCE #1 or SOURCE #2 	To select Embedded EDID mode or LEARNING mode. Press EDID button: The LCM will show the current EDID status. Repeatedly pressing the SOURCE 1 button will cycle up thru the options. Repeatedly pressing the SOURCE 2 button will cycle down thru the options. Embedded EDID: Mode 1 : FSS® Mode 5 : H36-3D-M Mode 2 : H24-3D Mode 6 : 4K2K Mode 3 : H24M-3D Mode 7 : DVI-D 1920x1200-60Hz Mode 4 : H36-3D

EDID FUNCTION FOR HDMI MATRIX SWITCHER


RESET	EDID Return To Factory Default
How to RESET EDID mode Press EDID > RECALL > ENTER  	To RESET to FACTORY DEFAULT (1080p-2CH). Press EDID button: The LCM will show the current EDID status. Press RECALL button: The LCM will show the RESET EDID . Press ENTER to confirm entries. The EDID will return to FSS® mode and resolution 1080p-2CH.
EDID STATUS	To View The Current EDID Status
Step 1. Press EDID button	The button will flash blue and the display will show the current Embedded EDID Status.
Step 2. Press EDID button	To exit.
HOW TO SETUP FSS® FUNCTION	Fast Speed Start®
Step 1. Press the DESTINATION #1~8 button row Then Press the SOURCE #1~8 button row	To setup and Install all devices.
Step 2. Press EDID button	Select a optimum status of Embedded EDID mode.
Step 3. Press ENTER button	To confirm entries.
Step 4. Press EDID button	To select the EDID FSS® mode.
Step 5. Press ENTER button	To confirm entries.

EDID FUNCTION

EDID FUNCTION FOR HDMI MATRIX SWITCHER	
Mode 1. FSS® (Fast Speed Start®) EDID : 1. FAST SPEED START	Fast Speed Start® mode shortens the startup time of the switcher. Selecting this mode does not force the EDID setup to be cancelled. Users may first select one EDID mode from mode 2 to 3, and then select mode 1 for fast speed start®.
Mode 2. H24-3D (1080p-24 bits) EDID : 2. H24-3D, PCM 2CH	Audio Support: PCM 2CH
Mode 3. H24-3D-M (1080p-24 bits) EDID : 3. H24-3D, MULTI AUDIO	Audio Support: MAT(MLP) 7.1CH, PCM-2CH, One Bit Audio 2CH, AC-3 5.1CH, DTS 5.1CH, PCM 7.1CH, Dolby Digital + 7.1CH, DTS-HD 7.1CH
Mode 4. H36-3D-M (1080p-36 bits) EDID : 4. H36-3D, PCM 2CH	Audio Support: PCM 2CH
Mode 5. H36-3D-M (1080p-36 bits) EDID : 5. H36-3D, MULTI AUDIO	Audio Support: MAT(MLP) 7.1CH, PCM 2CH, One Bit Audio 2CH, AC-3 5.1CH, DTS 5.1CH, PCM 7.1CH, Dolby Digital + 7.1CH, DTS-HD 7.1CH
Mode 6. 4K2K (24/30Hz) EDID : 6. 4K2K-3D, PCM 2CH	HDMI Support: 4K2K-3D, PCM 2CH (3860x2160-24/30Hz) Audio Support: PCM 2CH
Mode 7. 1920x1200-60Hz (DVI-D) EDID : 7. DVI-D 1920x1200-60HZ	DVI Support: DVI-D 1920x1200 60Hz

EDID FUNCTION

EDID FUNCTION FOR HDMI MATRIX SWITCHER

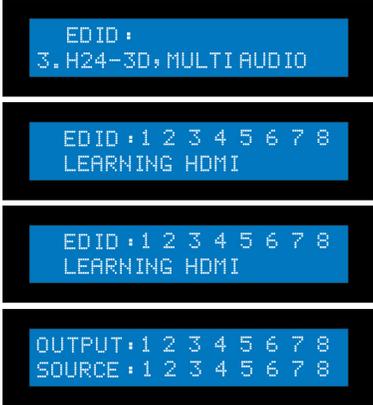LEARNING EDID	Learning EDID From Destination To Source
<p>Learning EDID setup Press EDID > DESTINATION > SOURCE > ENTER</p> 	<ol style="list-style-type: none"> 1. Press EDID button. The LCM will show the current EDID status. 2. Press DESTINATION 1 THRU 8. The LCM will show the LEARNING HDMI. The switcher will LEARN destination HDMI EDID. 3. Press SOURCE 1 THRU 8. The switcher will Learn destination HDMI EDID and pass to the selected source. 4. Press ENTER button to confirm changes. The LCM will return to the default screen showing selected matrix routing status.
<p>NOTE: The already learned EDID cannot be modified. You can only rebuild a new Learning EDID. For Example: When the Source has “Learned” the EDID data from a destination, it will save that EDID information into EPROM and the EDID data cannot change. Please select new learning destination to sources or change to one of the embedded EDID modes when you want to remove the learning EDID memory from EPRPM.</p>	
LEARNING EDID SINGLE TO SINGLE	Learning Destination #2 EDID To Source #3
<p>Step 1. Press EDID button</p>	The button will flash blue and the display will show the current Embedded EDID Status.
<p>Step 2. Press the DESTINATION #2 button row</p>	Copy the Destination #2 Display EDID.
<p>Step 3. Press the SOURCE #3 button row</p>	Learning the Destination #2 EDID To Source # 3.
<p>Step 4. Press ENTER button</p>	To confirm entries.
LEARNING EDID SINGLE TO MULTIPLE	Learning Destination EDID Link To The Majority Sources
<p>Step 1. Press EDID button</p>	The button will flash blue and the display will show the current Embedded EDID Status.
<p>Step 2. Press the DESTINATION #1-8 button row</p>	Copy any 1~8 Destinations EDID.
<p>Step 3. Press the SOURCE #1-8 button row</p>	Learning the Destination EDID link to source #1~8.
<p>Step 4. Press ENTER button</p>	To confirm entries.
LEARNING EDID SINGLE TO ALL	Learning Destination EDID Link To All Sources
<p>Step 1. Press EDID button</p>	The button will flash blue and the display will show the current Embedded EDID Status.
<p>Step 2. Press destination button 1 THRU 5</p>	Learning anyone 1~8 Destination EDID to all sources.
<p>Step 3. Press ALL button</p>	Learning selected destination EDID to all sources.
<p>Step 4. Press ENTER button</p>	To confirm entries.
LEARNING EDID DEFINITION	Learning EDID From Destination To Source
<ol style="list-style-type: none"> 1. The switcher will LEARN the destination EDID and pass to the selected source. 2. To set up learning between a single destination and single source: Press EDID button > Press DESTINATION 1 THRU 8 > Press SOURCE 1 THRU 8 > Press ENTER to confirm. The switcher will learn the destination EDID for the source device. 3. To set up learning between a single destination and multiple sources: Press EDID button > Press DESTINATION 1 THRU 8 > Press the majority SOURCES 1 THRU 8 > Press ENTER. The switcher will learn the single destination EDID to many source devices. 4. How to Learn single destinations with all sources. Press EDID button > Press ALL button > Press ENTER to confirm. 	

EDID FUNCTION-PASS MODE

The **PASS** feature is part of a firmware update released after JUNE 2014. If you do not see the PASS feature then you do not have the latest firmware. You should contact your place of purchase for availability of a firmware update. Note all devices are eligible for this firmware update. Firmware update requires a PC with OS Windows XP or WIN7 and an RS-232 port (or USB to RS-232). Customer is responsible for implementing a firmware update and accepts all risks. Others limitations may apply.

PASS EDID

Passing EDID from Destination to Source

Passing EDID setup

Press:

EDID > OFF > DESTINATION 1 THRU 8 > ENTER



```
EDID :  
3, H24-3D, MULTI AUDIO
```



```
EDID : 1 2 3 4 5 6 7 8  
PASS : P P P P
```



```
EDID : 1 2 3 4 5 6 7 8  
PASS : P P P P
```



```
OUTPUT : 1 2 3 4 5 6 7 8  
SOURCE : 1 2 3 4 5 6 7 8
```

Press **EDID > OFF > DESTINATION 1 THRU 8 > ENTER**

The EDID for HDMI has been passed from the Destination port to the Source port.

1. Press **EDID** button. The LCM will show the current EDID status.
2. Press **OFF** button. The LCM will show the current EDID PASS status.
3. Press **DESTINATION (#1 THRU #8)**. The switcher will PASS destination HDMI EDID and pass to the selected source. The switcher will Enable or Disable HDMI EDID for the selected source.
4. Press **ENTER** button to confirm changes. The LCM will return to the default screen showing selected matrix routing status.

NOTE: When the Source has “passed” the EDID data from a destination, it will save that EDID information into EPROM and the EDID data will not change. To change a saved HDMI EDID information, you have to select a new PASS destination to source or Disable the PASS.

TYPICAL APPLICATION


INSTALLING DIAGRAM

Sample Connection:

Using the IR External port, RS-232 or Ethernet command to control the SB-5688AK via one PC or SB-100 IR receiver transmit the SB-5688AK's IR signal.

NOTE:

1. Switcher IR External Port: Use SB-100 IR signal Receiver
2. Control Switch via a PC RS-232
3. Control Switch via a PC Ethernet

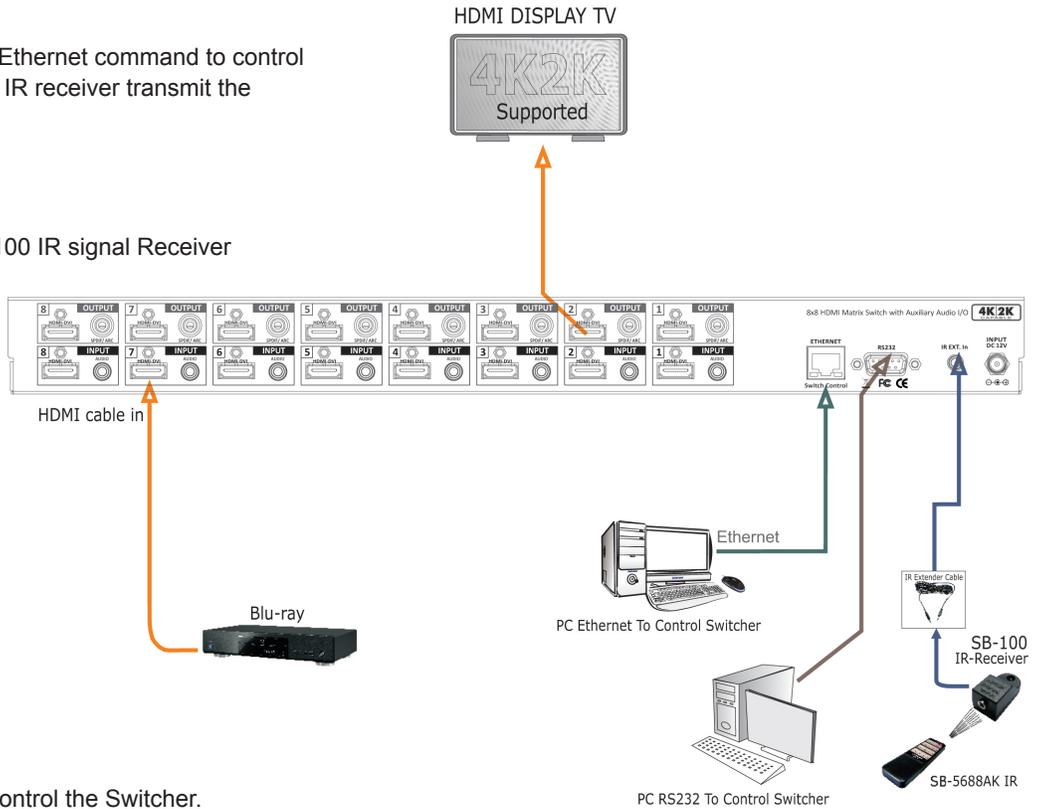

Application RS-232, IR and Ethernet control the Switcher.


INSTALLING DIAGRAM

Sample Connection:

1. Mixing Auxiliary Audio into HDMI source port via SPDIF port output to Audio Amplifier
2. Audio output link ARC from TV return channel via SPDIF port output to Audio Amplifier

NOTE:

1. Switcher AUX Port: Mixing Audio to SPDIF port output
2. Supported ARC TV ARC audio output via SPDIF port
3. Digital Audio Amplifier

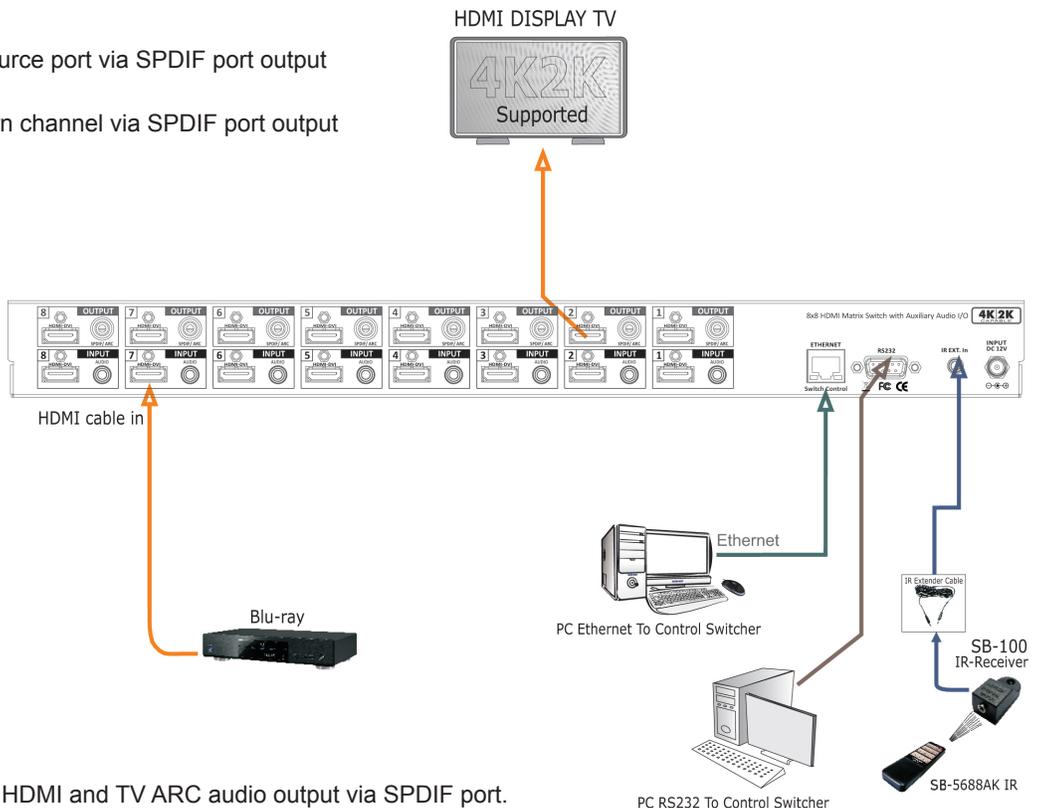


Application mixing Auxiliary Audio into HDMI and TV ARC audio output via SPDIF port.

IR EXTENDER

IR EXTENDER


1. SB-100 IR 300M Receiver

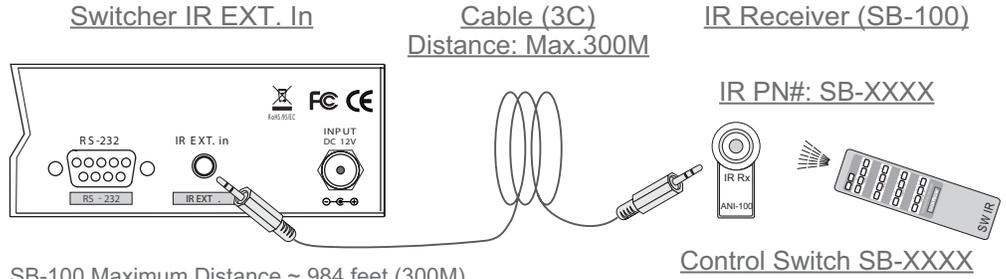

SB-100 Maximum Distance ~ 984 feet (300M)

The SB-100 IR Receiver is required when using the port "ALL in" Jack.

2. SB-100C IR 2M Receiver

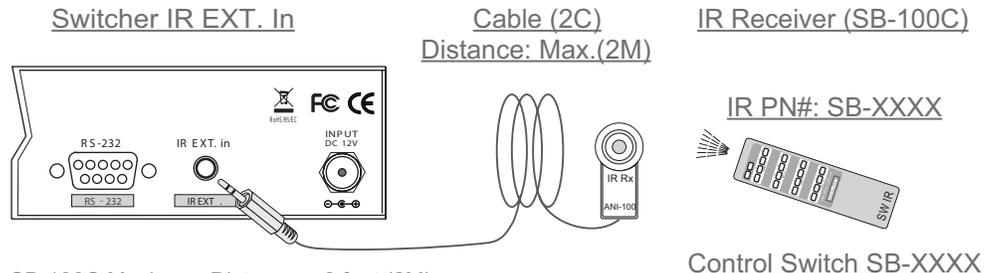


SB-100C Maximum Distance ~ 6 feet (2M)

The SB-100C IR Receiver will not function on the port "ALL in" Jack.


*** When you plug the External IR extender into the switcher, the front panel IR receiver remains active. ***

Pin configuration for IR 984 feet (300M) Extender Receiver such as SB-100 compatible

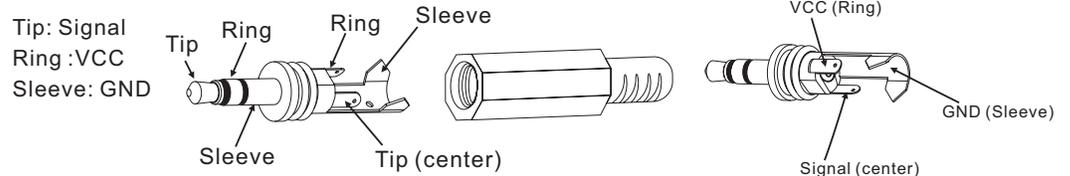

SB-100 Receiver and SB-101 Transmitter The DISTANCE maximum ~ 984 feet (300M)

Pin configuration for IR Receiver 6 feet (2M) cable such as SB-100C compatible

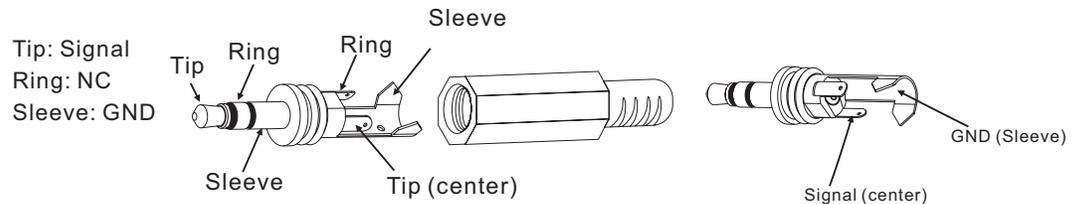

SB-100 Receiver and SB-101C Transmitter The DISTANCE maximum ~ 984 feet (300M)


Note: The External IR jack has voltage on the "Ring" portion of a 3-conductor plug. You must use a 3-conductor plug (aka: stereo plug). Using a 2-conductor plug will short out the power supply. Always make connections with the switcher power off.

ETHERNET & RS-232 SERIAL INTERFACE

ETHERNET SERIAL INTERFACE CONNECT A PC OR CONTROL SYSTEM VERSION COMPATIBLE V2.0

For a complete list of commands, please reference external document extended Ethernet Protocol Instruction Manual.

Ethernet

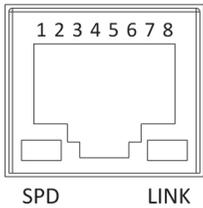

Note:

Control the switcher

SPD: Speed

LINK: Ethernet link

RJ-45 Female 8P-8 Connector

ETHERNET SERIAL INTERFACE

Pin	Ethernet	Reference
1	TXOP	TX +
2	TXON	TX -
3	RXIP	RX +
4	NC	
5	NC	
6	RXIN	RX -
7	NC	
8	GND	

ETHERNET TCP/IP PROTOCOL COMMANDS (ETHERNET / RS-232 CONTROL DRIVER V2.0)

*** The Ethernet port and RS-232 port cannot be used simultaneously. Any connection to the Ethernet Control port will disable serial commands sent to the RS-232 port.***


RS-232 SERIAL INTERFACE CONNECT A PC OR CONTROL SYSTEM. VERSION COMPATIBLE V2.0

For a complete list of commands, please reference external document extended RS-232 Protocol Instruction Manual.

RS-232 Configuration


RS-232 cable is a straight thru cable and not null-modem

Shinybow
Device

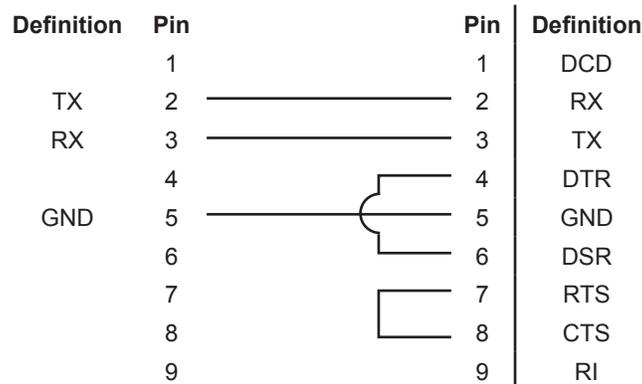

PC

RS-232 Pin Diagram

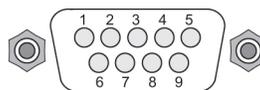

RS-232 SERIAL INTERFACE PROTOCOL COMMANDS (ETHERNET / RS232 CONTROL DRIVER V2.0)

The Shinybow switcher can be controlled via the RS-232 serial control port to allow for interfacing to a PC, or similar third party control system.

The serial communication parameters are 9600 baud, 8 bit, No Parity and 1 stop bit - this is often referred to as 9600 8N1. When the unit recognises a complete command it will perform the requested action - there is no delimiter character required.

LIMITED WARRANTY

PLEASE READ THE FOLLOWING TERMS AND CONDITIONS CAREFULLY BEFORE USING THIS HARDWARE, COMPONENTS AND SOFTWARE PROVIDED BY, THROUGH OR UNDER SHINYBOWUSA, INC (COLLECTIVELY, THE "PRODUCT"). By using installing or using the Product, you unconditionally signify your agreement to these Terms and Conditions. If you do not agree to these Terms and Conditions, do not use the Product and return the Product to SHINYBOWUSA, Inc. at the return address set forth on the Product's packing label at your expense. SHINYBOWUSA, Inc. may modify these Terms and Conditions at anytime, without notice to you.

RESTRICTIONS ON USE OF THE PRODUCT

It is your responsibility to read and understand the installation and operation instructions, both verbal and in writing, provided to you with respect to the Product. You are authorized to use the Product solely in connection with such instructions. Any use of the Product not in accordance with such instructions shall void any warranty pertaining to the Product. Any and all damages that may occur in the use of the Product that is not strictly in accordance with such instructions shall be borne by you and you agree to indemnify and hold harmless SHINYBOWUSA, Inc. from and against any such damage.

The Product is protected by certain intellectual property rights owned by or licensed to SHINYBOWUSA. Any intellectual property rights pertaining to the Product are licensed to you by SHINYBOWUSA, Inc. and/or its affiliates, including any manufacturers or distributors of the Product (collectively, "SHINYBOWUSA") for your personal use only, provided that you do not change or delete any proprietary notices that may be provided with respect to the Product.

The Product is sold to you and any use of any associated intellectual property is deemed to be licensed to you by SHINYBOWUSA for your personal use only. SHINYBOWUSA does not transfer either the title or the intellectual property rights to the Product and SHINYBOWUSA retains full and complete title to the intellectual property rights therein. All trademarks and logos are owned by SHINYBOWUSA or its licensors and providers of the Product, and you may not copy or use them in any manner without the prior written consent of SHINYBOWUSA, which consent may be withheld at the sole discretion of SHINYBOWUSA.

The functionality and usability of the Product is controlled by SHINYBOWUSA, Inc. from its offices within the State of Texas, United States of America. SHINYBOWUSA makes no representation that materials pertaining to the Product are appropriate or available for use in other locations other than the shipping address you provided with respect thereto. You are advised that the Product may be subject to U.S. export controls.

DISCLAIMERS AND LIMITATION OF LIABILITY

SHINYBOWUSA may change or modify the Product at any time, from time to time.

THE PRODUCT IS PROVIDED "AS IS" AND WITHOUT WARRANTIES OF ANY KIND EITHER EXPRESS OR IMPLIED. SHINYBOWUSA DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE PRODUCT'S CORRECTNESS, ACCURACY, RELIABILITY, OR OTHERWISE.

SHINYBOWUSA has no duty or policy to update any information or statements pertaining to the Product and, therefore, such information or statements should not be relied upon as being current as of the date you use the Product. Moreover, any portion of the materials pertaining to the Product may include technical inaccuracies or typographical errors. Changes may be made from time to time without notice with respect to the Product.

TO THE FULLEST EXTENT PERMISSIBLE PURSUANT TO APPLICABLE LAW, SHINYBOWUSA DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. SHINYBOWUSA DOES NOT WARRANT THE ACCURACY, COMPLETENESS OR USEFULNESS OF ANY INFORMATION WITH RESPECT TO THE PRODUCT. SHINYBOWUSA DOES NOT WARRANT THAT THE FUNCTIONS PERTAINING TO THE PRODUCT WILL BE ERROR-FREE, THAT DEFECTS WITH RESPECT TO THE PRODUCT WILL BE CORRECTED, OR THAT THE MATERIALS PERTAINING THERETO ARE FREE OF DEFECTS OR OTHER HARMFUL COMPONENTS. SHINYBOWUSA WILL USE ITS REASONABLE EFFORTS TO CORRECT ANY DEFECTS IN THE PRODUCT UPON TIMELY WRITTEN NOTICE FROM YOU NOT TO EXCEED 10 BUSINESS DAYS AFTER RECEIPT BY YOU OF THE PRODUCT, BUT YOU (AND NOT SHINYBOWUSA) ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR AND CORRECTION THAT WAS CAUSED BY YOU UNLESS OTHERWISE AGREED TO IN A SEPARATE WRITING BY SHINYBOWUSA.

UNDER NO CIRCUMSTANCES, INCLUDING, BUT NOT LIMITED TO, NEGLIGENCE, SHALL SHINYBOWUSA BE LIABLE FOR ANY SPECIAL OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OF, OR THE INABILITY TO USE THE PRODUCT IN ACCORDANCE WITH ITS SPECIFICATIONS, EVEN IF SHINYBOWUSA OR ITS REPRESENTATIVES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL SHINYBOWUSA'S TOTAL LIABILITY TO YOU FROM ALL DAMAGES, LOSSES, AND CAUSES OF ACTION (WHETHER IN CONTRACT, OR OTHERWISE) EXCEED THE AMOUNT YOU PAID TO SHINYBOWUSA, IF ANY, FOR THE PRODUCT.

END OF DOCUMENT

122 Rose Ln. Suite 303 | Frisco, Texas 75034

1-877-SHINY-USA

1-877-744-6987

1-972-377-2508

sales@shinybowusa.com

www.shinybowusa.com

SHINYBOW™ USA
MULTIMEDIA AUDIO AND VISUAL